

# **SQL Battery Monitor Data Manager**

## **User's Guide**

1050 Dearborn Drive  
Columbus, OH 43085  
Tel: (954) 377-7101 Fax: (954) 377-7042  
[www.vertivco.com](http://www.vertivco.com)

590-2094-501A/SL-29409/4200-056 Rev 1.14

The information contained in this document is subject to change without notice and may not be suitable for all applications. While every precaution has been taken to ensure the accuracy and completeness of this document, Vertiv assumes no responsibility and disclaims all liability for damages resulting from use of this information or for any errors or omissions. Refer to other local practices or building codes as applicable for the correct methods, tools, and materials to be used in performing procedures not specifically described in this document.

The products covered by this instruction manual are manufactured and/or sold by Vertiv. This document is the property of Vertiv and contains confidential and proprietary information owned by Vertiv. Any copying, use or disclosure of it without the written permission of Vertiv is strictly prohibited.

#### Notice to Users

Vertiv Corporation reserves the right to make changes to this document without notice to any user or reseller of this product. Vertiv Corporation also reserves the right to substitute or terminate distribution of this document, with no obligation to notify any person or party of such substitutions or terminations.



# Table of Contents

|       |  |      |
|-------|--|------|
| 1.    | SAFETY INFORMATION .....                           | 1-1  |
| 1.1.  | If You Have Questions .....                        | 1-1  |
| 2.    | SYSTEM REQUIREMENTS .....                          | 2-1  |
| 3.    | STRING STATUS SCREEN BUTTONS .....                 | 3-1  |
| 4.    | PROGRAM INSTALLATION AND OPTIONS .....             | 4-1  |
| 4.1.  | Sample Databases .....                             | 4-1  |
| 4.2.  | Installing the BMDM.....                           | 4-1  |
| 4.3.  | Starting the Program.....                          | 4-1  |
| 4.4.  | Configuring BMDM to Run as a Windows Service ..... | 4-2  |
| 4.5.  | Database Notes .....                               | 4-4  |
| 4.6.  | Default Passwords .....                            | 4-5  |
| 4.7.  | Computer Types .....                               | 4-6  |
| 4.8.  | Changing Computer Type.....                        | 4-7  |
| 4.9.  | File Types .....                                   | 4-8  |
| 4.10. | Help Screens .....                                 | 4-8  |
| 5.    | USING CONFIGURE STATION .....                      | 5-1  |
| 5.1.  | BMDM Configuration Wizard .....                    | 5-5  |
| 6.    | SETTING UP THE SQL DATABASE .....                  | 6-1  |
| 6.1.  | Selecting an SQL Database .....                    | 6-1  |
| 6.2.  | Log In to an Existing SQL Database .....           | 6-1  |
| 6.3.  | Creating an SQL Database.....                      | 6-2  |
| 6.4.  | Importing an Access Database into SQL.....         | 6-3  |
| 6.5.  | Deleting an SQL Database Connection .....          | 6-4  |
| 6.6.  | Deleting an SQL Database.....                      | 6-4  |
| 6.7.  | Assigning a Workstation Name .....                 | 6-5  |
| 6.8.  | Running the BMDM as a Service.....                 | 6-7  |
| 6.9.  | Starting MSDE .....                                | 6-7  |
| 6.10. | Backing Up an SQL Database .....                   | 6-8  |
| 6.11. | Restoring an SQL Database.....                     | 6-9  |
| 7.    | USER SPECIFIC SETTINGS .....                       | 7-1  |
| 7.1.  | Setting User Access Rights.....                    | 7-1  |
| 7.2.  | Battery Monitor Login User Box.....                | 7-4  |
| 7.3.  | Changing the User Login Password.....              | 7-4  |
| 8.    | UNDERSTANDING COMPUTER TYPES .....                 | 8-1  |
| 8.1.  | Central Computer .....                             | 8-1  |
| 8.2.  | Local Computer .....                               | 8-2  |
| 8.3.  | Service Computer .....                             | 8-3  |
| 8.4.  | Facility Monitor.....                              | 8-3  |
| 9.    | UNDERSTANDING POLLING, EXTRACTION AND BACKUP.....  | 9-1  |
| 9.1.  | Types of Polling .....                             | 9-1  |
| 9.2.  | Extraction of Data.....                            | 9-1  |
| 9.3.  | Polling and Extraction Notes .....                 | 9-2  |
| 9.4.  | Automatic and Manual Backup .....                  | 9-3  |
| 10.   | UNDERSTANDING SYSTEM INSTALLATION .....            | 10-1 |
| 10.1. | Connecting Using a Local Computer.....             | 10-1 |
| 10.2. | Connecting Using a Central Computer.....           | 10-2 |
| 10.3. | Connecting Using a Service Computer.....           | 10-3 |
| 11.   | UNDERSTANDING HOW DATA IS STORED.....              | 11-1 |
| 11.1. | Data Storage in the MPM .....                      | 11-1 |
| 11.2. | Data Storage in the BDS.....                       | 11-2 |
| 12.   | UNDERSTANDING THE TIME TO GO ALGORITHM.....        | 12-1 |
| 13.   | SELECTING PREFERENCES .....                        | 13-1 |

|         |  |       |
|---------|--|-------|
| 14.     | SETTING COMMUNICATIONS .....   | 14-1  |
| 15.     | SETTING UP AN EMAIL ACCOUNT .....                                    | 15-1  |
| 15.1.   | Testing Email.....   | 15-2  |
| 16.     | SETTING UP A NEW MPM OR BDS SYSTEM.....                              | 16-1  |
| 16.1.   | System Setup: General Notes .....                                    | 16-1  |
| 16.2.   | System Setup: Workstation.....                                       | 16-2  |
| 16.3.   | System Setup: Customer .....   | 16-2  |
| 16.4.   | System Setup: Location .....   | 16-3  |
| 16.5.   | System Setup: Battery .....  | 16-4  |
| 16.6.   | System Setup: String .....   | 16-6  |
| 16.7.   | System Setup: Link.....  | 16-7  |
| 16.8.   | System Setup: Reporting .....  | 16-9  |
| 16.8.1. | Using a Cell Phone for Text Messaging .....                          | 16-11 |
| 16.9.   | System Setup: Contact List.....                                      | 16-11 |
| 16.10.  | System Setup: Password .....   | 16-14 |
| 17.     | SYNCHRONIZING USING CHECK SETTINGS .....                             | 17-1  |
| 17.1.   | Connecting With a Service Computer .....                             | 17-3  |
| 18.     | CHECK SETTINGS SCREENS .....   | 18-1  |
| 18.1.   | Check Settings Screens in Controller .....                           | 18-11 |
| 19.     | PROGRAMMING BATTERY SETUP FOR THE MPM .....                          | 19-1  |
| 19.1.   | Battery Setup: General (MPM).....                                    | 19-2  |
| 19.2.   | Battery Setup: Parameters (MPM).....                                 | 19-4  |
| 19.3.   | Battery Setup: Test Parameters (MPM).....                            | 19-5  |
| 19.4.   | Battery Setup: Float Alarms (MPM) .....                              | 19-6  |
| 19.5.   | Battery Setup: Discharge (MPM) .....                                 | 19-8  |
| 19.6.   | Battery Setup: Digital Input (MPM).....                              | 19-10 |
| 19.7.   | Battery Setup: Digital Output (MPM) .....                            | 19-11 |
| 19.8.   | Battery Setup: LGS (MPM).....  | 19-12 |
| 20.     | PROGRAMMING BATTERY SETUP FOR THE BDS .....                          | 20-1  |
| 20.1.   | Battery Setup: General (BDS) .....                                   | 20-2  |
| 20.2.   | Battery Setup: Parameters (BDS) .....                                | 20-4  |
| 20.3.   | Battery Setup: Test Parameters (BDS) .....                           | 20-8  |
| 20.4.   | Battery Setup: Float Alarms (BDS).....                               | 20-10 |
| 20.5.   | Battery Setup: System (BDS) .....                                    | 20-13 |
| 20.6.   | Battery Setup: Discharge (BDS).....                                  | 20-15 |
| 20.7.   | Battery Setup: Digital Input (BDS) .....                             | 20-17 |
| 20.8.   | Battery Setup: Digital Output (BDS).....                             | 20-18 |
| 20.9.   | Battery Setup: LGS (BDS) .....                                       | 20-19 |
| 21.     | SELECTING THE DATABASE RANGE.....                                    | 21-1  |
| 22.     | CONNECTING TO A BATTERY LOCATION .....                               | 22-1  |
| 22.1.   | Connecting via Modem .....   | 22-1  |
| 22.2.   | Modem Hang Up .....  | 22-1  |
| 22.3.   | Connecting via Network .....   | 22-1  |
| 22.4.   | Connecting via RS-232 Local Port.....                                | 22-1  |
| 23.     | VIEWING BATTERY AND MONITOR STATUS .....                             | 23-1  |
| 23.1.   | Opening and Saving a Database .....                                  | 23-1  |
| 23.2.   | String Status Screen .....   | 23-2  |
| 23.3.   | Report Alarm Event Screens .....                                     | 23-4  |
| 23.4.   | Summary Screen.....  | 23-5  |
| 23.5.   | Historical Events Screen.....  | 23-5  |
| 23.6.   | String View Screens .....  | 23-6  |
| 23.7.   | Cell Voltage (String View Screen) .....                              | 23-7  |
| 23.8.   | Cell Resistance and Intercell Resistance (String View Screens) ..... | 23-8  |
| 23.9.   | Historical Graphs .....  | 23-10 |
| 23.10.  | Cell Voltage Box .....   | 23-11 |
| 23.11.  | Trend Analysis.....  | 23-12 |

|          |  |       |
|----------|--|-------|
| 23.12.   | Alarm Data .....                                   | 23-13 |
| 23.13.   | Alarm Acknowledge .....                            | 23-15 |
| 23.14.   | Discharge Data .....                               | 23-15 |
| 23.14.1. | Discharge Replay .....                             | 23-18 |
| 23.14.2. | Discharge Curve .....                              | 23-19 |
| 23.14.3. | Summary .....                                      | 23-21 |
| 23.15.   | Cell Memo / String Memo .....                      | 23-22 |
| 24.      | USING THE REPORT GENERATOR.....                    | 24-1  |
| 24.1.    | Detail Cell Voltage Report .....                   | 24-1  |
| 24.2.    | Detail Cell Resistance Report .....                | 24-3  |
| 24.3.    | Detail Intercell Resistance Report .....           | 24-4  |
| 24.4.    | Trend Cell Voltage Report.....                     | 24-5  |
| 24.5.    | Trend Cell Resistance Report .....                 | 24-6  |
| 24.6.    | Trend Intercell Report .....                       | 24-7  |
| 24.7.    | Trend Overall Voltage Report .....                 | 24-8  |
| 24.8.    | Trend Temperature Report .....                     | 24-9  |
| 24.9.    | Trend Intertier Report.....                        | 24-9  |
| 24.10.   | Discharge Report .....                             | 24-10 |
| 24.11.   | Alarm Report .....                                 | 24-11 |
| 24.12.   | Summary Report.....                                | 24-12 |
| 25.      | USING THE PREVIEW SCREENS .....                    | 25-1  |
| 25.1.    | Saving a Report in Archive (ZRF) Format .....      | 25-2  |
| 25.2.    | Printing a Report.....                             | 25-2  |
| 25.3.    | Opening an Archive File.....                       | 25-2  |
| 25.4.    | Archive Reader Program .....                       | 25-2  |
| 26.      | USING THE WEB REPORT GENERATOR .....               | 26-1  |
| 26.1.    | Setting Up the Web Report.....                     | 26-1  |
| 26.2.    | Generating an Executive Summary Report.....        | 26-3  |
| 27.      | CALIBRATION .....                                  | 27-1  |
| 28.      | MPM DIAGNOSTICS .....                              | 28-1  |
| 28.1.    | Rebooting and Power Up Diagnostics (MPM) .....     | 28-1  |
| 28.2.    | Self Test (MPM).....                               | 28-2  |
| 28.3.    | Load Module (MPM).....                             | 28-3  |
| 28.4.    | DIP Switch (MPM).....                              | 28-4  |
| 28.5.    | Indicator (MPM).....                               | 28-5  |
| 28.6.    | Digital Port (MPM) .....                           | 28-5  |
| 28.7.    | Memory (MPM) .....                                 | 28-6  |
| 28.8.    | Contacts (MPM) .....                               | 28-7  |
| 28.9.    | Intertier (MPM) .....                              | 28-8  |
| 29.      | BDS DIAGNOSTICS.....                               | 29-1  |
| 29.1.    | Rebooting and Power Up Diagnostics (BDS).....      | 29-1  |
| 29.2.    | Self Test (BDS) .....                              | 29-1  |
| 29.3.    | Load Module (BDS) .....                            | 29-3  |
| 29.4.    | DIP Switch (BDS) .....                             | 29-5  |
| 29.5.    | Indicator (BDS) .....                              | 29-6  |
| 29.6.    | Digital Port (BDS).....                            | 29-6  |
| 29.7.    | Memory (BDS).....                                  | 29-7  |
| 29.8.    | Contacts (BDS).....                                | 29-8  |
| 29.9.    | Intertier (BDS).....                               | 29-8  |
| 29.10.   | Communication Error (BDS).....                     | 29-9  |
| 29.11.   | Resistance Testing Multiple DCM Units .....        | 29-10 |
| 30.      | UPGRADES.....                                      | 30-1  |
| 31.      | COMMISSIONING ASSISTANT .....                      | 31-1  |
| 31.1.    | Starting the Assistant for a New String .....      | 31-1  |
| 31.2.    | Monitor Pre-Power Check List.....                  | 31-2  |
| 31.3.    | Starting the Assistant for an Existing String..... | 31-3  |

|          |   |       |
|----------|---|-------|
| 31.4.    | Completing the Commissioning Assistant..... | 31-4  |
| 31.4.1.  | Commissioning Agent Screen .....            | 31-4  |
| 31.4.2.  | Equipment Owner Screen .....                | 31-5  |
| 31.4.3.  | Post Power Check Screen .....               | 31-5  |
| 31.4.4.  | Send Battery Setup Screen.....              | 31-6  |
| 31.4.5.  | Check Settings Screen .....                 | 31-7  |
| 31.4.6.  | Serial Numbers Screen .....                 | 31-7  |
| 31.4.7.  | Check Cell Voltage Screen.....              | 31-8  |
| 31.4.8.  | Check Overall Voltage Screen.....           | 31-8  |
| 31.4.9.  | Check Intertier Screen .....                | 31-9  |
| 31.4.10. | Base Data - Cell Voltage Screen.....        | 31-9  |
| 31.4.11. | Check Float Current Screen .....            | 31-10 |
| 31.4.12. | Check Temperature Screen .....              | 31-10 |
| 31.4.13. | Check Discharge Current Screen.....         | 31-11 |
| 31.4.14. | Check Test Current Screen .....             | 31-11 |
| 31.4.15. | Check Intercell Screen (BDS Only).....      | 31-13 |
| 31.4.16. | Base Data - Cell Resistance Screen .....    | 31-13 |
| 31.4.17. | Report Screen .....                         | 31-14 |
| 31.4.18. | Preventive Maintenance Report Form .....    | 31-15 |
| 31.5.    | Emailing a Report.....                      | 31-16 |
| 31.6.    | Retrieving a Commissioning Report.....      | 31-16 |
| 31.7.    | Printing a Commissioning Report .....       | 31-16 |
| 32.      | ERROR CODES .....                           | 32-1  |

# Table of Figures

**IMPORTANT NOTE:** The drawings or figures in this manual may not be the most recent revision and are included for reference only. Refer to the Engineering Drawing Package included with your system for the newest drawings.

Drawings or figures in this manual may be for reference only or superseded by later drawings. For the latest information, refer to the drawings supplied with your system.

|  |      |
|--|------|
| Figure 1. BMDM Opening Screen .....                                    | 4-1  |
| Figure 2. AlwaysUp Program Compatibility Assistant .....               | 4-2  |
| Figure 3. BMDM and AlwaysUp Running as a Service.....                  | 4-3  |
| Figure 4. BMDM is Running as a Service.....                            | 4-3  |
| Figure 5. Select Computer Type.....                                    | 4-6  |
| Figure 6. Config3.MPM File .....                                       | 4-7  |
| Figure 7. Configure Station - Monitor Connection Type .....            | 5-1  |
| Figure 8. Configure Station - Select Serial Port .....                 | 5-1  |
| Figure 9. Configure Station - Select Number of Modems .....            | 5-2  |
| Figure 10. Configure Station - Set Modem Port.....                     | 5-2  |
| Figure 11. Configure Station - Set Dial Prefix .....                   | 5-2  |
| Figure 12. Configure Station - Set Station Phone Number.....           | 5-3  |
| Figure 13. Configure Station - Remote Reporting.....                   | 5-3  |
| Figure 14. Configure Station - Remote Reporting Types .....            | 5-3  |
| Figure 15. Configure Station - Email Setup .....                       | 5-4  |
| Figure 16. Configure Station - Select Printer .....                    | 5-4  |
| Figure 17. Configure Station - Set Temperature.....                    | 5-4  |
| Figure 18. Configure Station - Information.....                        | 5-5  |
| Figure 19. BMDM Configuration Wizard Opening Screen.....               | 5-5  |
| Figure 20. SQL Server Login .....                                      | 6-1  |
| Figure 21. SQL Database Manager and SQL Connection Wizard - Name ..... | 6-2  |
| Figure 22. SQL Connection Wizard - Database Name.....                  | 6-2  |
| Figure 23. SQL Database Manager and Server Login.....                  | 6-3  |
| Figure 24. Importing a File into an SQL Database .....                 | 6-3  |
| Figure 25. System Setup - Workstation.....                             | 6-5  |
| Figure 26. Set Workstation and Workstation Setup .....                 | 6-6  |
| Figure 27. BMDM Service Manager .....                                  | 6-7  |
| Figure 28. SQL Backup Setup .....                                      | 6-8  |
| Figure 29. SQL Backup Setup .....                                      | 6-9  |
| Figure 30. SQL Backup Setup .....                                      | 6-9  |
| Figure 31. Security .....  | 7-1  |
| Figure 32. User Access Rights .....                                    | 7-2  |
| Figure 33. Edit User .....   | 7-2  |
| Figure 34. String Access Form .....                                    | 7-3  |
| Figure 35. Battery Monitor Login User .....                            | 7-4  |
| Figure 36. Computer Types: Backup, Polling and Extraction Table .....  | 9-4  |
| Figure 37. Preferences .....   | 13-1 |
| Figure 38. Communication Setup .....                                   | 14-1 |
| Figure 39. Email Setup .....   | 15-1 |
| Figure 40. Test Email .....  | 15-2 |
| Figure 41. System Setup - Workstation.....                             | 16-2 |
| Figure 42. System Setup - Customer .....                               | 16-2 |
| Figure 43. System Setup - Location .....                               | 16-3 |
| Figure 44. System Setup - Battery.....                                 | 16-4 |



|  |       |
|--|-------|
| Figure 45. System Setup - String (MPM shown).....                    | 16-6  |
| Figure 46. System Setup - Link.....                                  | 16-7  |
| Figure 47. System Setup - Reporting.....                             | 16-9  |
| Figure 48. System Setup - Contact List.....                          | 16-11 |
| Figure 49. System Setup - Contact Information.....                   | 16-12 |
| Figure 50. System Setup - Password.....                              | 16-14 |
| Figure 51. Connection Error Message.....                             | 17-2  |
| Figure 52. Check Settings - General (MPM / BDS).....                 | 18-1  |
| Figure 53. Check Settings - Parameters (MPM).....                    | 18-2  |
| Figure 54. Check Settings - Parameters (BDS).....                    | 18-2  |
| Figure 55. Check Settings - Test Parameters (MPM / BDS).....         | 18-3  |
| Figure 56. Check Settings - Float Alarms (MPM).....                  | 18-4  |
| Figure 57. Check Settings - Float Alarms (BDS).....                  | 18-4  |
| Figure 58. Check Settings - System (BDS).....                        | 18-5  |
| Figure 59. Check Settings - Discharge (MPM / BDS).....               | 18-6  |
| Figure 60. Check Settings - Digital Input (MPM).....                 | 18-7  |
| Figure 61. Check Settings - Digital Input (BDS).....                 | 18-7  |
| Figure 62. Check Settings - Digital Output (MPM).....                | 18-8  |
| Figure 63. Check Settings - Digital Output (BDS/256).....            | 18-8  |
| Figure 64. Check Settings - Calibration (MPM).....                   | 18-9  |
| Figure 65. Check Settings - Calibration (BDS).....                   | 18-9  |
| Figure 66. Check Settings - LGS (MPM / BDS).....                     | 18-10 |
| Figure 67. Check Settings in Controller - Typical Screen (BDS).....  | 18-11 |
| Figure 68. Battery Setup - General (MPM).....                        | 19-2  |
| Figure 69. Battery Setup - Parameters (MPM).....                     | 19-4  |
| Figure 70. Battery Setup - Test Parameters (MPM).....                | 19-5  |
| Figure 71. Battery Setup - Float Alarms (MPM).....                   | 19-6  |
| Figure 72. Cell Resistance Alarm Levels Setup (MPM).....             | 19-7  |
| Figure 73. Battery Setup - Discharge (MPM).....                      | 19-8  |
| Figure 74. Battery Setup - Digital Input (MPM).....                  | 19-10 |
| Figure 75. Battery Setup - Digital Output (MPM).....                 | 19-11 |
| Figure 76. Battery Setup - LGS (MPM).....                            | 19-12 |
| Figure 77. Battery Setup - General (BDS).....                        | 20-2  |
| Figure 78. Battery Setup - Parameters (BDS-256).....                 | 20-4  |
| Figure 79. BDS Configuration Data for Setup Files.....               | 20-5  |
| Figure 80. BDS Configuration Data for Setup Files (continued).....   | 20-6  |
| Figure 81. BDS Configuration Data for Setup Files (continued).....   | 20-7  |
| Figure 82. Battery Setup - Test Parameters (BDS).....                | 20-8  |
| Figure 83. Battery Setup - Float Alarms (BDS).....                   | 20-10 |
| Figure 84. Cell Resistance Alarm Levels Setup (BDS).....             | 20-11 |
| Figure 85. Input Alarm Level (Intertier Resistance Alarm Level)..... | 20-12 |
| Figure 86. Battery Setup - Thermal Runaway (BDS).....                | 20-13 |
| Figure 87. Battery Setup - Discharge (BDS).....                      | 20-15 |
| Figure 88. Battery Setup - Digital Input (BDS-256).....              | 20-17 |
| Figure 89. Battery Setup - Digital Output (BDS-256).....             | 20-18 |
| Figure 90. Battery Setup - LGS (BDS).....                            | 20-19 |
| Figure 91. Select Database Range.....                                | 21-1  |
| Figure 92. String Status.....  | 23-2  |
| Figure 93. String Status Viewing Selection.....                      | 23-3  |
| Figure 94. Strings in Alarm.....                                     | 23-3  |
| Figure 95. Report Alarm Event.....                                   | 23-4  |
| Figure 96. Summary (Battery Sites).....                              | 23-5  |
| Figure 97. Historical Events.....                                    | 23-5  |
| Figure 98. String View - Cell Voltages (MPM shown).....              | 23-7  |
| Figure 99. String View - Cell Resistance (MPM shown).....            | 23-8  |
| Figure 100. String View - Intercell Resistances (BDS only).....      | 23-9  |

|   |       |
|---|-------|
| Figure 101. History Options and Record Date/Time Box .....            | 23-10 |
| Figure 102. Cell Voltage Box.....                                     | 23-11 |
| Figure 103. Trend Menu.....   | 23-12 |
| Figure 104. Trend - Cell Voltage (Typical of all Trend screens) ..... | 23-12 |
| Figure 105. Current Alarm List.....                                   | 23-13 |
| Figure 106. Historical Alarm List.....                                | 23-14 |
| Figure 107. Historical Alarm Selection .....                          | 23-14 |
| Figure 108. All Discharges (MPM shown).....                           | 23-16 |
| Figure 109. Discharge Replay .....                                    | 23-18 |
| Figure 110. Discharge Curve.....                                      | 23-19 |
| Figure 111. Curve Option.....   | 23-20 |
| Figure 112. Summary (Discharges).....                                 | 23-21 |
| Figure 113. Cell Memo and String Memo.....                            | 23-22 |
| Figure 114. Detail Cell Voltage Setup.....                            | 24-1  |
| Figure 115. Detail Cell Resistance Setup .....                        | 24-3  |
| Figure 116. Detail Intercell Resistance Setup.....                    | 24-4  |
| Figure 117. Trend Cell Voltage Setup.....                             | 24-5  |
| Figure 118. Trend Cell Resistance Setup .....                         | 24-6  |
| Figure 119. Trend Intercell Resistance Setup.....                     | 24-7  |
| Figure 120. Trend Overall Voltage Setup.....                          | 24-8  |
| Figure 121. Trend Temperature Setup.....                              | 24-9  |
| Figure 122. Trend Intertier Setup .....                               | 24-9  |
| Figure 123. Discharge Setup .....                                     | 24-10 |
| Figure 124. Alarms Setup.....   | 24-11 |
| Figure 125. Summary Setup .....                                       | 24-12 |
| Figure 126. Preview (Typical Screen) .....                            | 25-1  |
| Figure 127. Preview (Discharge Report) .....                          | 25-1  |
| Figure 128. Technician Detail Summary Report Setup .....              | 26-1  |
| Figure 129. Technician Report - Discharges Area .....                 | 26-2  |
| Figure 130. Auto Generating Technician Detail Summary Report .....    | 26-3  |
| Figure 131. Calibration Setup (MPM).....                              | 27-1  |
| Figure 132. Calibration Setup (BDS) .....                             | 27-1  |
| Figure 133. Diagnostics - Self Test (MPM) .....                       | 28-2  |
| Figure 134. Diagnostics - Load Module - Test Current (MPM).....       | 28-3  |
| Figure 135. Diagnostics - DIP Switch (MPM) .....                      | 28-4  |
| Figure 136. Diagnostics - Indicator (MPM) .....                       | 28-5  |
| Figure 137. Diagnostics - Digital Port (MPM).....                     | 28-5  |
| Figure 138. Diagnostics - Memory (MPM).....                           | 28-6  |
| Figure 139. Diagnostics - Alarm Contacts (MPM).....                   | 28-7  |
| Figure 140. Diagnostics - Intertier (MPM).....                        | 28-8  |
| Figure 141. Diagnostics - Self Test (BDS).....                        | 29-1  |
| Figure 142. Diagnostics - Load Module - Test Current (BDS) .....      | 29-3  |
| Figure 143. Diagnostics - Load Module - CT Polarity (BDS).....        | 29-4  |
| Figure 144. Diagnostics - DIP Switch (BDS).....                       | 29-5  |
| Figure 145. Diagnostics - Indicator (BDS).....                        | 29-6  |
| Figure 146. Diagnostics - Digital Port (BDS) .....                    | 29-6  |
| Figure 147. Diagnostics - Memory (BDS) .....                          | 29-7  |
| Figure 148. Diagnostics - Alarm Contacts (BDS) .....                  | 29-8  |
| Figure 149. Diagnostics - Intertier (BDS) .....                       | 29-8  |
| Figure 150. Diagnostics - Communication Error (BDS) .....             | 29-9  |
| Figure 151. Select DCM.....   | 29-10 |
| Figure 152. Setup Menu Showing Upgrade Options (BDS).....             | 30-1  |
| Figure 153. Commissioning Assistant Welcome.....                      | 31-1  |
| Figure 154. Monitor Pre-Power Screen (typical).....                   | 31-2  |
| Figure 155. Monitor Pre-Power Load Cable Help Screen .....            | 31-2  |
| Figure 156. Open Commissioning Assistant .....                        | 31-3  |

|   |       |
|---|-------|
| Figure 157. Commissioning Agent (Comm Asst) .....   | 31-4  |
| Figure 158. Equipment Owner (Comm Asst).....  | 31-5  |
| Figure 159. Post Power Check Screen (BDS only) (Comm Asst).....   | 31-5  |
| Figure 160. Send Battery Setup (Comm Asst) .....  | 31-6  |
| Figure 161. Check Settings (Comm Asst) .....  | 31-7  |
| Figure 162. Serial Numbers (Comm Asst) .....  | 31-7  |
| Figure 163. Check Cell Voltage (Comm Asst).....   | 31-8  |
| Figure 164. Check Overall Voltage (Comm Asst) .....   | 31-8  |
| Figure 165. Check Intertier (Comm Asst) .....   | 31-9  |
| Figure 166. Base Data - Cell Voltage (Comm Asst) .....  | 31-9  |
| Figure 167. Check Float Current (Comm Asst).....  | 31-10 |
| Figure 168. Check Temperature (Comm Asst).....  | 31-10 |
| Figure 169. Check Discharge Current (Comm Asst).....  | 31-11 |
| Figure 170. Check Test Current (Comm Asst).....   | 31-11 |
| Figure 171. Check Intercell (Comm Asst).....  | 31-13 |
| Figure 172. Base Data - Cell Resistance (Comm Asst).....  | 31-13 |
| Figure 173. Save Base Line and Send Thresholds Data – Cell/Intertier/Inter-Cell Resistance (Comm Asst)<br>..... | 31-14 |
| Figure 174. Report (Comm Asst) .....  | 31-14 |
| Figure 175. Report (Preventive Maintenance) Form .....  | 31-15 |

## **1. Safety Information**

- You must read and understand these safety precautions and those elsewhere in this manual before installing, powering up or using the system.
- Except as explained in this manual, do not attempt to service Vertiv equipment yourself. Opening the equipment may expose you to dangerous voltages. Refer servicing beyond that described in this manual to authorized personnel.
- Do not allow liquids or moisture to get into the equipment. If liquid gets into the equipment, unplug it immediately and contact an authorized service center or Vertiv.
- The equipment must have adequate ventilation. Do not block equipment ventilation openings.
- Do not exceed equipment voltage, power ratings or capabilities.
- When grounding is required, make sure the equipment is properly grounded.
- Do not let unauthorized persons operate the equipment.
- Do not energize the cabinet or any component with 115VAC (or 230VAC if applicable) or battery voltage until after the installation is complete.
- Use of this product in a manner not specified could compromise the designed-in safety of this product.
- High voltage or current may be present inside the equipment and on the equipment terminals. Only qualified personnel should perform the operations described in this manual. Calibration must be performed only by technically qualified persons. Observe electrical safety precautions when removing and installing equipment covers, when connecting leads, and when making adjustments.
- Proper installation and testing are essential to the correct functioning of your system. If you have any questions, contact Vertiv.
- This manual describes the general installation and use of the system. If your system has features or accessories not described in this manual, contact Vertiv.
- Drawings in this manual may be for reference only or superseded by later drawings. For the latest information, refer to the drawings supplied with your system.

### **1.1. If You Have Questions**

If you have any questions about the installation or testing of your system, contact Vertiv at (954) 377-7101 or fax (954) 377-7042. Request BMDM, MPM or BDS assistance.

## **2. System Requirements**

These are the minimum requirements for the BMDM (Battery Monitor Data Manager) program.

Microsoft Windows™ XP, 2000, Windows 7, or 8.

Pentium4™ 1GHz or higher microprocessor.

128Mb of memory for Windows 2000. 256Mb for Windows XP.

150Mb of hard disk space for program installation. 1Gb of space for data storage.

CD drive.

A typical MPM or BDS system requires these manuals.

MPM-100 Monitor Product Description Guide, 4200-062

BDS-40 Monitor Product Description Guide, 4200-063

BDS-256 Monitor Product Description Guide, 4200-064

Plus, a typical MPM system requires these manuals.

SQL Battery Monitor Data Manager User's Guide, 4200-056 (this book)

MPM-100 Installation Instructions, 4200-034

MPM-100 Commissioning Procedure with Acceptance Test Report, 4200-036 (optional)

UPS (uninterruptible power supply) manufacturer's instruction manual (if a UPS is used)

Plus, a typical BDS system requires these manuals.

SQL Battery Monitor Data Manager User's Guide, 4200-056 (this book)

BDS-256 Battery Diagnostic System with BDS Controller Installation Instructions, 4200-028  
or BDS-256XL Battery Diagnostic System Installation Instructions, 4200-066  
or BDS-40 Battery Diagnostic System Installation Instructions, 4200-045

BDS-256 Commissioning Procedure with Acceptance Test Report, 4200-009 (optional)  
or BDS-40 Commissioning Procedure with Acceptance Test Report, 4200-057 (optional)

UPS (uninterruptible power supply) manufacturer's instruction manual (if a UPS is used with the system)

BDS Quick Start Cards, 4200-026 (optional)

### 3. String Status Screen Buttons

This page describes buttons on the String Status screen, which appears when the BMDM (Battery Monitor Data Manager) program starts. Each button name or function is listed in the index for ready reference.

The screenshot shows the 'String Status' window of the Battery Monitor Data Manager. The window title is 'Battery Monitor Data Manager for Central Computer : sample-nw setup for 2vax.MDB'. The menu bar includes File, Setup, View, Reports, Sort, and Help. The toolbar contains several icons, each with a callout box explaining its function:

- Open / Close / Back Up Database (File|selection)**: Open or close a file or back up an Access database.
- Set Up Communication (Setup|Communication)**: Define ports, modems, network timeout. Force direct connect. Disable auto polling.
- Show All Alarm Events**: Display the Report Alarm Event dialog boxes.
- Indicates Central, Local or Service computer**: A button that indicates the computer type.
- Set Up System (Alternate is Setup|System)**: Set up the system.
- Historical Events (View|Historical Events)**: List reported events and the history of one or all strings.
- Extract All Data**: Get data from all strings in the system.
- Connection**: Connect to the selected string.
- Summary**: Displays status for all strings and monitors.
- Summary Report**: Create a report for the entire system.
- Call All Modem Strings**: Poll all strings attached via modem.
- Hang Up**: Disconnect the modem.

The main area of the window displays a table with the following data:

| String ID | Customer Name | Battery Name | String Name | String Status | Monitor Status | Update Date/Time      |
|-----------|---------------|--------------|-------------|---------------|----------------|-----------------------|
| 1         | ALBERCORP     | BATTERY 8x40 | STRING 1    | Good          | Active         | 3/23/2004 9:35:39 AM  |
| 2         | ALBERCORP     | BATTERY 8x40 | STRING 2    | Good          | Active         | 3/19/2004 10:21:24 AM |
| 3         | ALBERCORP     | BATTERY 8x40 | STRING 3    | Alarm         | Active         | 3/19/2004 10:21:35 AM |

Below the table are several input fields: Polling Site, Customer, Location, Battery, and String. At the bottom, there are fields for Communication Status (Idle) and Modem Status.


A callout box at the bottom center states: 'This portion of the screen displays communication information, polling status, connection names, and error status'.

**String Status screen** –String Status appears when the BMDM program starts. It lists the strings in the database and their last known status.

**String View screen** –String View shows the cells in a string as a bar graph, table or both. It appears after a string is selected on the String Status screen and computer to monitor communication is established. You can view a string off-line by selecting View|Offline.

## 4. Program Installation and Options

When installing the BMDM, you will choose one of two versions: BMDM SQL Client or BMDM SQL Server. Both offer new menu items to support the implementation of SQL database connections.

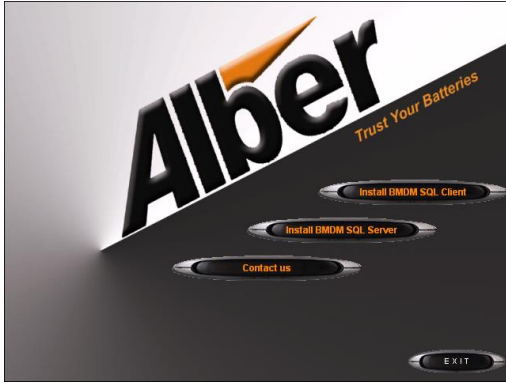

BMDM SQL Client installs no server components; a server installation must exist. BMDM SQL Server installs an MSDE SQL server. You may install this version onto a centralized server for use by workstations. Both versions can manage Microsoft Access™ and SQL databases. Before installing, decide which version you require: BMDM SQL Client for an existing SQL server; BMDM SQL Server to install an SQL server.

Figure 1. BMDM Opening Screen

### 4.1. Sample Databases

BMDM sample databases provide strings and data you may use to test button actions, observe screens, create graphs, and generate reports.

**Sample Database for Access** - When using Access, at BMDM start-up a message asks, "Do you want to load a sample database?" Click Yes if you want to explore the BMDM. Clicking Yes opens the **AlberDemo.mdb** Access database. If the "load a sample database" message does not appear, you may enable it on Setup|Preferences. You may also open the sample file by selecting File|Open|Access DB|AlberDemo.mdb.

**Sample Database for SQL** - The **RemoteDemo** for BMDM SQL Client and BMDM SQL Server connects to a sample database maintained on a server at [www.vertivco.com](http://www.vertivco.com). The **AlberDemo** is for BMDM SQL Server only; when MSDE is installed, this sample database installs locally. To connect to a sample database, select File|Open|SQL DB. At the SQL Connection drop-down list, select AlberDemo or RemoteDemo.

### 4.2. Installing the BMDM

Before installing the BMDM program, close all other programs. To install the program, insert the CD into the computer and wait for autorun. If the CD does not run, select Start|Run from the Windows desktop. At the Run box, type `d:\launch` (or other drive letter) and follow the instructions.

### 4.3. Starting the Program

To start the Battery Monitor Data Manager, double-click the BMDM icon on the desktop. The first time the program runs, "Do you want to load a sample database?" appears. Click No if you want to use the Configure Station screens. Refer to *Sample Databases* and *Using Configure Station*.

#### 4.4. Configuring BMDM to Run as a Windows Service

The BMDM can be run as a service so the application will continue to run in the background even after the user logs off Windows. The following describes how to configure the BMDM software as a service.

**Note:** the BMDM uses the "AlwaysUp" third party application to run the BMDM as a service. It is automatically installed with the BMDM software package starting with versions 5.86 and SQL 6.33 or later.

To Setup the BMDM as a service using the "AlwaysUp" application, do the following:

1. Check if your operating system is 32 or 64 bit.
2. Click on the appropriate shortcut to install the BMDM Service
  - a. For 32-bit operating system, click on **Start, All Programs, Alber, MPM Manager**, then click on the shortcut **Install BMDM Service 32-Bit**.
  - b. For 64-bit operating system, click on **Start, All Programs, Alber, MPM Manager**, then click on the shortcut **Install BMDM Service 64-Bit**.

**Note:** Depending on your operation system, this message may appear. Click on **This program installed correctly** to finish the installation.

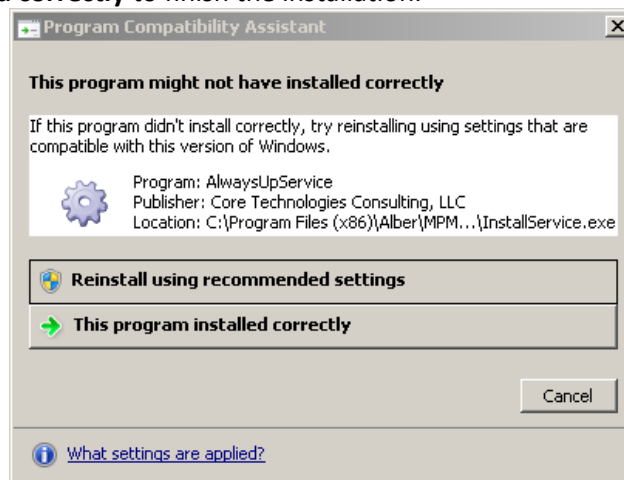


Figure 2. AlwaysUp Program Compatibility Assistant

3. Type Windows key + R and enter **Services.msc** and check for the **BMDMService (managed by AlwaysUpService)** entry. Right click the entry and click **Start** to start the service.



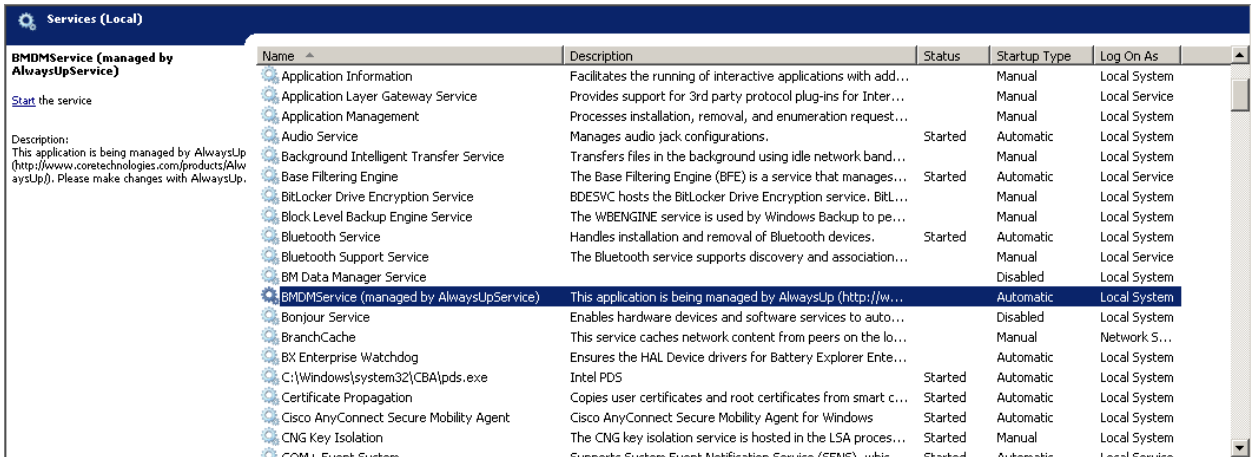


Figure 3. BMDM and AlwaysUp Running as a Service

4. Type **Ctrl+Shift+Esc** to open the task manager. Check for the **BMDM.exe \*32** under the Processes tab. This confirms that the BMDM is running as a service.

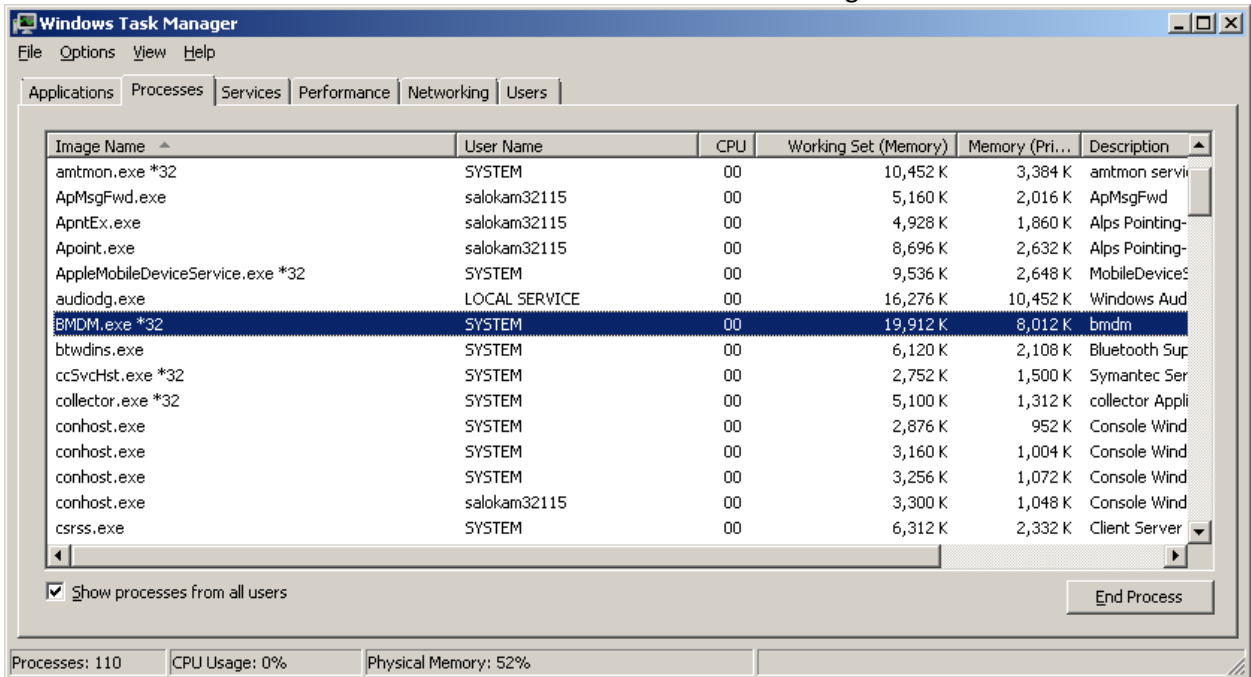


Figure 4. BMDM is Running as a Service

5. To launch the BMDM user interface, click **Start, All Programs, Alber, MPM Manager**, then click on the shortcut **Run BMDM Service in Session**.

**Note:** When using the BMDM as a service, use only **Run BMDM Service in Session** to launch BMDM. Attempting to run the BMDM using the regular icon shortcut will cause issues such as having two instances of BMDM.exe running at the same time or shared violation errors.

6. It is recommended to replace the regular BMDM shortcut on the desktop with the **Run BMDM Service in Session** shortcut to prevent the user from launching the BMDM incorrectly.

#### **4.5. Database Notes**

A BMDM database file contains cell and battery readings and setup data. Depending on whether you are using Access or SQL, the BMDM program stores MPM and BDS data in an Access-based **.MDB** file or SQL-based **.MDF** and **.LDF** files.

**Access initial database file** - During installation, the BMDM places the empty Access database file **mpm-db3.mdb** under Program Files\Alber\MPM Manager\Database or in another folder selected at time of installation. This empty default database opens when you have not previously opened another database.

**Creating a new Access database** - You may create a new Access database using File|New.

**Deleting an Access database** - You cannot delete an Access MDB database file from within the BMDM program. To delete an Access database, use standard Windows procedures to delete the MDB file from the folder where it is saved. The file is typically located at Program Files/Alber/MPM Manager/Database.

**SQL database files** - You may use the Connection Wizard or File|Open|SQL-DB|Manage to make a new SQL database. A SQL database has two file components: MDF and LDF. When you type a new database name, the name is automatically used in two files: **BMDMfilename.mdf** and **BMDMfilename\_log.ldf**. These files are saved by default under Program Files\Microsoft SQL Server\MSSQL\Data or in another folder in which your MSDE is directed to save. Refer to the section *Creating an SQL Database* for complete details.

Because databases may contain unrecoverable battery data, regularly back up the MDB or MDF and LDF files to another computer to help prevent data loss. Refer to *Automatic and Manual Backup*.

## 4.6. Default Passwords

The BMDM program initially has one default password, `alber`, which accesses all areas of the program and can be changed by the user. It is important to note that different passwords may be selected for various program areas. New passwords may be alphanumeric and are not case sensitive.

Additional passwords may be needed when using options. For example, when logging onto a server or setting up an email account for alarm notification, the password is determined externally and is not changeable using the BMDM. Passwords may also be selected for each user and for access to strings. Be certain to record new passwords for reference. If lost, they cannot be retrieved, and you will have to contact Vertiv for an unlock code.

The password needed for the SQL Server Login and the SQL Connection Wizard boxes is either the default `alber` or the password set by the system administrator. The BMDM program cannot change the user names or passwords needed on these dialog boxes. Optionally, on some SQL Server Login and the SQL Connection Wizard boxes, you may click the **Use Windows Authentication** check box to use the user name and password logged in to the computer.

**System Setup Password** - A password for System Setup is used when Setup|Security is set to Default. This password, stored in the BMDM database, may be eight characters long. To change it, from the String Status screen, select Setup|System|Password. Refer to *System Setup: Password*.

**Battery Setup Password** - A password for the Battery Setup, Calibration, Diagnostics, and Check Settings Upload screens is needed when Setup|Security is set to Default. This password, stored in MPM or BDS firmware, must be five characters. To change it, from String Status, select Setup|Battery|General. Refer to *Battery Setup: General (MPM or BDS)*.


The Battery Setup password is cleared from the MPM or BDS firmware when the Alarm Reset switch clears existing names. Refer to the *Clear Existing Names (On-site)* text in the *Synchronizing Using Check Settings* chapter.

**Administrator or User Password** - When Setup|Security is set to User Defined, a password for user and administrator boxes is required, but separate passwords for System Setup and Battery Setup are no longer needed. This password, stored in the BMDM database, may be twenty characters long. To change it, use the Change Password button on the Battery Monitor Login User dialog box. Refer to *Changing the User Login Password*.

**User Name at Server Login** - The default user name on the SQL Server Login dialog box and related screens is SA. (Think of SA as System Administrator.) You may change the user name after successfully logging in.

## 4.7. Computer Types

The first time the program runs, a question about computer type appears.

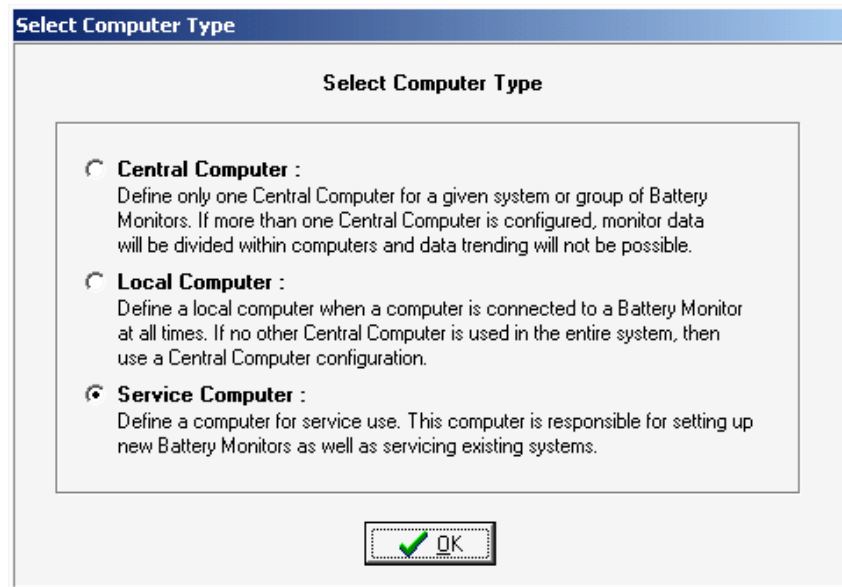

**Figure 5. Select Computer Type**

You select a computer type only once. Refer to *Understanding Computer Types* before answering. The following text is on the Select Computer Type box:

**Central Computer** - Define only one Central computer for a given system or group of battery monitors. If more than one Central computer is configured to extract data, the monitor data could become corrupted.

**Local Computer** - Define a Local computer when a computer is connected to a battery monitor at all times. If no other Central computer is used in the entire system, then use a Central computer configuration.

**Service Computer** - Define a computer for Service use. This computer is responsible for setting up new battery monitors as well as servicing existing systems.


On install, the database updates to the latest version. After setup, the String Status screen title bar indicates the computer type: Central, Local or Service. To change the type, refer to *Changing Computer Type*.

**SQL Install Note** - If you installed the BMDM to run on a server, refer to *Setting Up the SQL Database* to select a database and set up the server.

## 4.8. Changing Computer Type

The Select Computer Type box appears only the first time you install the program. You cannot change the computer type by re-installing; you must edit a text file. Close all programs, including the BMDM, and open a text editor, such as Microsoft Notepad or WordPad under Start|Programs|Accessories.

Open the file **Config3.MPM** under Program Files\Alber\MPM Manager. Using the text editor, edit the number under the line labeled #2 Computer Type so the digit indicates the computer type you want. Type 1 for Central, 2 for Local, or 3 for Service. For example, in the following figure, the 2 under line #2 indicates a Local computer.

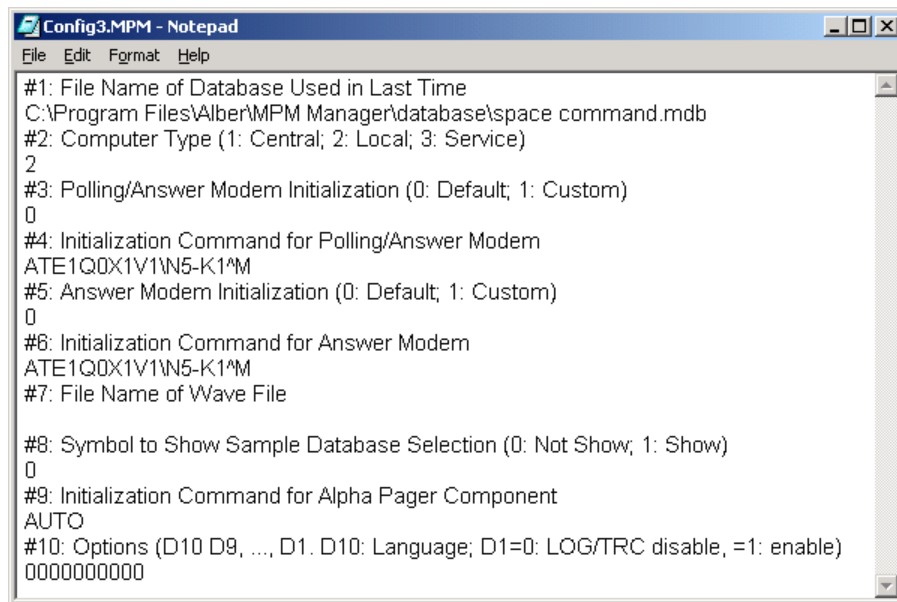

```

Config3.MPM - Notepad
File Edit Format Help
#1: File Name of Database Used in Last Time
C:\Program Files\Alber\MPM Manager\database\space command.mdb
#2: Computer Type (1: Central; 2: Local; 3: Service)
2
#3: Polling/Answer Modem Initialization (0: Default; 1: Custom)
0
#4: Initialization Command for Polling/Answer Modem
ATE1Q0X1V1\N5-K1^M
#5: Answer Modem Initialization (0: Default; 1: Custom)
0
#6: Initialization Command for Answer Modem
ATE1Q0X1V1\N5-K1^M
#7: File Name of Wave File

#8: Symbol to Show Sample Database Selection (0: Not Show; 1: Show)
0
#9: Initialization Command for Alpha Pager Component
AUTO
#10: Options (D10 D9, ..., D1. D10: Language; D1=0: LOG/TRC disable, =1: enable)
0000000000

```

**Figure 6. Config3.MPM File**

Save the text file and close the editor. Run the BMDM program and confirm the title bar indicates the correct computer type: Central, Local or Service. The Config3.MPM file shown above is for illustration and not meant to be copied.

## 4.9. File Types

The BMDM program uses several file extensions.

- LDF ..... An SQL MSDE file used with the MDF database file. When an MDF file is created, an associated LDF file is also created.
- MDB ..... An Access™ database file that stores cell and battery readings and setup data. At installation, the BMDM creates an empty database file. When the BMDM opens a backup file, it extracts it from ZIP to MDB.
- MDF ..... An SQL MSDE database file that stores cell and battery readings and setup data. After installation, the user creates an empty database file or imports an MDB file. The BMDM cannot back up an MDF file.
- MPM ..... The configuration file Config3.MPM under Program Files\Alber\MPM Manager that you may edit to change computer type (Central, Local or Service).
- PDF ..... A file format that protects against unintended changes. The Web Report Generator generates a report as a PDF file every 24 hours.
- WAV ..... A sound file used for alarm sounds.
- ZIP ..... A compressed file for backup of an Access MDB database file. Saving the working database as a backup saves the MDB file as a ZIP.
- ZRF ..... A compressed file for reports. The Report Generator displays and prints text and graphs and saves customized reports in a ZRF format that protects against changes. You may also view and print ZRF files using the Archive Reader.

## 4.10. Help Screens

The BMDM has built-in help, which you may activate three ways. Most screens have a question mark in the upper right corner. Click the question mark, then click the ? cursor over an item to open a help description. If a screen has no question mark, press the F1 function key to display help for the entire screen.


Finally, you may click Help on the menu bar to open the text portion of the manual, through which you may browse using the Table of Contents or Index. The on-screen manual does not include tables and figures.

## 5. Using Configure Station

The Configure Station dialog boxes for a Local, Central or Service computer facilitate setting up communication and alarm reporting. The first time the BMDM runs, at the "Do you want to load a sample database?" message, select No to display the boxes. You may later open these boxes by selecting Setup|Configure Station.


String Status > Setup|Configure Station

To start Configure Station, select Setup|Configure Station. The Monitor Connection Type dialog box appears. Because subsequent boxes depend on previous selections, each box is described without reference to others. For more details on dialog box items, refer to the sections mentioned.

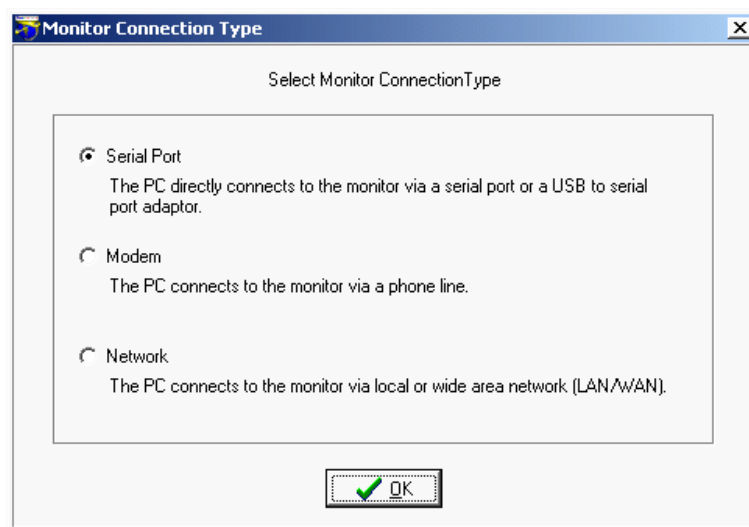


**Figure 7. Configure Station - Monitor Connection Type**

Select the method by which the monitor is connected to the computer.

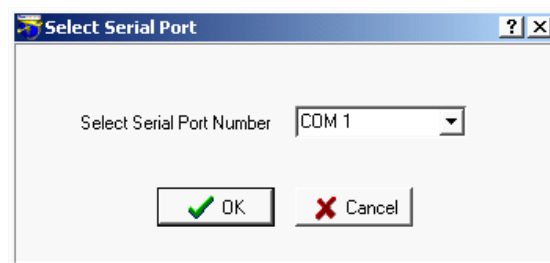


**Figure 8. Configure Station - Select Serial Port**

If communicating via serial port, select a COM port.

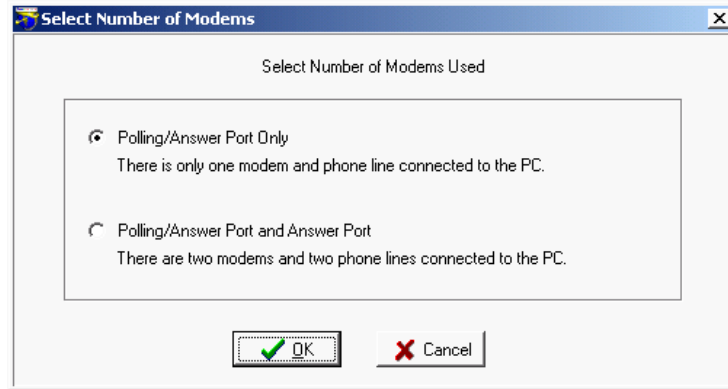


**Figure 9. Configure Station - Select Number of Modems**

If communicating via modem, select the number of modems in use. For details, refer to *Setting Communications*.

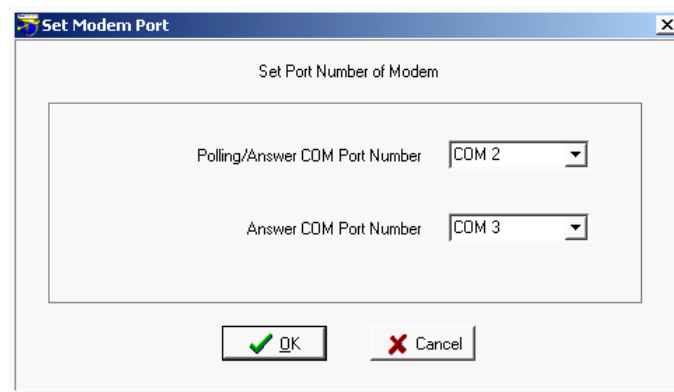

**Figure 10. Configure Station - Set Modem Port**

If communicating via modem, select the modem COM ports. For details, refer to *Setting Communications*.

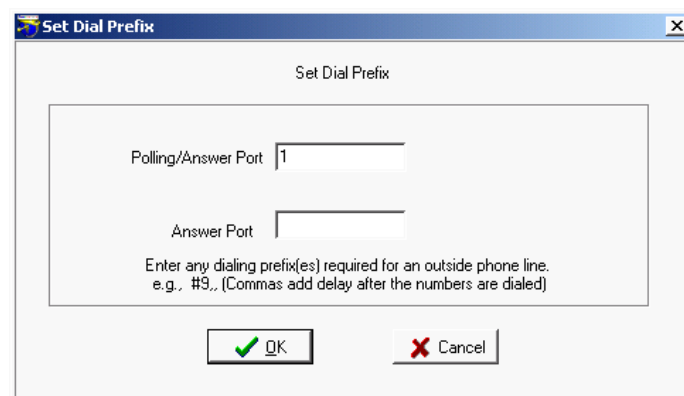

**Figure 11. Configure Station - Set Dial Prefix**


If communicating via modem, select the dialing prefix. For more details, refer to *Setting Communications*.






**Figure 12. Configure Station - Set Station Phone Number**

If communicating via modem, type the telephone number of the computer the MPM or BDS monitor calls when a system goes into alarm or discharge.

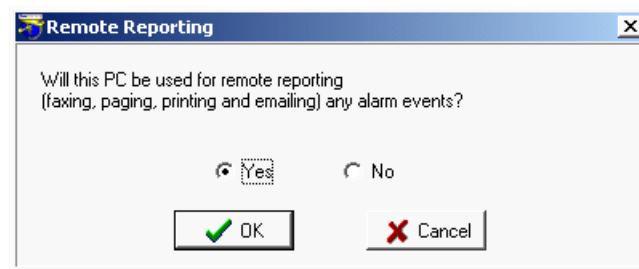


**Figure 13. Configure Station - Remote Reporting**

To set up parameters for automatic alarm notification using fax, page, email or print, click Yes.

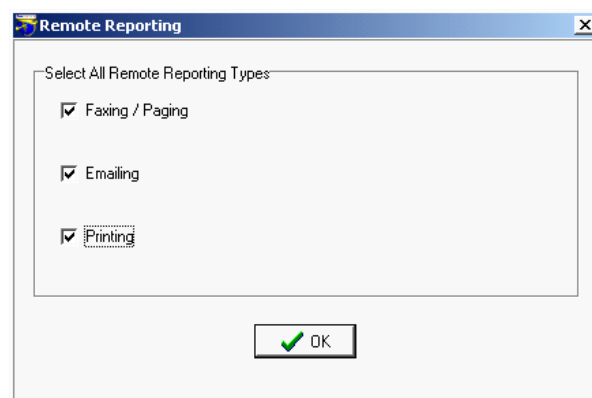


**Figure 14. Configure Station - Remote Reporting Types**

Select the methods by which alarms will be reported.

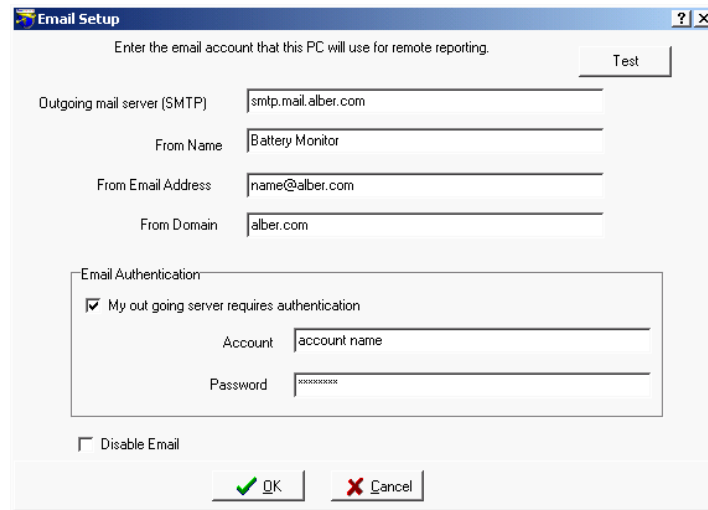


**Figure 15. Configure Station - Email Setup**

If sending alarms via e-mail, complete this dialog box. Refer to *Setting Up an Email Account*.

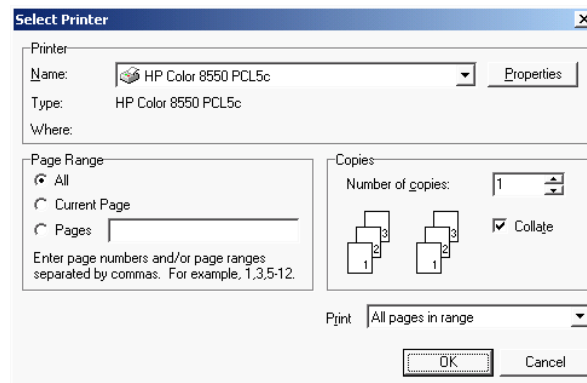


**Figure 16. Configure Station - Select Printer**

If sending alarms to a printer, this dialog box appears, which is also under File|Printer Setup. The key item to select is the default printer.

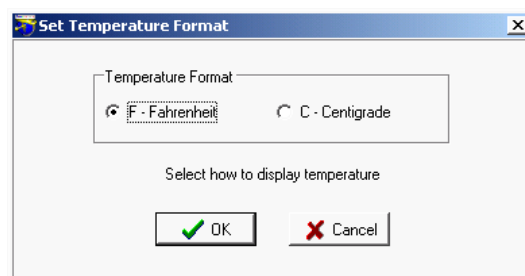

**Figure 17. Configure Station - Set Temperature**

This box always appears. Select how temperatures will be displayed, either in degrees Fahrenheit or Centigrade.

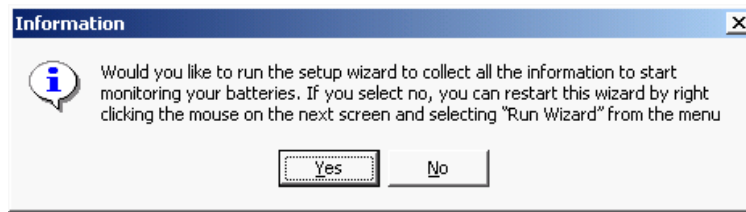

**Figure 18. Configure Station - Information**


If running the BMDM for the first time with an Access database, this box opens the hardware setup wizard. You may start this wizard at any time by selecting Setup|Run Wizard.

### **5.1. BMDM Configuration Wizard**

String Status > Setup|Run Wizard or Right-click mouse|Run Wizard

The BMDM Configuration Wizard sets up monitor hardware and battery strings. Using the Wizard is the recommended method for setup, as it ensures that basic setup requirements are completed. If you choose not to use the Wizard, you must use the various BMDM setup dialog boxes.

While the Wizard works only with the Access database, it can easily work for SQL. To use the Wizard with SQL, set up as an Access database, run the Wizard, then import the Access database into an SQL database. To start the Wizard, select Setup|Run Wizard or right click on the String Status screen and select Run Wizard. The self-guided Wizard dialog boxes are not described in this manual.

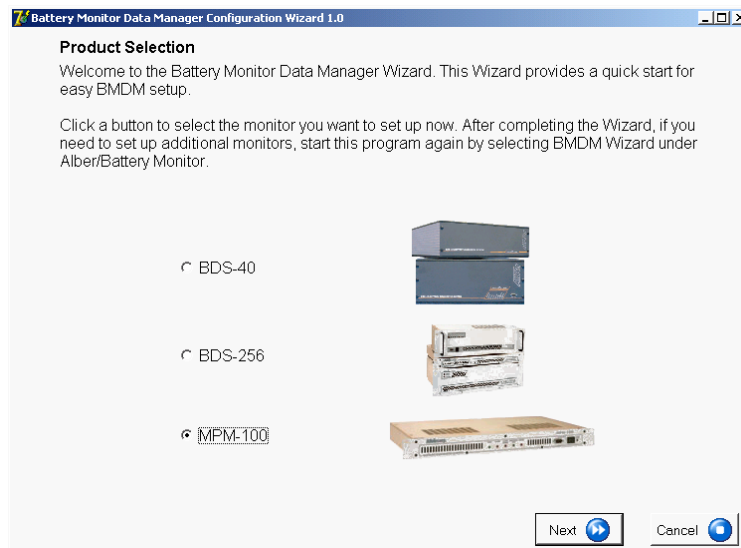

**Figure 19. BMDM Configuration Wizard Opening Screen**

## 6. Setting Up the SQL Database

After installing the BMDM SQL program, complete this chapter. The BMDM program does not automatically back up SQL databases. The system administrator must ensure regular backups are made. Refer to *Automatic and Manual Backup*. If you want to assign a workstation name to the computer, you must have installed as a Local or Service computer. See the sections in this chapter about running the BMDM and MSDE as a service.

### 6.1. Selecting an SQL Database

String Status > File|Open|SQL-DB

The first time the BMDM runs, it uses the Microsoft Access database. Although you may use Access on a server, SQL offers the advantage of letting multiple users and workstations use one database at the same time. In addition, the workstation does not display or poll irrelevant strings.

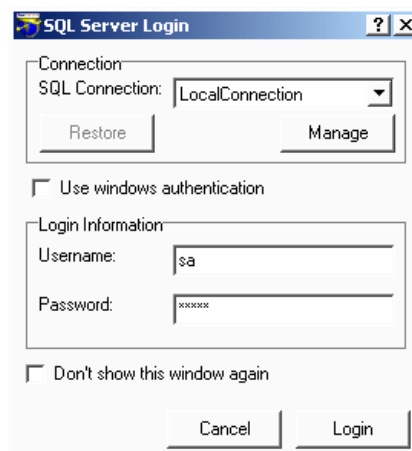


Figure 20. SQL Server Login

To change from Access to SQL, select File|Open|SQL-DB. At the SQL Server Login dialog box, log in to an existing SQL database or create a new database as follows. (The default user name is SA. The default password is alber. Optionally, click the **Use Windows Authentication** check box to use the user name and password logged in to the computer.

### 6.2. Log In to an Existing SQL Database

String Status > File|Open|SQL-DB


To log in to an SQL database, at the SQL Server Login box, select a database from the drop-down SQL Connection list, then click **Login**. (To open the SQL Server Login box, select File|Open|SQL-DB.) At the Battery Monitor Login User box, type the user name and password, then click OK. String Status displays details for the database.

**Note** When changing between an SQL and Access database, you must restart the BMDM program.

### 6.3. Creating an SQL Database


String Status > File|Open|SQL-DB

To create an SQL database, select File|Open|SQL-DB. At the SQL Server Login box, click **Manage**. At the SQL Database Manager box, click New. The SQL Connection Wizard box appears.

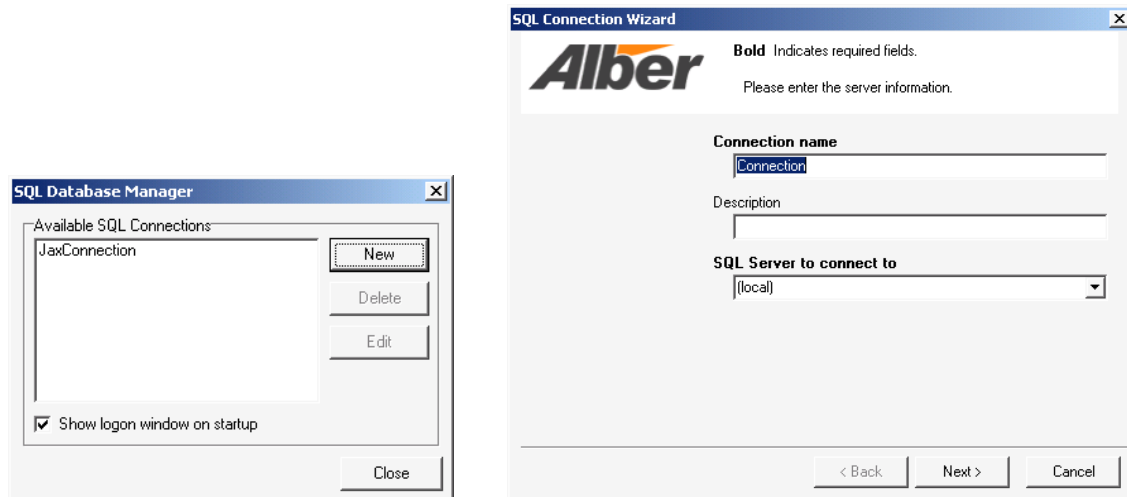


**Figure 21. SQL Database Manager and SQL Connection Wizard - Name**

On the SQL Connection Wizard box, at **Connection Name**, type a name to identify this computer's connection to the database. At the optional **Description** field, you may describe the connection. At the **SQL Server to Connect to** field, either select [local] if this database will reside on the same computer, or type the server name where the database will reside, then click Next. At the Wizard password box, type the user name and password, then click Next. The database name box appears.

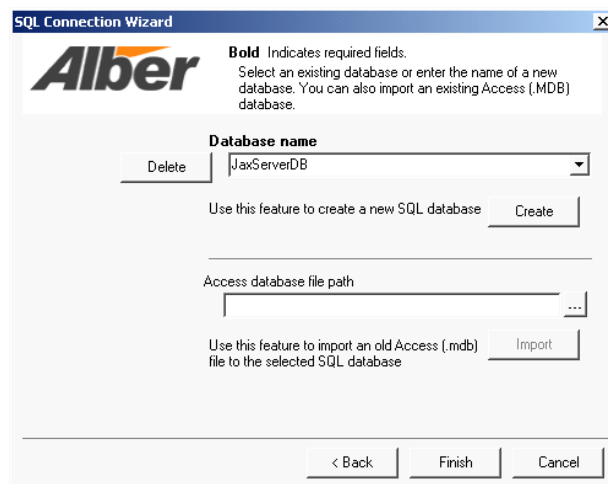

**Figure 22. SQL Connection Wizard - Database Name**

At the Wizard database name dialog box, to create a new database, type the database name, click **Create**, then click the **Finish** button.

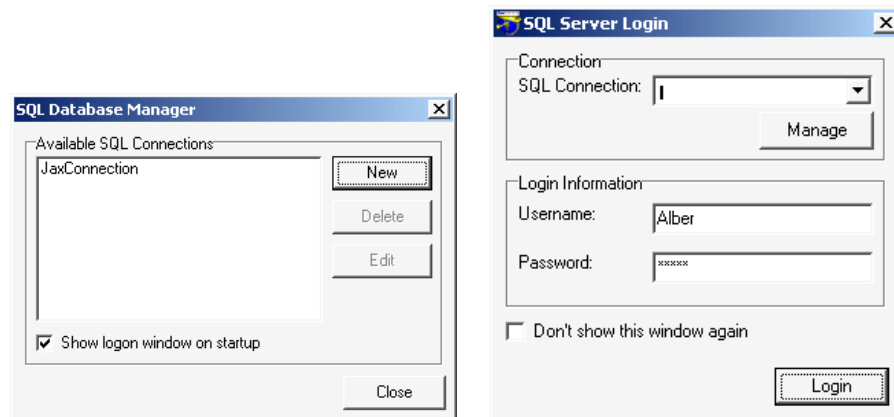

**Figure 23. SQL Database Manager and Server Login**


On the SQL Database Manager box, click **Close**. On the SQL Server Login dialog box, at the **SQL Connection** drop-down list, select the previously created connection and click **Login**. The BMDM program is now ready to use with the SQL database.

#### **6.4. Importing an Access Database into SQL**

**CAUTION:** If the SQL database was previously set up, importing an Access database into the database will overwrite all existing data. Importing is not a merge function.

String Status > File|Open|SQL-DB

To import an Access database into a new SQL database, select File|Open|SQL-DB. On the SQL Server Login, click **Manage**. On the SQL Database Manager, highlight the SQL database that will receive the Access database, then click **Edit**. On the Wizard "Connection Name" dialog box, click **Next**. On the Password box, type the user name and password and click **Next**. On the Wizard "Database Name" box at the **Database Name** field, type a new database name or select a name from the drop-down list. Complete the **Access database file path** field by clicking the button to the right of the field and selecting the path/filename for the Access database.

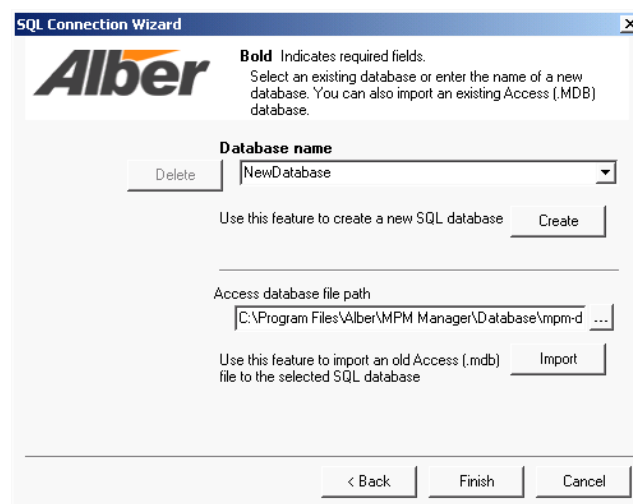

**Figure 24. Importing a File into an SQL Database**

To import the Access database into the SQL database, click **Import**. After import is complete, at the "Import Finished" message, click OK. On the Wizard "Database Name" dialog box, click **Finish**. On the SQL Database Manager dialog box, click Close. To log in to the newly imported database, on the SQL Server Login dialog box, highlight the connection name and click Login.

### ***6.5. Deleting an SQL Database Connection***

String Status > File|Open|SQL-DB|Manage

To delete a connection to an SQL database, select File|Open|SQL-DB. At the SQL Server Login dialog box, click **Manage**. At the SQL Database Manager box, click the database connection to delete, then click Delete. Deleting the database connection does not remove the database from the server.

### ***6.6. Deleting an SQL Database***

String Status > File|Open|SQL-DB|Manage|New

CAUTION: A database file deleted from the server cannot be retrieved.

To delete an SQL database from the server, select File|Open|SQL-DB. At the SQL Server Login dialog box, click **Manage**. At the SQL Database Manager box, click **New**. At the Wizard "Connection Name" screen, complete the **SQL Server To Connect To** field, then click **Next**. Type the User Name and Password, then click Next. At the Wizard "Database Name" screen, select the name of the database you want to delete from the Database Name drop-down list. To permanently delete the database and remove it from the server, click **Delete**. After the database is deleted, click **Finish**. Either open a new database or exit back to the String Status screen using the Close and Cancel buttons. Deleting the database does not delete the database connection to the server.

## 6.7. Assigning a Workstation Name

A Central computer cannot be assigned a workstation name. A workstation can only be assigned to a Local or Service computer.


Assigning a name to each workstation lets the workstation identify what customers or regions should be accessed or assigned and lets the workstation ignore irrelevant strings. This improves polling and data extraction efficiency, and String Status displays only strings assigned to the customer or region. If no name is assigned, all strings are available, regardless of customer or region.

After a name is assigned, a user with administrator rights can view and modify all strings on the String Status screen, but only strings assigned to that workstation are auto polled. If a workstation is later unassigned, it can display all strings and autopoll all strings if enabled, even if the Workstation field on Setup|Customer still shows the unassigned name.

After naming the workstation, you must give each user access rights to connect to specific strings. All strings within a region appear on String Status, but only users who have access rights may connect to the strings. Refer to *Setting User Access Rights*.

String Status > Setup|System|Workstation


**Assign a Workstation Name** - To assign a workstation name to a Local or Service computer, first confirm the BMDM is installed as Local or Service, indicated at the top of the String Status screen. Log in as the administrator. To assign a name, either select Setup|System or double-click any string on String Status, then click the Workstation tab.

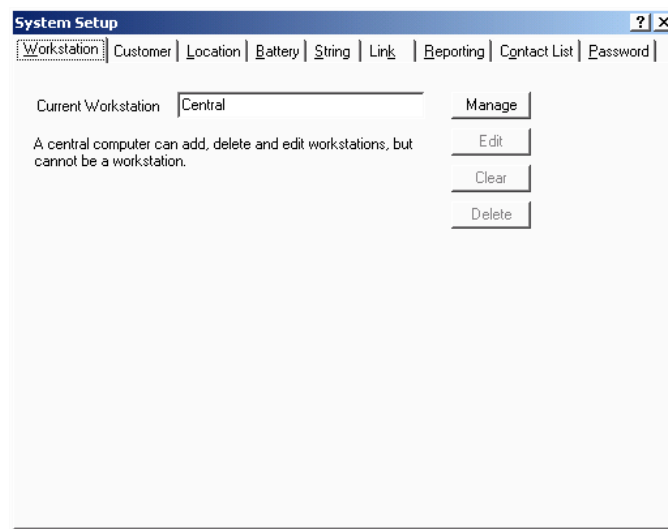

**Figure 25. System Setup - Workstation**

To create a workstation name, on the Workstation dialog box, click **Manage**. At the Set Workstation box, click **Add** to open the Workstation Setup box.



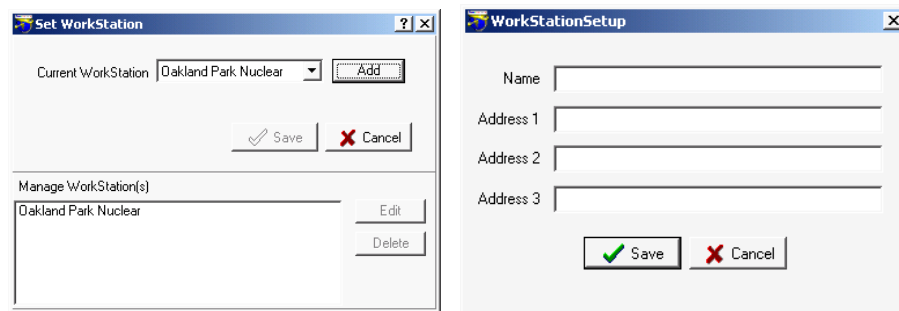

**Figure 26. Set Workstation and Workstation Setup**

On the Workstation Setup box, at **Name**, type the name of the workstation. This name will appear in the drop-down list on the Set Workstation box. You may also complete the optional Address 1,2,3 fields. When finished, click **Save** to display Set Workstation.

On the Set Workstation box, select the workstation name from the **Current Workstation** drop-down list, then click Save. The name appears in the Current Workstation field on the Setup|Workstation dialog box.

To assign a customer to a workstation, click the Setup|Customer tab, then select the name from the **Workstation** drop-down list.

String Status > Setup|System|Workstation

**Edit a Workstation Name** - To edit a name, select Setup|System, click the Workstation tab, then click **Edit**. (Or, at the Set Workstation dialog box, click Edit.) On the Workstation Setup box, change the Name or Address fields, then click **Save**. The updated data will appear in the Setup|Workstation dialog box. The name can be selected in the Workstation field on Setup|Customer.

**Clear a Workstation Name** - If a computer is assigned a workstation name, clicking **Clear** unassigns the name from the computer. Clicking Clear does not remove the workstation setup from the database.

**Delete a Workstation Name** - If a computer is assigned a workstation name, clicking **Delete** unassigns the name from the computer and removes the workstation setup from the database.

## 6.8. Running the BMDM as a Service

Running the BMDM as a service lets the program monitor and poll in the background when the Windows user logs off the computer. This prevents having to leave a Windows user logged in while the unattended computer is running the BMDM program. To start the service, on the Windows toolbar, click Start|Programs|Alber|MPM Manager|ServiceManager.exe. (It doesn't matter if the BMDM program is running or not.) The BMDM Service Manager dialog box appears.

At the "Check application termination every  $n$  minute" field, select how frequently the service checks for program restart; the default value is 1 minute. In the Current Service Status area, select Automatic from the Startup Type drop-down menu. At Change Status, click the Start button to start the service. Be sure to click the check box "Don't show this window again" at SQL server login. Otherwise, the program will wait for user input at startup when attempting to start.

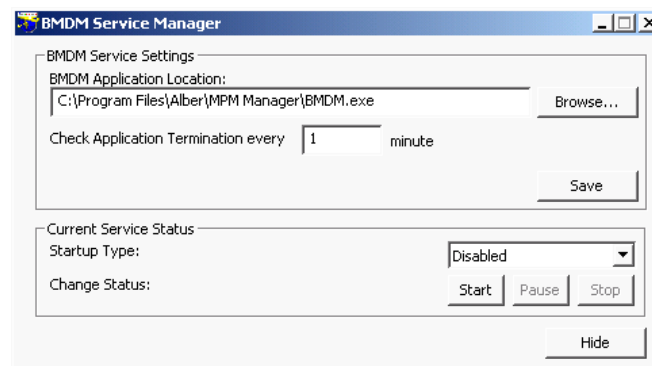


Figure 27. BMDM Service Manager

A user may log off the computer with the BMDM program running. To log off, on the Windows toolbar, click Start|Shut Down|Log Off *UserName*. (These selections depend on the version of Windows being used.) With the user logged off, the BMDM will continue monitoring and polling. If the program is not running, it will automatically start at full screen within the time specified.

**IMPORTANT NOTE:** Do not confuse running the BMDM program as a service with defining the computer as a Service computer. The two are unrelated.


## 6.9. Starting MSDE

If using the MSDE SQL database, make certain MSDE is started. Double-click the MSSQL Server icon in the bottom Windows toolbar. On the SQL Server Service Manager dialog box, click Start/Continue to start the service.

## 6.10. Backing Up an SQL Database

String Status > File|Backup Setup

The SQL database can be automatically backed up on a daily or monthly basis. In the event of data loss, the data can be restored from the most recent backup. To set the backup schedule, with an SQL database listed on the String Status screen, click File|Backup Setup to display the SQL Backup dialog box.

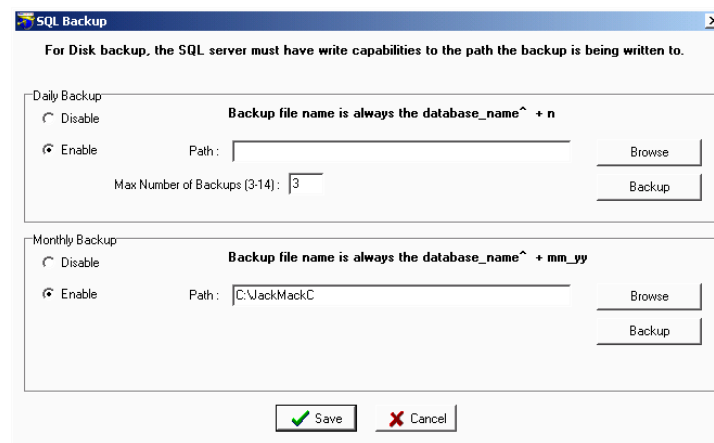

**Figure 28. SQL Backup Setup**

To schedule daily backups, in the Daily Backup area, click the Enable button, then click the Browse button to select the path and folder in which the backups will be saved. In the Max Number of Backups, type a number from 3 to 14. This is the number of times the database is backed up each day.

To schedule monthly backups, in the Monthly Backup area, click the Enable button, then click the Browse button to select the path and folder in which the backups will be saved. Monthly backups are performed on the first day of each month.

If you want to immediately back up the database, click the daily or monthly Backup button. To save the backup schedule, click the Save button.

## 6.11. Restoring an SQL Database

String Status > File|Open SQL DB


If the SQL database has been automatically backed up on a daily or monthly basis, you may restore data from the most recent backup. To restore data, if the String Status screen is displaying a database list, select File|Close to close it.

Select File|Open SQL DB to display the SQL Server Login box.



**Figure 29. SQL Backup Setup**

On the SQL Server Login box, click the Restore button.

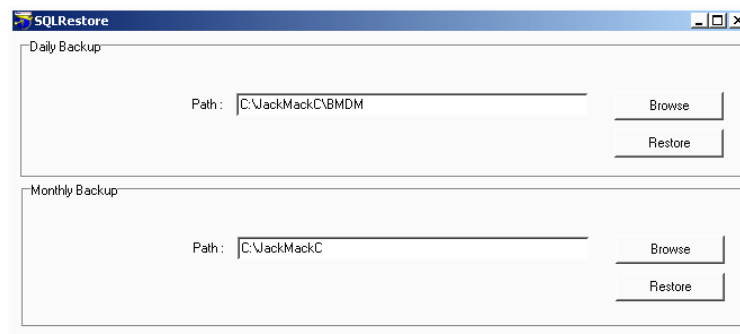

**Figure 30. SQL Backup Setup**

On the SQL Restore box, click the Browse button to select the path and folder in which the backup was saved, then select the file name. You may restore either the monthly or the daily backup, whichever is more recent. To restore the database, click the Daily or Monthly Restore button.

## 7. User Specific Settings

The BMDM offers user specific settings that allow control of the program and databases.

### 7.1. Setting User Access Rights

When using the BMDM, users log in at program start or click the red user name in the upper left of the String Status screen, then select a new name from the login box drop-down list. You must add users and set them up with permissions, so they can view specific strings or program screens. You may also edit existing users' names, passwords, and rights or delete users.

The BMDM program can have one password for system setup and another for battery setup by selecting Default on the Setup|Security dialog box. Select User Defined to let users log in only once to view all areas for which rights have been granted. Refer to *Default Passwords*.

Users are automatically logged out after one hour of inactivity. To keep the String Status screen displayed when no user is logged in, open Setup|Preferences and select the Show Status Screen on Waiting Login check box.

String Status > Setup|Security

The System Setup, Battery Setup, Calibration, Diagnostics, Check Setting Upload, Run Resistance Test, Data Extraction, and Data Deletion areas of the program require assignment of rights. To define users and permissions, at the String Status screen, select Setup|Security.



**Figure 31. Security**

At the Security dialog box, click **User Defined**. On the Administrator Password box, type the password and click OK. On the Security box, click **Edit Users**. The User Access Rights box allows users to be set up and permissions set. You may also display the User Access Rights box by selecting Setup|Edit User on String Status.

| Login Name  | Administrator                       | System Setup                        | Battery Setup                       | Calibration                         | Diagnostics                         | Check settings upload               | Run Manual R-Test                   |
|-------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| jack        | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| harleyworth | <input type="checkbox"/>            | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/>            |

**Figure 32. User Access Rights**

**New** or **Edit** buttons - To set up a new user, click **New** or, to edit an existing user, highlight the user name, then click **Edit**. The **Edit User** box appears.

**Figure 33. Edit User**

The following items appear in the **Security Privileges** area on the **Edit User** dialog box.

**Administrator Rights** - Check this box to let the user set up other users and workstations. To assign rights to other program areas, check additional boxes on the dialog box as described below. Clicking the **Administrator Rights** check box selects all other check boxes below it.

**System Setup** - Allows use of **Setup|System** on the **String Status** screen to set up a new customer or location.

**Battery Setup** - Allows use of **Setup|Battery** on the **String View** screen to set up battery test parameters and alarms.

**Calibration** - Allows use of Setup|Calibration on String View to calibrate hardware.

**Diagnostics** - Allows use of Diagnostics on String View to check hardware and firmware status.

**Check Settings Upload** - Allows uploading of hardware settings using the Upload button on the Setup|Check Settings dialog box.

**Data Extraction** - Allow connection to a monitor to copy or copy then remove data from the monitor. Copy then remove depends on computer type.

**Delete Data Sets** - Allows data sets to be selected then deleted.

**Run Resistance Test** - Allows the manual running of a resistance test, under Diagnostics on the String View screen, to bring readings into the database from the hardware.

**All or None** - Alternate action buttons that select or deselect all check boxes except Administrator Rights.

**String Access** area: **All** or **Select** or **Edit** - On the Edit User dialog box, click All to give the user rights to all strings. Click Select to give rights to particular strings. After clicking Select, click Edit to display the String Access Form, where you may select the strings the user can view.

| MS:                                 | Customer: | Loc:    | Battery:         | String:                                 |
|-------------------------------------|-----------|---------|------------------|---|
| <input type="checkbox"/>            | < >       | <Riber> | <Booa Raton Lab> | <UFS Mod1 - 400KVA> String: <String 1A> |
| <input checked="" type="checkbox"/> | < >       | <Riber> | <Booa Raton Lab> | <CSB-GP1272> String: <String 1>         |
| <input type="checkbox"/>            | < >       | <Riber> | <Booa Raton Lab> | <Energys> String: <String 1>            |

Save Cancel

**Figure 34. String Access Form**


After selecting strings on the String Access Form, click Save to return to the Edit User box.

**Save or Cancel** - After completing the Edit User box, to save the selections and add the name or changes to the User Access Rights list, click Save. To exit without making any changes, click Cancel.

**Delete** - On the User Access Rights box, to delete a user, click on the user name to highlight it, then click the Delete button. At the confirmation box, click Yes.

## 7.2. Battery Monitor Login User Box

If you select User-Defined on the Setup|Security dialog box, at BMDM program start, the Login User dialog box appears. This box may also appear when File|Open|Access-DB or SQL-DB is selected.

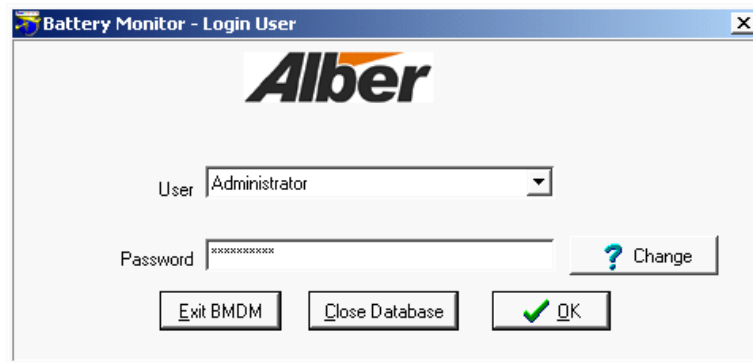

**Figure 35. Battery Monitor Login User**

On the Login User dialog box, complete the **User Name** and **Password**, then click OK to open the BMDM program and database. To change the password after typing User Name and Password, click the **Change** button. Refer to *Changing the User Login Password*.

If the Login User box appears and you don't know the password, you have two options. To close the BMDM program, click **Exit BMDM**. The other choice is to click **Close Database**, which closes the currently open database, but does not close the BMDM program. At this point, you may open another database for which you know the password.

## 7.3. Changing the User Login Password

String Status > File|Open|Access-DB or SQL-DB

To change the user login password, start the BMDM or click the red user name in the upper left of the String Status screen to display the Battery Monitor Login User dialog box. On this box, type the user name and current password, then click the **Change** button.

On the Change Password dialog box, type the new password in the Password and Re-type Password fields, then click **Change**. On the Battery Monitor Login User dialog box, type the new password in the Password field, then click OK to open the database.



## **8. Understanding Computer Types**

When installing the BMDM program, select one of three computer types: Local, Central or Service. This section explains the types of computers.

### **8.1. Central Computer**

For managing many sites, use a Central computer. This can be a remote computer with one modem, or two modems for more than 100 monitors. A computer continuously running the BMDM can automatically poll the monitoring systems, test for normal status, answer calls from alarming monitors, receive and store data in a central database, report problems to personnel, and list conditions on the String Status screen.

If using only one site with a Central computer, you may connect the computer to a monitor RS-232 rear port for continuous viewing of battery and monitor status. In this configuration, no other Central computers may exist for the same site.

You may temporarily use a portable computer as the Central computer. To manually extract data, connect the computer via modem or RS-232 Local port. This type of Central computer is the least desirable because it cannot automatically poll units for status and automatically extract data or receive calls from alarming monitors.

Only use one Central computer for all monitors. This is important because only a Central computer removes data permanently from monitor memory.

A Local computer set up as a workstation clears data from the hardware after extraction. If using a Local computer as a workstation, you do not need a Central computer to extract the data.

#### **Select Central Computer when you want to:**

Connect a computer to manage one or more monitors and have the computer manage the database. Only a Central computer updates the time when passing midnight.

#### **A Central computer can do the following:**

Set alarm parameters and test intervals.

Collect data manually or automatically, which permanently removes the data from monitor memory.

Report string and monitor status automatically.

Upon an alarm occurrence, page personnel, fax or email a report, and sound an alarm.

Control more than 1000 monitors from a remote location (not on-site).

Assign location, battery, and string names when setting up a new system.

Calibrate a monitor when the Central computer is on-site.

**Note** You may set up an on-site, remote (off-site) or notebook computer as Central, but there must be only one Central computer polling a monitor. A serial multiplexer is required when using more than one monitor with an on-site computer.

## **8.2. Local Computer**

For continuous, on-site display of battery information, use a Local computer. You can use a Local computer with a Central computer. A Local computer performs most Central computer functions, except that only a Central computer can permanently remove data from monitor memory.

If a Local computer is set up as a workstation, it will clear the data in the hardware after extraction. If you are using a Local computer as a workstation, there is no need for a Central computer to extract the data.

**MPM CAUTION:** The MPM front panel Local Port switch enables the front RS-232 port or optional rear RS-232 port, fiber optic port or LAN port. The front port is for servicing only. When the switch is lit, the front port is selected. Use the rear port for connecting to a permanent Local computer, Service computer or on-site Central computer. Use the front port for using a computer for servicing. For example, if the MPM is not near the Local computer, you may need an on-site connection for calibration or troubleshooting.

**BDS CAUTION:** A BDS front panel switch can disable the rear RS-232 Local port or the fiber optic port. Select the Local position to use the front Local port. When the switch is lit, the front Local port is selected. Be sure to select the rear Local port after use to re-establish connection to the Local computer.

The BMDM program on a Local and Central computer is the same, except it is set for Local rather than Central to implement special data handling when connected to a monitor.

A Local computer can be set up as a workstation and assigned a workstation name.

### **Select Local Computer when you want to:**

Connect a computer to a monitor to continuously view monitor and battery status on-site. If you want to assign a workstation name to the computer for use with SQL, select Local computer.

### **A Local computer can do the following:**

Set alarm parameters and test intervals.

Calibrate a monitor.

Collect data manually and automatically without permanently removing the data from monitor memory.

Report string and monitor status automatically.

Upon an alarm occurrence, page personnel, fax or email a report, and sound an alarm.

**Note** When no network is available, a serial multiplexer is required when using more than one monitor.

### **8.3. Service Computer**

The Service computer can be a desktop or notebook computer temporarily connected to a monitor on-site to view battery information. The BMDM software on the Service computer is the same as that on a Central or Local computer, except it is set for Service during setup. A Service computer lets personnel call a site from a remote location and observe a situation without removing any data the Central computer might be waiting to extract.

A Service computer can be set up as a workstation and assigned a workstation name.

#### **Select Service Computer when you want to:**

Connect a computer on-site or from a remote location to view battery data real time or when you want to set up new monitors.

#### **A Service computer can do the following:**

Set up a new monitor, including alarm parameters and test intervals.

Calibrate a monitor.

Collect data manually without permanently removing the data from memory.

A Service computer may also function as a workstation, but does not clear data.

### **8.4. Facility Monitor**

You can connect the monitor to a facility monitor or any device that communicates using MODBUS ASCII protocol. Third-party vendors can view all information available to the Data Manager. Vertiv can supply the register map and application notes for this implementation. A facility monitor can connect to a BDS or MPM system via RS-232 or network. Dry closure contacts are available for monitoring alarm status. Refer to *MPM MODBUS Application Notes* at [www.vertivco.com](http://www.vertivco.com) for more details.

## 9. Understanding Polling, Extraction and Backup

This chapter explains how polling, extraction, and backup are implemented in Central, Local, and Service computers running Access and SQL databases. A table summarizes the functions. The terms *status* and *data* are used in this chapter as follows:

**Status** defined - A report of the normal and error conditions and alarm events for the strings being monitored.

**Data** defined - Data (or string data, battery data) are the voltage float values, resistance values, and discharge values acquired through testing.

The Extract function never deletes *status* from the monitor. Depending on computer type, Extract may delete *data* from the monitor.

### 9.1. Types of Polling

Polling can be automatic or manual for computers using an Access or SQL database.

**Polling** defined - The process of having the BMDM program connect to the BDS or MPM monitor and request present battery and monitor status. Polling may be done automatically.

**Auto Polling via RS-232 or LAN (Continuous Polling)** - The computer automatically connects to one or more monitors and then continually polls each string in the database sequentially. This continuous autopolling is done via network or RS-232 direct connection, not via modem. The polling interval is adjustable.

**Auto Polling via Modem** - Autopolling via modem occurs one time per day. Each string is polled, then autopolling ceases until the next day. This prevents having the telephone line continuously in use.

**Disable Auto Polling / Auto Answering** - To allow auto polling or auto answering, do not select this box on Communication Setup.

### 9.2. Extraction of Data

Extraction can be automatic or manual for computers using an Access or SQL database. Status is never deleted using Extract.

**Extraction** defined - Extraction is the process of having the BMDM program connect to a BDS or MPM monitor and transferring float, resistance, discharge, and alarm data from monitor memory to the BMDM database. Depending on computer type, extraction may copy or copy then remove the data from the monitor. Refer to the table in this chapter.

**Manual Extraction** - After BMDM to MPM or BDS connection, you may initiate manual extraction by clicking of any of these buttons: View Resistance, View Intercell, View Current Historical Alarms, View Discharge, Extract All, and History. You may also start manual extraction by clicking the **Extract All Data** button or the **Extract Data** pop-up menu item when enabled.

**Auto Extraction** - Enabled by checking the Auto Extract Data box on Communication Setup. With auto extraction, data transfers from the monitor to the BMDM database one time a day, at 10PM for a Local computer or at 12 midnight for a Central computer.

### **9.3. Polling and Extraction Notes**

Auto Polling via Modem with a Central Computer - Central computer autopolling via modem is available once a day at midnight. Select **Modem** on Setup\System|Link, set Polling to **Enable** on Setup\System|Link, and do not check the **Disable Auto Polling / Auto Answering** box on Setup|Communication. Modem connection does not permit continuous autopolling.

Continuous Auto Polling - A Central, Local or Service computer connected to the monitor via RS-232 or network can perform continuous autopolling. Set Polling to **Enable** on Setup\System|Link, and do not check the **Disable Auto Polling / Auto Answering** box on Setup|Communication. Using a Service computer for continuous polling is not recommended.

Pause Auto Polling - On String Status, you may select Setup|Pause Auto Polling to temporarily suspend continuous polling. This is convenient if you are selecting other strings in the list. Selecting Pause Auto Polling does not change settings on the Communication Setup or Link dialog boxes.

Simultaneous Polling - If two computers (Server/Central and Workstation/Local) are set up to poll, set only one to report, email, and fax. Otherwise, both computers will attempt to perform this when an alarm is identified.

Extracting Data via Modem with a Central Computer - A Central computer connected via modem can extract data. Select **Auto Extract Data** on Setup|Communication. The Central computer polls monitor status at midnight, copies monitor data to the Central computer database, and deletes the data from the monitor.

Extracting Data with a Central or Local Computer via RS-232 or Network - A Central or Local computer connected via RS-232 or network can extract data. A Service computer cannot extract data. Select **Auto Extract Data** on Setup|Communication. During autopoll at 10PM, a Local computer copies monitor data to the Local computer database, but does not delete the data from the monitor. At midnight, the Central computer autopolls monitor status, copies the monitor data to the Central computer database, and deletes the data from the monitor.

## 9.4. Automatic and Manual Backup

Within this section, a **backup** is defined as a file that is generated by the BMDM program automatically or upon user request. Backup file generation is available only when using an Access database.

The BMDM program stores data from the MPM or BDS in a Microsoft Access or SQL compatible file. As defined in *File Types*, an MDB file is an Access database file that stores cell and battery readings and setup data. An MDF file is equivalent to an MDB, but for an SQL database. A WinZip® ZIP file is a compressed file for backup of an Access MDB database file.

When using Access, the working database is automatically saved as a ZIP file at midnight. The number 1 is appended to the file name and the extension becomes ZIP. Backups are made for three days, appended with 1, 2 or 3. On the fourth day, the oldest backup is overwritten. On the first of the month, another backup is created, with the month and year appended to the file name. On subsequent first days of each month, another file is created, again with the month and year appended.

The BMDM program cannot back up an SQL database MDF file nor its associated LDF file. The system administrator should institute a process that ensures regular backups of both these SQL database file types.

At any time, to save an Access database as an MDB database file, select File|Save As. To save the MDB file as a ZIP backup file, select File|Backup Database.

To open a backup file, select File|Open Backup. When the BMDM opens a backup file, it converts it from a ZIP to an MDB Access database file. Backup does not apply to SQL.

To copy an SQL database to the server, attach the database files to the SQL server by typing the following commands at the command prompt:

```
osql -U sa
password
sp_attach_db @dbname = 'BMDMdatabasename',
@filename1 = 'databasepath/BMDMdatabasename.mdf',
@filename2 = 'databasepath/BMDMdatabasename_log.ldf'
go
exit
exit
```

Where *password* is the password for the system administrator account, which is *alber* by default.

Where *database*name is the name of the database being copied.

Where *database*path is the path under which the database being copied resides.

The following table summarizes polling, extraction and backup for Central, Local, and Service computer types running Access and SQL databases.

| Computer Type <sup>1</sup> and Database | Connected Via | Backup                   | Auto Polling                            | Auto Extraction <sup>2</sup>  |
|---|---------------|--------------------------|---|---|
| Central Access                          | Modem         | Midnight (12:00AM)       | Midnight (12:00AM)                      | Copies the status; copies then deletes data. Concurrent with autopoll.                  |
| Central Access                          | RS-232        | Midnight (12:00AM)       | Continuous                              | Copies the status; copies then deletes data. Concurrent with first autopoll after 12AM. |
| Central Access                          | LAN           | Midnight (12:00AM)       | Continuous                              | Copies the status; copies then deletes data. Concurrent with first autopoll after 12AM. |
| Central SQL                             | Modem         | Not available using BMDM | Midnight (12:00AM)                      | Copies the status; copies then deletes data. Concurrent with autopoll.                  |
| Central SQL                             | RS-232        | Not available using BMDM | Continuous                              | Copies the status; copies then deletes data. Concurrent with first autopoll after 12AM. |
| Central SQL                             | LAN           | Not available using BMDM | Continuous                              | Copies the status; copies then deletes data. Concurrent with first autopoll after 12AM. |
| Local Access                            | Modem         | Midnight (12:00AM)       | 10:00PM                                 | Copies the status; copies data. Concurrent with autopoll.                               |
| Local Access                            | RS-232        | Midnight (12:00AM)       | Continuous                              | Copies the status; copies data. Concurrent with first autopoll after 10PM.              |
| Local Access                            | LAN           | Midnight (12:00AM)       | Continuous                              | Copies the status; copies data. Concurrent with first autopoll after 10PM.              |
| Local SQL                               | Modem         | Not available using BMDM | Random between 9:30PM to 11:30PM        | Copies the status; copies data. Concurrent with random autopoll.                        |
| Local SQL                               | RS-232        | Not available using BMDM | Continuous                              | Copies the status; copies data. Concurrent with first autopoll after 10PM.              |
| Local SQL                               | LAN           | Not available using BMDM | Continuous                              | Copies the status; copies data. Concurrent with first autopoll after 10PM.              |
| Service Access<br>(See Note 1)          | Modem         | Midnight (12:00AM)       | Autopolling not available (Manual only) | Auto extraction not available. (Manual only)  |
| Service Access<br>(See Note 1)          | RS-232        | Midnight (12:00AM)       | Continuous                              | Auto extraction not available. (Manual only)  |
| Service Access<br>(See Note 1)          | LAN           | Midnight (12:00AM)       | Continuous                              | Auto extraction not available. (Manual only)  |
| Service SQL<br>(See Note 1)             | Modem         | Not available using BMDM | Autopolling not available (Manual only) | Auto extraction not available. (Manual only)  |
| Service SQL<br>(See Note 1)             | RS-232        | Not available using BMDM | Continuous                              | Auto extraction not available. (Manual only)  |
| Service SQL<br>(See Note 1)             | LAN           | Not available using BMDM | Continuous                              | Auto extraction not available. (Manual only)  |

Note 1: End-user use of a computer set as Service type is not recommended.  
 Note 2: Status and data copy and delete functions are the same for manual extraction.

**Figure 36. Computer Types: Backup, Polling and Extraction Table**

## 10. Understanding System Installation

This section describes how to set up the BMDM program and put the MPM or BDS monitor into operation. To install the MPM or BDS, refer to the *Installation Instructions* manual, then read this section before placing the system into service.

You should initially configure monitor settings on-site through the front or rear panel RS-232 Local port during installation. You may change programmable settings later.

New monitors have location, battery, and string names blank and auto call-out and alarms disabled. This prevents nuisance alarms and unintentional communication during setup. The location, battery, and string names must be unique for each system, known to the user, and correspond between the monitor and calling computer for a connection to occur.

The MPM monitor loses communication with a locally-connected computer during modem handshaking when a monitor calls out. After connection, normal operation resumes.

### 10.1. Connecting Using a Local Computer

The following describes how to set up an MPM or BDS monitor for use with a Local computer when a Central computer is being used off-site.

| To set up the system . . .  | If you need more help, refer to               |
|---|---|
| 1. Install the Data Manager as a Local computer.                                | Installing the Data Manager (BMDM) Software.  |
| 2. Set communication parameters for a direct connect.                           | Communication Port Settings.                  |
| 3. Set up for a new system.   | Setting Up a New MPM or BDS System.           |
| 4. Direct connect the monitor to the computer.                                  | Local Port Connection for MPM or BDS.         |
| 5. Establish communication between the monitor and the computer.                | Connecting via the RS-232 Local Port.         |
| 6. Perform battery setup and set alarm thresholds, test intervals, and options. | Programming Battery Setup for the MPM or BDS. |
| 7. Synchronize the monitor to the Central computer.                             | Synchronizing Using the Check Settings.       |

The Local computer and monitor are now ready to operate.



## 10.2. Connecting Using a Central Computer

The following describes how to set up an MPM or BDS for use with a Central computer. You may set up an on-site or notebook computer as a Central computer, but there must be only one Central computer polling a monitor.

- If the Central computer is an on-site computer:

| To set up the system . . .   | If you need more help, refer to               |
|--|---|
| 1. Install the Data Manager as a Central computer.                               | Installing the Data Manager (BMDM) Software.  |
| 2. Set communication parameters.   | Communication Port Settings.                  |
| 3. Set up for a new system.  | Setting Up a New MPM or BDS System.           |
| 4. Direct connect the monitor to the computer.                                   | Local Port Connection for MPM or BDS.         |
| 5. Establish communication between the monitor and the computer.                 | Connecting via the RS-232 Local Port.         |
| 6. Synchronize the monitor to the computer. (MPM only)                           | Synchronizing Using the Check Settings.       |
| 7. Perform battery setup, and set alarm thresholds, test intervals, and options. | Programming Battery Setup for the MPM or BDS. |
| 8. Synchronize the monitor to the computer. (BDS only)                           | Synchronizing Using the Check Settings.       |

The Central computer and monitor are now ready to operate.

- If the Central computer is a remote (off-site) computer:

| To set up the system . . .                                   | If you need more help, refer to              |
|--|--|
| 1. Set up the monitor.                                       | Service Computer or Local Computer.          |
| 2. Install the Data Manager as a Central computer.           | Installing the Data Manager (BMDM) Software. |
| 3. Set communication parameters.                             | Communication Port Settings.                 |
| 4. Connect the computer modem to the telephone line.         |  |
| 5. Set up for a new system.                                  | Setting Up a New MPM or BDS System.          |
| 6. Establish communication between the monitor and computer. | Connecting via a Modem.                      |
| 7. Synchronize the monitor to the computer.                  | Synchronizing Using the Check Settings.      |

The Central computer and monitor are now ready to operate.

### 10.3. Connecting Using a Service Computer

The following describes how to set up a computer as a Service computer.

- If the Service computer is a direct connection (on-site) computer for setting up a new MPM or BDS monitor:  
(Use this option only if a Local computer is not available.)

| To set up the system . . .   | If you need more help, refer to               |
|--|---|
| 1. Install the Data Manager as a Service computer on a notebook (portable) computer. | Installing the Data Manager (BMDM) Software.  |
| 2. Set communication parameters.   | Communication Port Settings.                  |
| 3. Set up for a new system.  | Setting Up a New MPM or BDS System.           |
| 4. Direct connect the monitor to the computer.                                       | Local Port Connection for MPM or BDS.         |
| 5. Establish communication between the monitor and computer.                         | Connecting via the RS-232 Local Port.         |
| 6. Perform battery setup, and set alarm thresholds, test intervals, and options.     | Programming Battery Setup for the MPM or BDS. |
| 7. Synchronize the monitor to the computer.  | Synchronizing Using the Check Settings.       |

The Service computer and monitor are now ready to operate.

- If the Service computer is a direct connection (on-site) computer for viewing battery data, and a copy of the Central computer database is available:

| To set up the system . . .   | If you need more help, refer to              |
|--|--|
| 1. Install the Data Manager as a Service computer on a notebook (portable) computer. | Installing the Data Manager (BMDM) Software. |
| 2. Copy the database from the Central computer to the Service computer.              | Data Manager Database for file names.        |
| 3. Set communication parameters.   | Communication Port Settings.                 |
| 4. Direct connect the monitor to the computer.                                       | Local Port Connection for MPM or BDS.        |
| 5. Establish communication via the site selected from the String Status.             | Connecting via the RS-232 Local Port.        |

To view battery data, refer to *Viewing Battery and Monitor Status*.

- If the Service computer is a remote connection (off-site) computer for viewing battery data via telephone line, and a copy of the Central computer database is available:

| To set up the system . . .   | If you need more help, refer to              |
|--|--|
| 1. Install the Data Manager as a Service computer.                       | Installing the Data Manager (BMDM) Software. |
| 2. Copy the database from the Central computer to the Service computer.  | Data Manager Database for file names.        |
| 3. Set communication parameters.   | Communication Port Settings.                 |
| 4. Connect the computer modem to the telephone line.                     |  |
| 5. Establish communication via the site selected from the String Status. | Connecting via a Modem.                      |

To view battery data, refer to *Viewing Battery and Monitor Status*.

- If the Service computer is a remote connection (off-site) computer for viewing battery data via telephone line, and a copy of the central database is not available:

| To set up the system . . .   | If you need more help, refer to              |
|--|--|
| 1. Install the Data Manager as a Service computer.   | Installing the Data Manager (BMDM) Software. |
| 3. Set communication parameters.   | Communication Port Settings.                 |
| 2. Connect the computer modem to the telephone line.   |  |
| 4. Set the telephone number and the MUX ID number if required. (MPM only)  | Setting Up a New MPM or BDS System.          |
| 5. Set the telephone number, the MUX ID number if required, the string number and the configuration to the BDS. (BDS only) | Setting Up a New MPM or BDS System.          |
| 6. Establish communication via the Service location.   | Connecting via a Modem                       |
| 7. Synchronize the monitor to the computer.  | Synchronizing Using the Check Settings       |

To view battery data, refer to *Viewing Battery and Monitor Status*.

## 11. Understanding How Data is Stored

This section describes how the BMDM processes data and how the MPM or BDS stores the data. For details about how the BMDM creates and backs up database files, refer to *Understanding Polling, Extraction and Backup*.

### 11.1. Data Storage in the MPM

Data in the MPM is stored in nonvolatile E<sup>2</sup> memory, which retains about a year's worth of typical data. Collected data is stored until transferred to the Central or Local computer. This same memory stores setup and calibration data, which is backed up to the Central or Local computer during initial setup; this process is called synchronizing. Flash nonvolatile memory stores uploads of new MPM firmware. You can upgrade the firmware on-site or remotely.

The MPM stores these kinds of data:

**Alarms** - 100 records that show when a parameter went into alarm and left alarm, and maximum alarm level. Older records in memory are overwritten with more recent events. (Older records uploaded to a computer are not overwritten.)

**Discharge** - 20.5kb of nonvolatile memory are allocated for discharge data. Memory size and the number of cells monitored limit the data stored: many short or a few full discharges.

Each data point requires ten bytes of memory. If the discharge storage threshold is 10mv, and a typical discharge for 24 cells was to discharge 1.875 volts per cell, and the cell voltage was to drop to 1.96 volts with load applied, you would calculate the memory required as:

$$20,500 \text{ bytes} / ( (( (1.96-1.875) / 0.010 \text{ volts}) \times 10 \text{ bytes}) \times 24 \text{ cells}) = 10 \text{ discharges}$$

This worst case assumes all cells discharge to 1.875 volts. Increasing the discharge storage threshold can raise the number of discharges the monitor can store. Time stamped data allow a full analysis of battery performance during the event.

**Resistance** - 1.6kb of nonvolatile memory are allocated for resistance data. Memory limits the number of resistance tests stored. To calculate the number of resistance records available, use the formula:

$$1600 \text{ bytes} / ( (\text{Number of cells} \times 2) + 10)$$

For a string of 24 cells, there is enough memory for 27 records.

**Historical Data** - With 1.65kb of nonvolatile memory available, historical readings of cell voltage, temperature, overall voltage, and current are taken at intervals set under Battery Setup. To calculate the number of historical records available, use the formula:

$$1650 \text{ bytes} / ( (\text{Number of cells} \times 2) + 18)$$

For a string of 24 cells, there is enough memory for 25 records.

## 11.2. Data Storage in the BDS

Data in the BDS is stored in nonvolatile SRAM memory, which retains about nine month's worth of typical data. Collected data is stored until transferred to the Central or Local computer. This same memory stores setup and calibration data, which is backed up to the Central or Local computer during initial setup; this process is called synchronizing. Flash nonvolatile memory stores uploads of new BDS firmware. You can upgrade the firmware on-site or remotely.

The BDS stores these kinds of data:

**Alarms** - 100 records that show when a parameter went into alarm and left alarm, and maximum alarm level. Older records in memory are overwritten with more recent events. (Older records uploaded to a computer are not overwritten.)

**Discharge** - 160kb of nonvolatile memory are allocated for discharge data. Memory size and the number of cells monitored limit the data stored: many short or a few full discharges.

Each data point requires ten bytes of memory. The discharge storage threshold is 10mv. If a typical discharge for 192 cells was to discharge 1.65 volts per cell, and the cell voltage was to drop to 1.96 volts when load was applied, you would calculate the memory required as:

$$160,000 \text{ bytes} / ( ((1.96-1.65) / 0.010 \text{ volts}) \times 10 \text{ bytes}) \times 192 \text{ cells} = 2.7 \text{ discharges}$$

This worst case assumes all cells reach end voltage. Time stamped data allow a full analysis of battery performance during the event.

**Resistance** - 10.6kb of nonvolatile memory are allocated for resistance data. Memory limits the number of resistance tests stored. To calculate the number of resistance records available, use the formula:

$$10,600 \text{ bytes} / ( (\text{Number of cells} \times 4) + 30)$$

For a string of 192 cells, there is enough memory for 12 records.

**Historical Data** - With 32kb of nonvolatile memory available, historical readings of cell voltage, temperature, overall voltage, and current are taken at intervals set under Battery Setup. To calculate the number of historical records available, use the formula:

$$32,000 \text{ bytes} / ( (\text{Number of cells} \times 2) + 38)$$

For a string of 192 cells, there is enough memory for 75 records.

## 12. Understanding the Time to Go Algorithm

The battery Amp-hour (Ah) rating indicates the current (Amps) the battery can deliver over time (hours). For example, if a battery can deliver 5 Amps for 20 hours, it has a 100Ah rating. However, because discharge rate, temperature, and age affect battery capacity, Amp-hour rating can vary. A 100Ah battery that discharges over two hours might deliver only 56Ah. To compensate for this nonlinearity, you can use Peukert's Equation to estimate the Amp-hours remaining (or time to go) in a lead-acid battery based on discharge rate. If capacity testing is not an option, you can get the numbers for the equation from the discharge curves on manufacturers' data sheets, but the result will be less accurate than that obtained by using values gotten from actual capacity testing.

Peukert's Equation demonstrates how the Amp-hour capacity of a lead-acid battery varies according to rate of discharge. Rather than  $Ah = I \times T$ , the Peukert Equation reads:

$$C = I^n t$$

where constant  $C$  = the theoretical capacity of the battery,  $I$  = the discharge current in Amps,  $t$  = the time of discharge, and the exponent  $n$  = the Peukert number, a constant for the given battery. The exponent value can vary from greater than 1 to about 2. Values closer to 1 indicate a well performing battery; higher numbers indicate more capacity diminishes when the battery is discharged at higher rates.

Calculate the Peukert number by determining the capacity obtained at any two discharge rates:

$$n = \frac{(\log t_2 - \log t_1)}{(\log I_1 - \log I_2)}$$

where  $t_1$  is the hours of discharge at current  $I_1$  and  $t_2$  is the hours of discharge at current  $I_2$ .

To determine the Peukert number, discharge the same, fully charged battery twice at convenient discharge rates.

First, discharge the battery below the normal discharge rate. When the battery reaches discharge level, as determined from manufacturers' spec sheets, note the Ah consumed and the time the discharge took. Calculate the average Amps by dividing the Ah consumed by the length of time. For example, if the Ah consumed was 300 and the discharge took 50 hours, the average Amps equals 6. Use this value for  $I_1$  in the above formula and use the time the discharge took for  $T_1$ .

Charge the battery and repeat the process for a discharge rate higher than normal. Use the resulting values for  $I_2$  and  $T_2$  in the formula. Calculate the value for  $n$  to obtain an exponent accurate for your normal rate. Use this exponent  $n$  in the Peukert Equation to estimate time remaining during a normal discharge.

Performing two capacity tests to obtain the variables for Peukert's Formula can yield accuracy as good as 0.5% to 1%.


Although the Time to Go calculation may offer a close estimate, many other battery parameters affect run time as a battery ages. These aging phenomena show up as different failure modes and influence the accuracy of the Time to Go calculation. Vertiv recommends that you not rely solely on the Time to Go data for battery run time and that you only consider the Time to Go as an estimate.

To activate the Peukert's Equation algorithm in the BMDM program, open the Setup|Battery|Discharge dialog box and assign values in the Time to Go area.

## 13. Selecting Preferences

String Status > Setup|Preferences

At any time, you may open the Preferences dialog box to change program appearance or activate options.

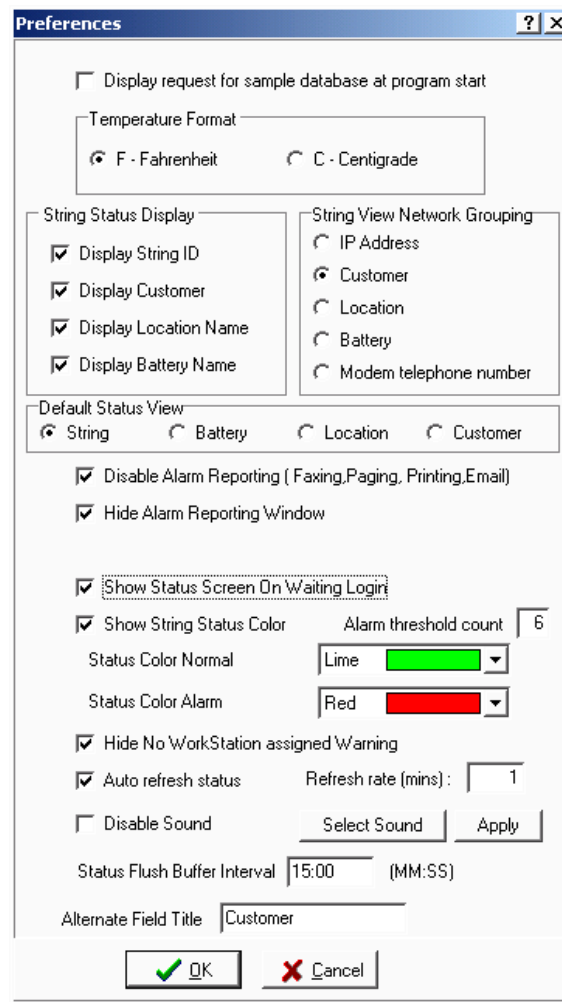

**Figure 37. Preferences**

**Display Sample Database** - To display the message, "Do you want to load a sample database?" at BMDM program start, select this box.

**Temperature Format** - Select a temperature format. Do not change format after setting up the system. Stored temperatures will not convert between F (Fahrenheit) and C (Centigrade or Celsius).

**String Status Display area** - Selecting **Display String ID**, **Display Customer**, **Display Location Name** or **Display Battery Name** displays these columns on the String Status screen.



**String View Network Grouping** area - When connected to a string, a drop-down list at the top of the screen shows the name of the string being displayed. On Preferences, clicking **IP Address, Customer, Location, Battery** or **Modem telephone number** filters the list by these parameters. The default filter is IP Address. These filters are active for network connection only.

**Default Status View** area - Select an option button to have the default String Status screen display Battery Status, Location Status or Customer Status at program start.

**Disable Alarm Reporting** - Select to globally disable all alarm report functions. This selection overrides alarm settings on Setup\System\Reporting, which apply to specific strings.

**Hide Alarm Reporting Window** - Select to stop the report alarm box from popping up.

**Detail Executive Report Enable** - Only appears on a Central computer. Select to automatically generate daily executive reports, which are saved in PDF format at Program Files\Alber\MPM Manager\Web \String Summary or System Summary. These reports are viewed when connecting via the Web interface.

**Show Status Screen on Waiting Login** - Check to keep the String Status screen displaying when no user is logged in.

**Show String Status Color** - To have color indicate status on the String Status screen, select this box, an alarm threshold count, and a color.

**Alarm Threshold Count** - This is the number of alarms required on a string to make the Normal color change to the Alarm color.

**Status Color Normal** - A good status, with no alarms, displays in the color selected from this Status Color Normal drop-down box.

**Status Color Alarm** - A string in alarm with the number of alarms selected in the Alarm Threshold Count box displays in the color selected in this Status Color Alarm drop-down box.

**Hide No Workstation Assigned Warning** - Only appears on a Workstation computer. Check to hide a warning at startup if no workstation ID has been assigned.

**Auto Refresh Status** - Select to have the String Status screen update from the SQL database. This lets multiple computers get the latest status with only one computer polling.


**Refresh Rate (minutes)** - Select how often the computer polls the SQL database for the auto refresh feature described above.


**Disable Sound** - Select to globally disable alarm sounds. Not selecting enables a sound upon an alarm. You must also check Sound Alarm on Setup\System\Reporting, which applies to specific strings. Refer to *Setting Up a New MPM or BDS System*. To select an alarm sound, click **Select Sound** on Preferences and choose a sound. Click Open then **Apply** to hear the sound. **Note:** When in Battery setup and remote reporting is disabled, the alarm threshold must be set to one. The string status is set to have an alarm and the string status color is automatically applied.

**Status Flush Buffer Interval** - Select an interval in minutes and seconds to have the polling status saved to the database. The default interval is 15 minutes.

**Alternate Field Title** - Type a name in this field to assign the Customer field title another name, such as Region or Subdivision. The new name will appear in various program areas where the word Customer appeared.

## 14. Setting Communications

String Status > Setup communication  or Setup|Communication  
 Select this dialog box to define communication settings.

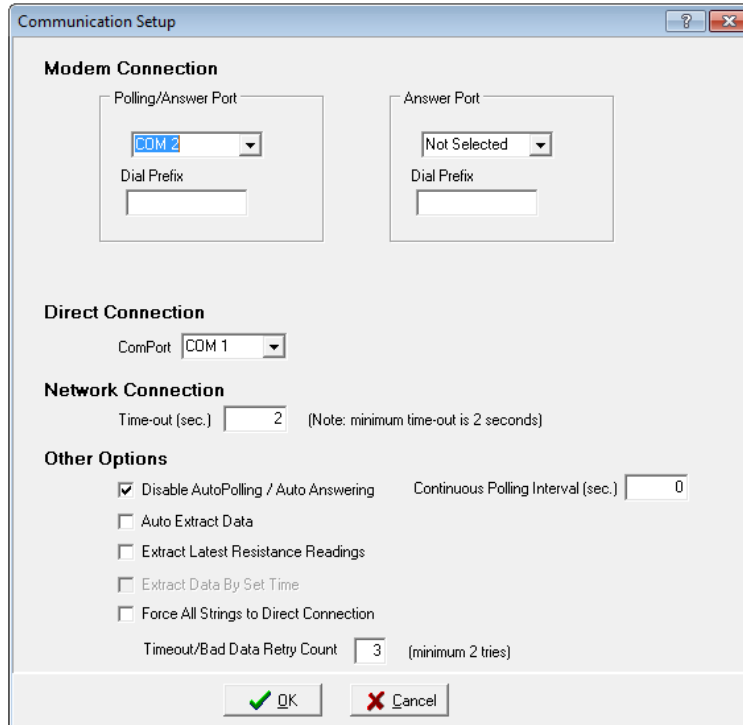

**Figure 38. Communication Setup**

**Polling/Answer Port and Answer Port** - Using the drop-down lists, define one or two modem COM ports for monitor communication. If you define two COM ports, one port calls and polls the monitors, and the other answers calls from the monitors. If you define only one port, it both polls and answers. Define one port from the Polling/Answer Port list and choose Not Selected under Answer Port. For larger systems, use two modems to allow simultaneous polling and remote reporting.

**Dial Prefix** - This is the number, usually a 9, that accesses an outside phone line. Type at least two commas after the number for a time delay. Leave this box blank if the computer directly connects to an outside line.

**Direct Connection - Com Port** - If you selected the Direct button on System Setup|Link, select a COM port. If any strings are configured as Direct Connect, then select the Com Port number.

**Network Connection - Time Out** - This sets the time allowed for connecting to the network, typically 2 seconds.

**Disable Auto Polling / Auto Answering** - For computer–monitor connection via RS-232 or network, not selecting this box enables continuous polling. With continuous polling, the BMDM polls monitor string status at the time interval set in the Continuous Polling Interval box. Refer to *Understanding Polling, Extraction and Backup* for definitions of status and data.

**Extract Latest Resistance Readings** – enabling this option, allows you to view the latest resistance readings when resistance history has previously been extracted by a central computer. This allows you to view the latest resistance readings without the central computer database.

**Continuous Polling Interval (seconds)** - If Disable Auto Polling / Auto Answering is not selected, set the time interval that polling occurs. The BMDM continually polls monitor string status at this interval, typically 15 seconds.

**Auto Extract Data** - Automatic data extraction removes (Central computer) or copies (Local computer) data from monitor memory when polling each monitor. Normally, select Auto Extract Data for a Central computer; otherwise, you will have to manually call each site and extract data. Refer to *Understanding Polling, Extraction and Backup* for polling details.

**Extract Data by Set Time** - To extract data at a time other than midnight, select Auto Extract Data, then select this box and type a time in the Extract Time field on System Setup Link for each string.

**Force All Strings to Direct Connection** - Use with a Local or Service computer using a database that has modem or network connections. Select this box to connect to an MPM or BDS using the USB or RS-232 port. This feature saves having to modify the database Link connections and is useful when temporarily using a Local or Service computer.

**Timeout / Bad Data Retry Count** - This is the number of times the program attempts to poll data from a monitor if previously unsuccessful.

## 15. Setting Up an Email Account

String Status > Setup|Email Setup

Use Email Setup to set up the account under which the BMDM sends emails. This dialog box contains the global Email Disable selection.

**Figure 39. Email Setup**

**Outgoing Mail Server (SMTP)** - Specify the mail server for outgoing messages. Obtain this from your Internet service provider or network administrator.

**From Name** - Type the name that will appear in the recipient's email From field.

**From Email Address** - Type the email address the BMDM will use as a sender.

**From Domain** - Type the mail server domain name of the outgoing mail server.

**My outgoing server requires authentication** - Select this box if your email requires ESMTTP. This specifies that you must log on to your outgoing mail server.

**Account** - Type the mail server account user name or number.

**Password** - Type the password for the account.


**Disable Email** - This selection globally disables all BMDM email settings. To not send any alarm or other BMDM emails, check this box.

**Test** - To send an email to test the setup, click the Test button. The Test Email dialog box appears.

### 15.1. Testing Email

String Status > Setup|Email Setup|Test


The Test Email box tests the settings on the Email Setup dialog box.

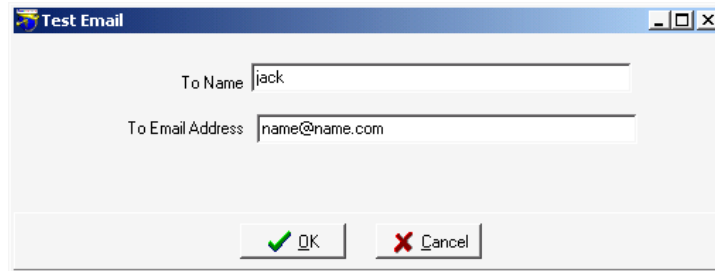

**Figure 40. Test Email**

At **To Name** and **To Email Address**, type the recipient's name and email address. Click OK to send the email and close the box. Confirm the email is received at the location to which it was sent.

## 16. Setting Up a New MPM or BDS System

String Status > Setup system  or Setup|System

BMDM setup involves defining what systems exist. Each system setup must identify customer, location, contacts, battery and string information, and other data. All System Setup dialog boxes except String are identical for both the MPM and BDS.

### 16.1. System Setup: General Notes

Depending on security settings, System Setup is password protected. After selecting Setup|System, type the password and click OK. The password times out after five minutes or you may click the top left Password Active to disable it. If the password is incorrect, the System Setup boxes appear, but New, Save and Delete are inactive. You can have different Battery Setup and System Setup passwords. Refer to *Default Passwords*.

The first time the String Status screen appears, no status information exists. As you add new systems, they are listed with Unknown status. To set up a new system, select Setup|System, click New on the Customer dialog box, and complete the System Setup boxes. Systems previously set up are listed on String Status. When you click Setup|System, the name highlighted in the list appears in the Customer dialog box. Click New to add a new system (new customer).

**CAUTION:** If you fail to click the New button, you will overwrite the previously saved customer information.

The New button on the Location, Battery, and String boxes adds a new location under an existing customer, a new battery under an existing location, or a new string under an existing battery.

To change names or information for an existing system, use the Setup|System dialog boxes. If BMDM and monitor location, battery or string names do not match, connection fails and an error message appears. Blank spaces or hyphens can affect a name.

During system setup, if you close before completing and saving the Customer, Location, Battery and String details, the names will not appear on String Status. To resume editing, click Setup|System, select the Customer, Location, Battery or String box, and choose the name from the Name drop-down list.

To display the String ID, Customer Name, Location Name and Battery Name columns on the String Status screen, select the boxes on Setup|Preferences.

Depending on which System Setup box is displayed, clicking Delete removes all information for the displayed customer, location, battery or string. All associated set up data will be permanently lost.

## 16.2. System Setup: Workstation

String Status > Setup\System\Workstation

Use the Workstation dialog box to create a workstation name for a Local or Service computer. The Workstation tab appears only if an SQL database is selected. Refer to *Assigning a Workstation Name* for setup details.

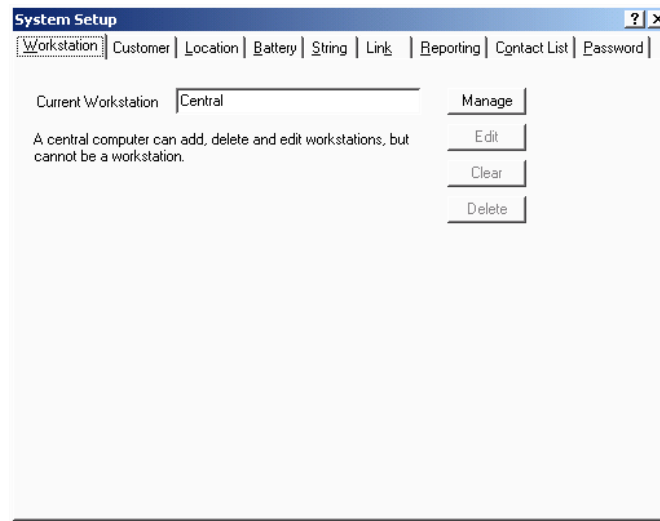


Figure 41. System Setup - Workstation

## 16.3. System Setup: Customer

String Status > Setup\System\Customer

Use the Customer dialog box to add new customer details.

The Customer tab and *Customer* field names may be changed to another name, such as Region, by selecting Setup\Preferences, then typing a new name at Alternate Field Title.

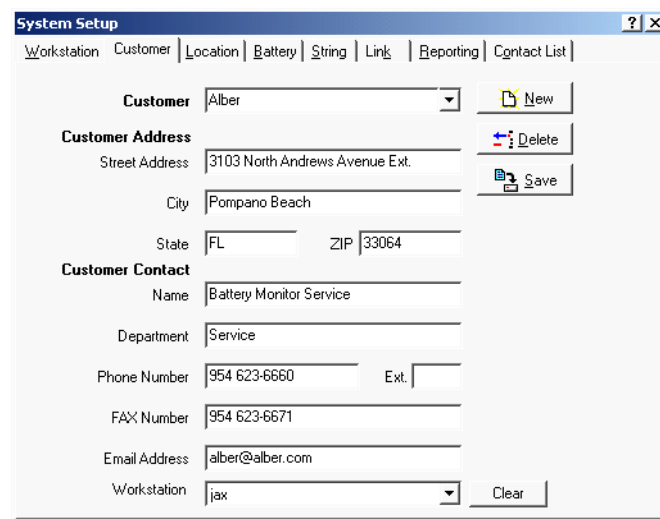


Figure 42. System Setup - Customer



**CAUTION:** Clicking the Delete button deletes all information for the displayed customer. All locations, batteries, and strings set up for the customer will be lost.

**Customer Name** (required) - To add new customer details, click New and type the customer name. If monitoring only one customer, you may identify a region, division, etc. Complete the **Customer Address** details.

**Note** You cannot have two identical customer names. Selecting different customers changes the available locations on the Location dialog box.

**Customer Contact** - Type the name and contact information of the person at the customer location responsible for the battery system. This name may be used for reports faxed using Setup\System\Reporting.

**Workstation** - To assign this customer to a workstation, select a workstation from the drop-down list. By doing this, only the assigned workstation sees the customer and battery strings. If a workstation name is not assigned, any computer not assigned as a workstation can view this customer name.

**Clear** - To deselect the workstation assigned to this customer, click the Clear button. This does not delete the name from the Workstation drop-down list.

When finished, click Save to save to the database or click the Location tab to continue setup.

#### 16.4. System Setup: Location

String Status > Setup\System\Location

Before completing the Location dialog box, confirm the correct customer is selected on the Customer box.

The screenshot shows the 'System Setup' dialog box with the 'Location' tab selected. The 'Location Name' is 'Pompano Beach Lab'. The 'Location Address' section includes 'Street Address' (3103 No. Andrews Ave Ext), 'City' (Pompano Beach), 'State' (FL), and 'ZIP' (33064). The 'Location Contact' section includes 'Name' (Engineering), 'Department' (Engineering), 'Phone Number' (954 623-6660), 'Ext.' (empty), 'FAX Number' (954 623 6671), and 'Email Address' (alber@alber.com). The 'Customer' dropdown is set to 'Alber'. Buttons for 'New', 'Delete', and 'Save' are located on the right side of the dialog.

**Figure 43. System Setup - Location**

**CAUTION:** Clicking the Delete button deletes all information for the displayed location. All batteries and strings set up for the location will be lost.

**Location Name** (required) - Type the name and address where the monitor is installed. Location, battery, and string names are used with each other to identify the strings and hardware to which the monitor is connected.

**Note** To change the location name after monitor setup, use these Setup\System dialog boxes. If database names do not match names in the monitor, connection fails. Blank spaces or hyphens can affect a name.

**Note** You cannot have two identical location names under the same customer name. Selecting different locations changes the available batteries on the Battery dialog box. This location name must match the location name in the database of the connecting computer.

**Location Contact** - Type the name and contact information of the person at the monitor location responsible for the battery system. This name may be used for reports faxed using Setup\System|Reporting.


**Customer** (or alternate field name) - Normally, this field is not changed. To move the location name and related battery and string setup data to a different customer, select a name from the drop-down list. This is useful when converting to a large SQL database where many locations are under a few customers. By adding customer names (or regions, etc.), the data becomes more manageable.

When finished, click Save or click the next (Battery) tab.

### 16.5. System Setup: Battery

String Status > Setup\System|Battery

The Battery dialog box assigns a battery name, cell and string parameters, and cell numbering on the String View screen. Before completing this dialog box, confirm the correct customer and location are selected on the Customer and Location boxes.

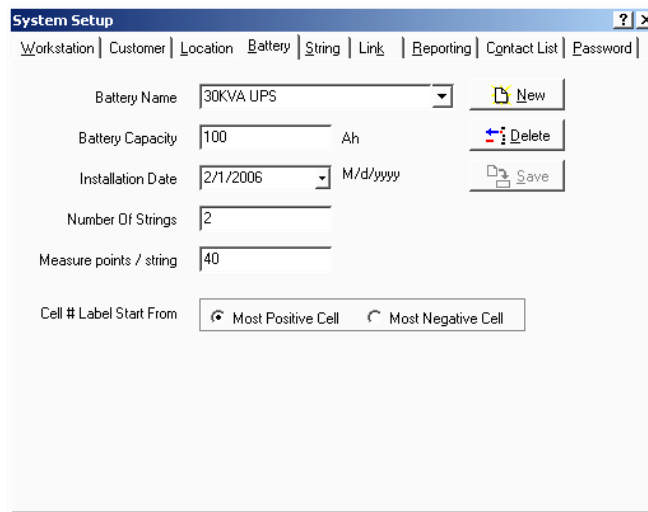

**Figure 44. System Setup - Battery**

**CAUTION:** Clicking the Delete button deletes all information for the displayed battery name. All strings set up for the battery will be lost.

**Battery Name** (required) - Assign a unique name to the battery. Location, battery, and string names identify the strings and hardware to which the monitor is connected.

**Note** To change the battery name after monitor setup, use these Setup\System dialog boxes. If database names do not match names in the monitor, an error message appears.

**Note** You cannot have two identical battery names under the same location name. Selecting different batteries changes the available strings on the String dialog box. This battery name must match the battery name in the database of the connecting computer.

**Battery Capacity** - Type the combined capacity of all parallel strings in the battery (in amp-hours). This is the Amp-hour rating of the battery at the eight hour rate.

**Installation Date** - Type the battery installation date or select from the drop-down calendar. If desired, change the computer date format under Windows as follows.

1. Click Start|Settings|Control Panel, then click Regional Settings.
2. Click the Date tab, then select the date format from the Short Date Style drop-down menu.
3. Click OK and exit the Regional Settings dialog box.

**Number of Strings** (required) - Type the number of parallel strings within the battery.

**Measure Points / String** (required) - Type the number of cells or modules per string.


**Cell # Label Start From** - This allows the reverse numbering of cells. Select Most Negative Cell when the cells are numbered such that Cell 1 is the most negative.

When finished, click Save or click the next (String) tab.

### 16.6. System Setup: String

String Status > Setup|System|String

The String dialog box assigns a string name, configuration, model and manufacturer names, capacity, and MPM string names. Before completing this dialog box, confirm the correct customer, location, and battery are selected on the Customer, Location, and Battery boxes. The Start Cell # box for MPM changes to String # when BDS is selected. See below.

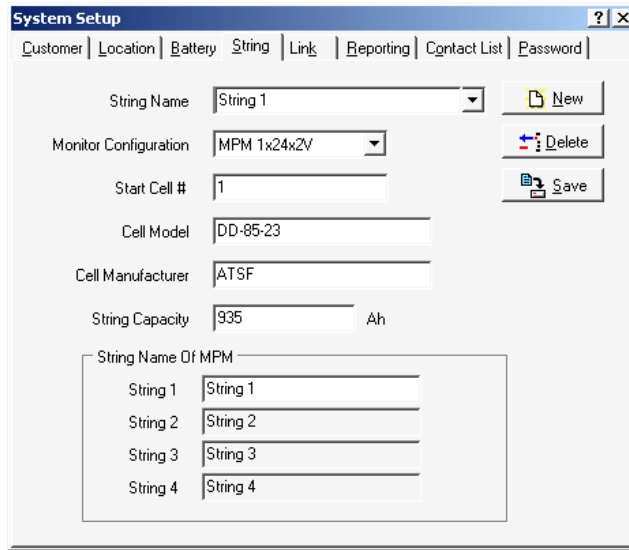

**Figure 45. System Setup - String (MPM shown)**

**CAUTION:** Clicking the Delete button deletes all information for the displayed string name. The string name and string data will be lost.

**String Name** (required) - Type a name for each MPM or names for each string for a BDS. Location, battery, and string names identify the strings and hardware to which the monitor is connected.

**Note** To change the string name after monitor setup, use these Setup|System dialog boxes. If database names do not match names in the monitor, an error message appears.

**Note** You cannot have two identical string names under the same battery name. Selecting different strings changes selections on the Link and Reporting dialog boxes. This string name must match the string name in the database of the connecting computer.

**Monitor Configuration** (required) - Select a configuration from the drop-down list. To determine MPM hardware configuration, refer to the model number in the chart in *MPM Configuration Options*.

Monitor Configuration: MPM 1x24x2V  
 Start Cell #: 1

**Start Cell # (MPM)** (required) - Type the first cell number for the first string in the battery being monitored by the MPM.

Monitor Configuration: BDS 1x40x12V  
 String #: 1

**String # (BDS)** (required) - Up to 16 DCM units can be assigned the same string number, and the BDS can control up to eight strings. Type the string number of the DCM units to which the information being entered applies.

**Cell Model and Cell Manufacturer** - Type the cell model number and manufacturer.

**String Capacity** - Type the capacity of the individual string (in amp-hours).

**String Name of MPM (MPM only)** - Assign individual string names within the MPM. The fields available depend upon the monitor configuration selected. If the MPM has two or more strings, such as a 2 x 24, you may type names for each string. These names appear in reports where string names are used. The default names are String 1, 2, 3 and 4. Disabled for BDS.

When finished, click Save or click the next (Link) tab.

### 16.7. System Setup: Link

String Status > Setup|System|Link

The Link dialog box enables polling and sets computer to monitor connection. Before completing this dialog box, confirm the correct customer, location, battery and string are selected on the Customer, Location, Battery, and String boxes.

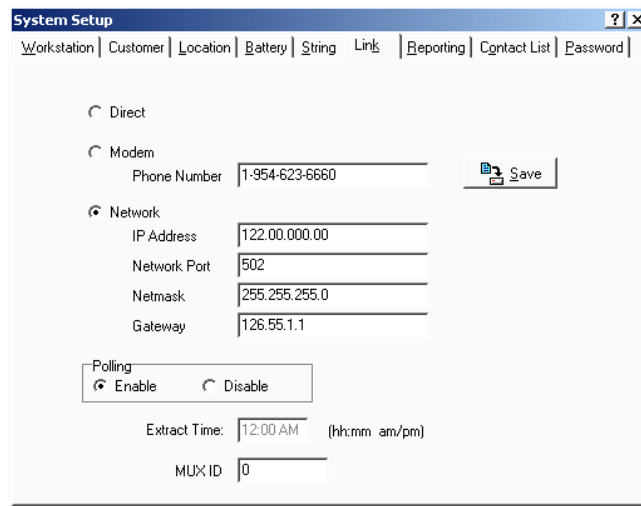


Figure 46. System Setup - Link

You must select either **Direct** or **Modem** or **Network**.

**Direct** - Select if the monitor directly connects to a computer serial port. On the Setup|Communication box, define the COM Port at Direct Connection.

**Modem** - Select if the monitor connects to the computer via modem. In **Phone Number**, type the phone number of the monitor that the Central computer calls (the number to which the monitor is connected). On Setup|Communication, define the COM Port at Modem Connection.

**Network** - Select if the monitor connects to the computer via network. Complete IP Address, Network Port, Netmask and Gateway (below).

**IP Address** - Type the IP address of the monitor. The IP Address is specific to the monitor (MPM or BDS Controller); it is not the IP address of the computer running the BMDM program.

**Network Port** - In this box, type 502. The TCP/IP address is used when you click Send Network Configuration on the Setup|Battery|General dialog box.

**Netmask and Gateway** - Type the monitor subnetmask number. Type the default gateway number used by the monitor. If using a local LAN, the gateway number can be left blank.

To transfer the IP, netmask, and gateway addresses to the MPM or BDS, click Send Network Configuration on Setup|Battery|General. This button is active and addresses can only be transferred when connected via RS-232 or modem, not network.

**Polling Enable or Disable** - These buttons allow polling on a per string basis, to avoid receiving error messages when a system is off-line. Select Enable to request monitor and battery status every 24 hours. During polling, if Auto Extract Data is selected on Communication Setup, data is copied to the Central computer database and deleted from monitor memory. Refer to *Understanding Polling, Extraction and Backup*.

**Extract Time:** If Extract Data by Set Time is selected on Communication Setup, type the data extraction start time in this field.

**MUX ID** (required) - Possible entries are 0 to 16. A zero indicates the MPM or BDS is not connected to a multiplexer. Device 1 to 16 corresponds to the multiplexer rear panel connection ports. Refer to the *Serial Port Multiplexer User's Guide*.

When finished, click Save or click the next (Reporting) tab.

## 16.8. System Setup: Reporting

String Status > Setup\System|Reporting

The Reporting dialog box selects the devices the Central or Local computer contacts when the monitor reports during continuous polling or calls in an event. Before completing this dialog box, confirm the correct customer, location, battery, and string are selected on the Customer, Location, Battery, and String boxes. A Service computer cannot open the Reporting box.

**Simultaneous Polling** - If two computers are set up to poll the hardware (a Server/Central and a Workstation/Local), set up only one to perform the reporting, emailing, and faxing; otherwise, both computers will attempt to perform this when an alarm is identified.

**Figure 47. System Setup - Reporting**

**Page On Alarm** - Select to display the Page Report Alarm Event box on error and send alarm notification to a pager. Click a button for the kind of pager being used: numeric or alphanumeric.

With a numeric pager, a six digit code is sent:

- Digit 1: Report Type
  - 1 = Discharge
  - 2 = Alarm
  - 3 = Warning

Digits 2 to 6: String ID

For example, to report an alarm in String ID 1, the pager would display 200001.

An alphanumeric pager displays the location, battery, and string names and alarm detail.

**Access Telephone Number** - Type the pager phone number if numeric or the modem ID number if alphanumeric. If using an alphanumeric pager, use an access number that has a TAPI interface that communicates using a modem instead of voice. For example, SkyPage's access number is (800) 759-6366. This can also be the TAPI phone number for cellular phones if the cell phone supports text messaging.

**Pager PIN Number** - Type the pager private ID (PIN) number if needed or the cell phone number if using text messaging.

**Delay (Seconds)** - If using a numeric pager, type the delay in seconds before the numeric message is sent.

**Fax Alarm Event** - Select to display the Fax Report Alarm Event box on error and send alarm notification to a fax machine. Check a box to direct the report to the **Customer Contact** or **Location Contact**. The system dials the fax telephone number on the Customer or Location dialog box.

**Email Alarm Event** - Select to display the Email Alarm Event box on error and send alarm notification via email. Check a box to direct the report to the **Customer Contact** or **Location Contact**. The system sends to the email address on the Customer or Location dialog box. Confirm global Disable Email is not checked on the Email Setup dialog box.

**Print Alarm Event** - Select to display the Print Report Alarm Event box on error and send alarm notification to a printer. To select a default printer, at the String Status screen, click File|Printer Setup. If alarms do not print when received, change the **Spool Data Format** setting. On Windows, click Start|Settings|Printers. Right click the icon for your printer, then click Properties|Details|Spool Settings. At Spool Data Format, select EMF or RAW.

**Sound Alarm** - Select to enable an audible alarm for this string when an alarm event occurs. Select the alarm sound by clicking Select Sound under Setup|Preferences. To enable alarm reporting and alarm sounds, confirm global Disable Alarm Reporting and Disable Sound are not selected on the Preferences dialog box.

**Contact** - To contact a person from any contact list, select the check box and choose a name from the drop-down list. This name is in addition to names in a group contact list.

**Contact List** - To contact a group of people from a contact list, select the check box and choose a group contact name from the drop-down list. Members of the group will be contacted based on the Contact List Mode.

The **Contact List Mode** area has the following selections.

**All** - Upon an alarm event, contact all names in the contact list, whether on-duty or off.

**First Available** - Upon an event, contact the first name on-duty in the contact list. No further action is taken.

**All Available** - Upon an event, contact all names on-duty in the contact list. No further action is taken.



**Sequential / Ack** - Upon an event, contact the first name on-duty in the contact list and wait a preset time for acknowledgement. If none is received, contact the next available person in the list and wait for acknowledge. Continue and repeat the sequence until acknowledgement is received or until the list is gone through one time.

**Note** You must select Acknowledge in the Alarm Button area on Setup|Battery|General.

**Wait Time** - Click the box and type a time (in hours and minutes) that the program waits before calling the next person when Sequential/Ack is selected.

Include **Warnings**, **Memory Full** and **Inactive** - Select these check boxes to contact and require acknowledgement when these events occur and Sequential/Ack is selected. If not selected, event notice is sent only once and no acknowledgement is required.

When finished, click Save or click the next (Contact List) tab.


### 16.8.1. Using a Cell Phone for Text Messaging

You may use a cell phone to receive text messages. Type your provider's TAP telephone number in the Access Telephone Number field and type your cell phone number in the Pager PIN Number field. You can find cell phone provider TAP telephone numbers at [www.notepager.com/tap-phone-numbers.htm](http://www.notepager.com/tap-phone-numbers.htm). Not all cell phone providers offer this text messaging service. The Email or Pager fields can also send text messages to a cell phone.

## 16.9. System Setup: Contact List

String Status > Setup|System|Contact List

The Contact List dialog box selects persons to be contacted during an alarm reporting event, in addition to those listed on the Customer and Location dialog boxes.

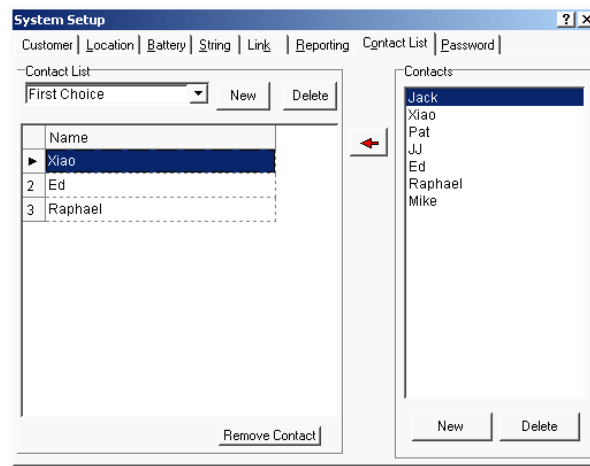

**Figure 48. System Setup - Contact List**

**Contact List** - Each Contact List (group) name contains a group of persons to contact. To create a new Contact List name, click New in the left Contact List panel. The Contact List Name dialog box appears. At **List Name**, type a name, then click OK.

**Delete** (left panel) - To remove a contact list (group) name from the list, click a name from the drop-down Contact List and click Delete. This permanently deletes the contact list.

**Delete** (right panel) - To remove a person's name from the list of potential contacts, click a name on the right Contacts list and click Delete. This permanently deletes the contact.

**Remove Contact** - To remove a person's name from the group Contact List, click the person's name to highlight it, then click Remove Contact.

**Sort Names** - To move a person's name up or down the list to change call priority, click and drag the number before the name up or down the list onto another number.

**Contacts** - To type persons' names to add to a list of potential contacts, click New on the right panel on the Contact List dialog box to open the Contact Information box.

The screenshot shows the 'Contact Information' dialog box with the following fields and options:

- Name: [Text Field]
- Active:  Active
- Always Contact:  Always Contact
- Page On Alarm:  Page On Alarm:  Numeric  Alpha
- Save: [Button]
- Access Telephone Number: [Text Field]
- Pager PIN Number: [Text Field]
- Delay (Seconds): [Spin Box] 0
- FAX Alarm Event:  FAX Alarm Event: Fax Number [Text Field]
- Email Alarm Event:  Email Alarm Event: Email Address [Text Field]
- Schedule:  24/7

| Day | On 24 Hours              | Day Off                  | Start Time | Time On |
|-----|--------------------------|--------------------------|------------|---------|
| Sun | <input type="checkbox"/> | <input type="checkbox"/> | 12:00 AM   | 00:00   |
| Mon | <input type="checkbox"/> | <input type="checkbox"/> | 12:00 AM   | 00:00   |
| Tue | <input type="checkbox"/> | <input type="checkbox"/> | 12:00 AM   | 00:00   |
| Wed | <input type="checkbox"/> | <input type="checkbox"/> | 12:00 AM   | 00:00   |
| Thr | <input type="checkbox"/> | <input type="checkbox"/> | 12:00 AM   | 00:00   |
| Fri | <input type="checkbox"/> | <input type="checkbox"/> | 12:00 AM   | 00:00   |
| Sat | <input type="checkbox"/> | <input type="checkbox"/> | 12:00 AM   | 00:00   |

**Figure 49. System Setup - Contact Information**

String Status > Setup\System>Contact List|New (on right panel)

Use the Contact Information dialog box to add names to the list of potential contacts.

**Name** - Type the contact person's name.

**Active** - Do not select if the person is unavailable. For example, the person is on vacation.

**Always Contact** - Select to always contact the person, regardless of settings elsewhere. The Active check box must be selected.

**Page On Alarm** - Select to display the Page Report Alarm Event box on error and send alarm notification to a pager. Click a button for the kind of pager being used: numeric or alphanumeric.

With a numeric pager, a six digit code is sent:

- Digit 1: Report Type
  - 1 = Discharge
  - 2 = Alarm
  - 3 = Warning

Digits 2 to 6: String ID

For example, to report an alarm in String ID 1, the pager would display 200001.

An alphanumeric pager displays the location, battery, and string names and alarm detail.

**Access Telephone Number** - Type the pager phone number if numeric or the modem ID number if alphanumeric. If using an alphanumeric pager, use an access number that has a TAPI interface that communicates using a modem instead of voice. For example, SkyPage's access number is (800) 759-6366.

**Pager PIN Number** - Type the pager private ID (PIN) number if needed.

**Delay (Seconds)** - If using a numeric pager, type the delay in seconds before the numeric message is sent.

**Fax Alarm Event** - Select to send alarm notification to a fax machine. At **Fax Number**, type the fax machine phone number the system will dial.

**Email Alarm Event** - Select to send alarm notification to the person via email. Type an address in the **Email Address** box. Confirm Disable Email is not checked on the Email Setup dialog box.

Use the **Schedule** area to build the time on / off for the person.

**24/7** - Select if the person is on call 24 hours a day, 7 days a week or, in the Sunday through Saturday grid, you may select the following:

**On 24 Hours** - Select if the person is on call the entire day.

**Day Off** - Select if the person is not available that day.

**Start Time** - If the person is available part of the day, click the Start Time field and type the time availability starts. You may press Enter to step to the Time On field.

**Time On** - Click this field and type the *number of hours* the person is available. You may press Enter to step to the next Start Time field.

When finished, click Save to return to the Contact Lists dialog box. To edit information after saving, double-click the name in the right side Contacts list.


**Add Names to Contact List** - To add people to a Contact List, first select a group name from the drop-down Contact List. Next, click a person's name in the Contacts list on the right, then either click the red arrow or right click the name and select Add to List. The name appears in the list on the left.

If you want to add new names to the Contact or Contact List boxes on the Reporting dialog box, click the Reporting tab. If not and you are finished, click Save and close the dialog box. If you want to change the password, click the Password tab.

### 16.10. System Setup: Password

String Status > Setup|System|Password

Use the Password dialog box to change the System Setup password. If the password is incorrect, you can view protected screens but cannot change parameters. The Password tab appears only if the correct password is entered when Setup|System is selected, and the Default button is selected under Setup|Security.

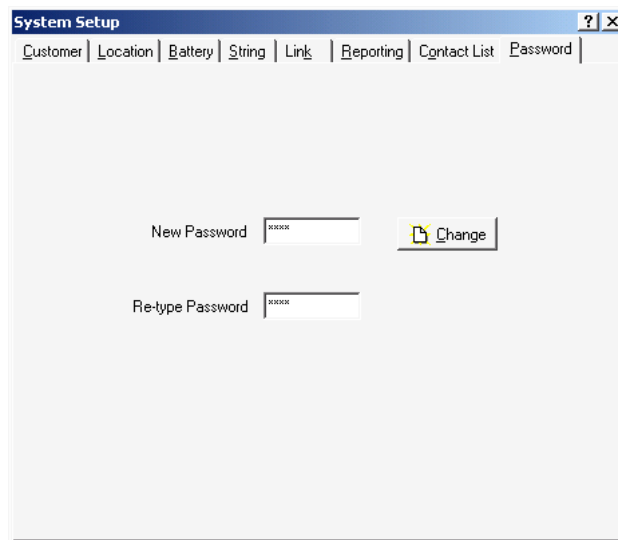

**Figure 50. System Setup - Password**

**New Password** - To change the System Setup password, type the new password in the New Password and Re-type Password boxes. The password may be up to eight alphanumeric characters long. Click Change. The new password is now in effect.

Record the new password for reference. If the password is lost, you must contact Vertiv.

## 17. Synchronizing Using Check Settings

The location, battery, and string names are key for letting a computer connect to a monitor; all names must match or connection fails. Typically, a Central computer assigns names into the monitor, and Check Settings uploads to the computer any test times, alarm thresholds, and data settings put into the monitor during commissioning. **Synchronizing** is the process of uploading using Check Settings and must be done using a Central computer connected to the monitor via RS-232, modem or network. An upload for a BDS must be done twice. After a system is synchronized, it can be placed into service. Refer to *Check Settings Screens* for screen shots.

**Note** If a system fails to synchronize, complete the Battery Setup dialog boxes.


Before synchronizing, you should understand the Upload, Close, Recheck, and Send Time buttons on the Check Settings dialog boxes. The Battery Setup password enables Send Time and Upload.

**Upload Button** - To transfer settings between the computer and monitor, click Upload. The data transferred depends on computer type. A Central computer sends the location, battery, and string names, string ID, current date and time to the monitor, and the monitor sends all other settings to the computer database. Using a Local or Service computer, the monitor transfers setup to the computer, but names, date and time are not sent to the monitor. You need to click Upload on only one Check Settings box, usually Check Settings|General. If you are uploading a BDS, repeat the Upload a second time.

**Close Button** - After transferring settings using Upload, to close Check Settings, click Close.

**Recheck** - Clicking Recheck is the same as clicking Setup|Check Settings. Recheck reloads settings from the database and monitor into the Check Settings boxes.

**Send Time** - This button sends the date and time from the computer to the monitor without affecting other settings.

String Status > Connection 

Complete the Preferences, Communication Setup, and System Setup dialog boxes then, on the String Status screen, highlight the location name you want to synchronize and click Connection.


**System Connects Normally** - If connection is established, the names match, and no error messages appear, click Setup|Check Settings|General. After setup data appears in the In Database and In Monitor columns, click Upload to transfer from monitor to computer database. After upload, click Close. All data is transferred, and the site is ready to go into service.

**"String needs to be set up" Message** - If the system connects, but "This string needs to be set up" appears, the location, battery or string names do not match. You must upload the monitor settings. Click OK at the message, select Setup|Check Settings|General, then click Upload as described in the preceding *System Connects Normally* paragraph.

**Note on Network Settings** - Network parameters do not upload using Check Settings|General. To change the IP Address, Netmask or Gateway, use Setup|System|Link. To send the existing or changed IP, Netmask or Gateway address to the MPM or BDS, click **Send Network Configuration** on Setup|Battery|General. This button is active and the addresses can be sent only when the computer is connected to the BDS or MPM via RS-232 or modem, not via network.

**Note on using a Local or Service computer** - With a Local or Service computer, the monitor transfers setup to the computer, but names, date and time are not sent to the monitor. "This string needs to be set up" will continue to appear until you synchronize with a Central computer.

**System Does Not Connect (Error 102)** - When connecting, the "Location name, battery name and string name do not match" message may appear.

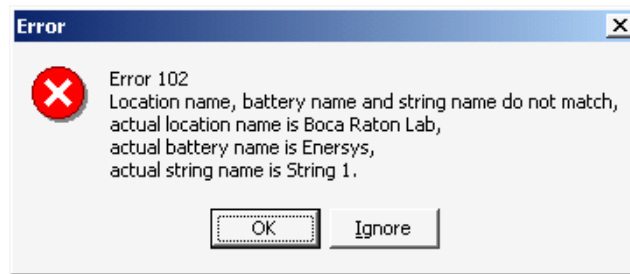

**Figure 51. Connection Error Message**

Extra or missing spaces and hyphens affect names. Click OK to return to String Status or click Ignore to display Check Settings. If names have been assigned in the monitor, either:

1. Use Setup|System to change the names in the computer database to match the names in the error message box, or
2. If on-site with the equipment, clear the existing names in the monitor and enter new names as described below.
3. After correcting the problem, attempt to connect, then upload using Check Settings.

#### **Clear Existing Names (On-site)**

**MPM** - To clear names in an MPM, press the MPM Alarm Reset switch while cycling power off then on. Release the switch after the MPM front panel LEDs sequence from left to right. This reset also disables the alarms and auto call-out function, resets the MPM hardware password to the default, and clears all data in the monitor, including active alarms.

**BDS** - To clear names in a BDS, press the BDS Controller Alarm Reset switch while cycling power off then on. Release the switch after the BDS front panel Status LED flashes rapidly. This reset also disables the alarms and auto call-out function and resets the BDS hardware password to the default. Optionally, instead of pressing the reset switch, you can clear the names on the Diagnostics|Memory screen.

### **17.1. Connecting With a Service Computer**

This section describes how to connect to a monitor when site details are not known.

**Connecting a Service Computer via Modem** - Using a Service computer, type the site telephone number and MUX ID (if a multiplexer is used) under Setup|System|Link. If using a BDS, also type the String ID number and the BDS monitor configuration under Setup|System|String. Click Connection. Check Settings|General appears. Click Upload to synchronize settings between the monitor and Service computer database, then click Close. String View displays all real time data.

**Connecting a Service Computer via Network** - Using a Service computer, type an IP address under Setup|System|Link. If using a BDS, also type the String ID number and the BDS monitor configuration under Setup|System|String. Click Connection. Check Settings|General appears. Click Upload to synchronize settings between the monitor and Service computer database, then click Close. String View displays all real time data.

**Connecting a Service Computer via RS-232** - Using a Service computer, click Connection. Check Settings|General appears. Click Upload to synchronize settings between the monitor and Service computer database, then click Close. String View displays all real time data.

## 18. Check Settings Screens


Active check: String Status > Connection  then Setup|Check Settings|*dialog box*

Offline: String Status > View|Offline|Setup|Check Settings|*dialog box*

The Check Settings dialog boxes display settings in the BMDM database and MPM or BDS nonvolatile memory. Use Check Settings to synchronize a battery location. On a Local, Central or Service computer, when String View displays an active connection, you may click Setup|Check Settings to view Check Settings setup, send the time and date, and upload settings. You cannot change settings using these boxes. Offline you can view the settings, but the Send Time, Recheck and Upload buttons are not active.

Open the Check Settings dialog boxes. When MPM and BDS boxes are similar, only one figure is shown below. For item definitions, refer to *Synchronizing Using Check Settings* and *Programming Battery Setup for the BDS or MPM*.

The Check Settings|General dialog box for MPM and BDS is shown below. Network parameters do not transfer from Check Settings. To change the IP Address, Netmask or Gateway, refer to *Synchronizing Using Check Settings*.

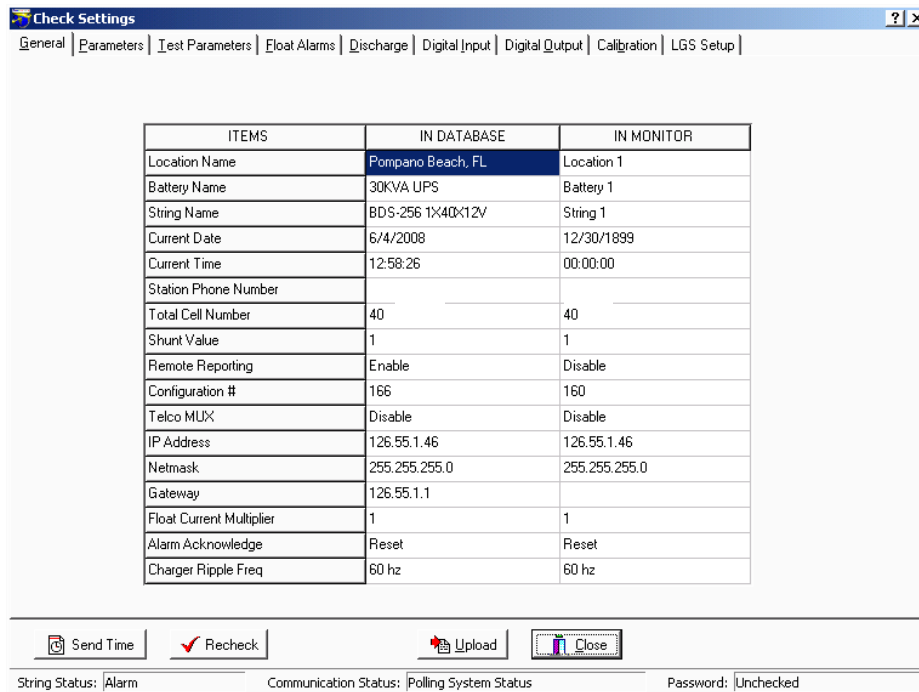

**Figure 52. Check Settings - General (MPM / BDS)**

**Note** When you click Upload on Check Settings, the Location Name, Battery Name, and String Name in the monitor do not overwrite the names in the computer database. However, when a Central computer is used to download to the monitor, these three names are overwritten in the monitor when Send is clicked on Battery Setup.



The Check Settings|Parameters dialog boxes for the MPM and BDS are shown below.

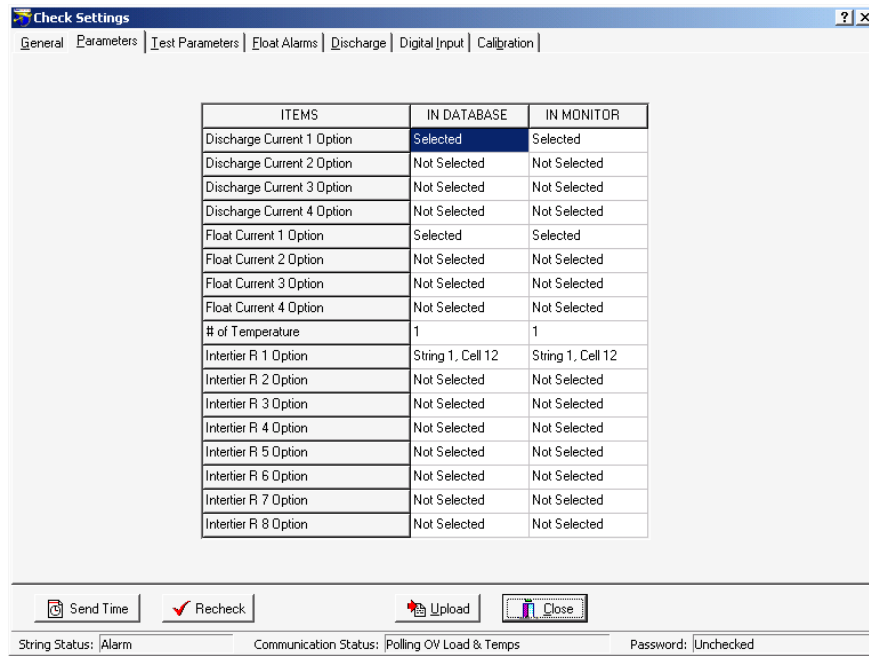


Figure 53. Check Settings - Parameters (MPM)


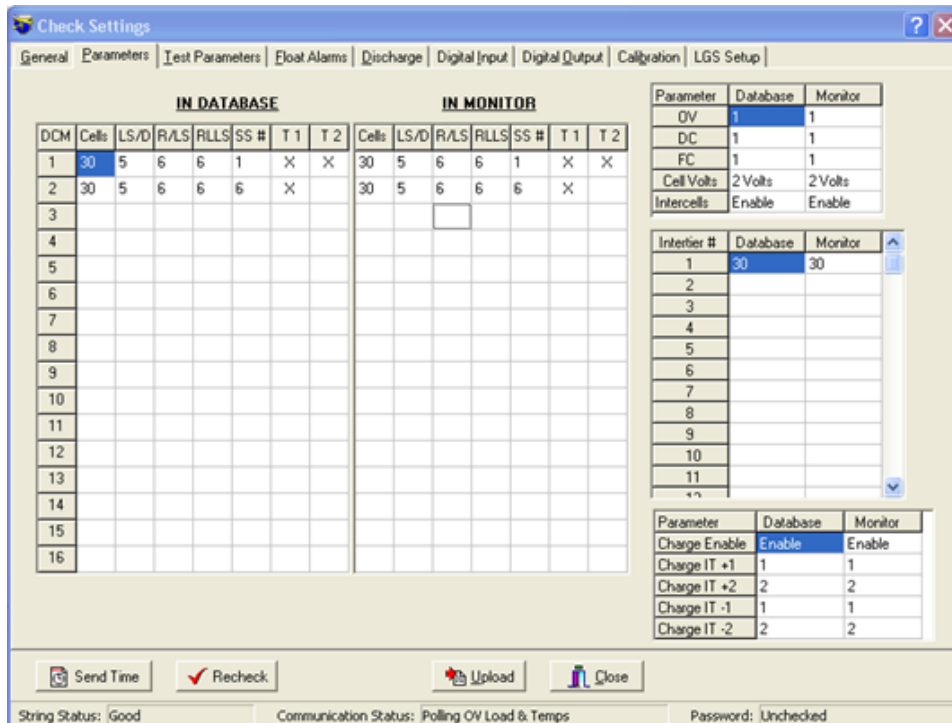


Figure 54. Check Settings - Parameters (BDS)

The Check Settings|Test Parameters dialog box for the MPM and BDS is shown below.

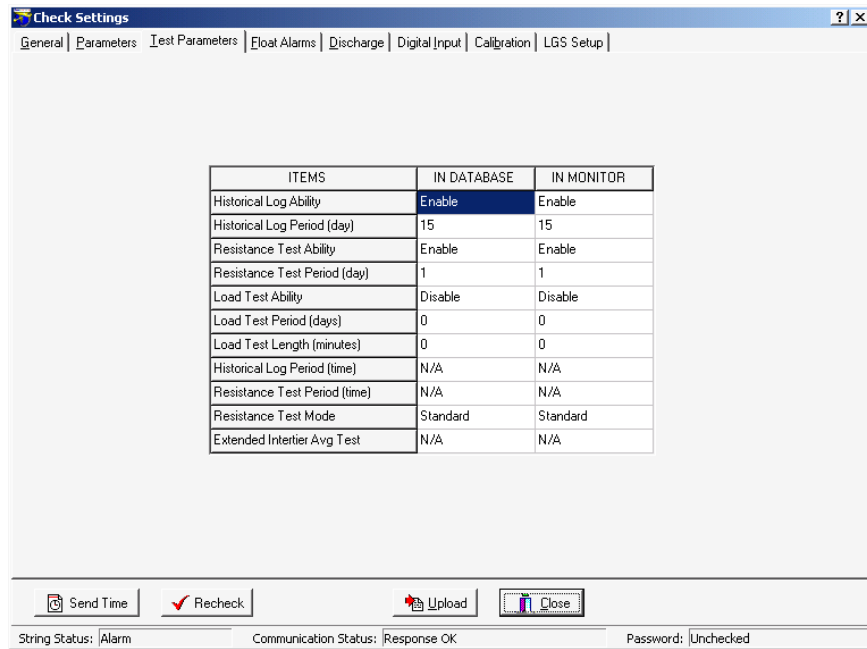

**Figure 55. Check Settings - Test Parameters (MPM / BDS)**

The Check Settings|Float Alarms dialog boxes for the MPM and BDS are shown below.

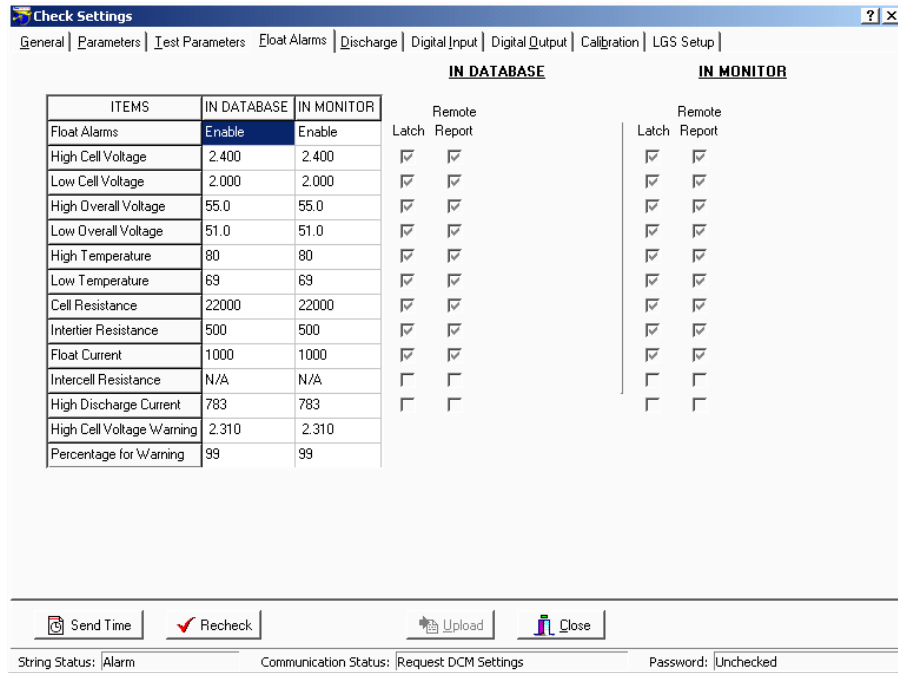


Figure 56. Check Settings - Float Alarms (MPM)

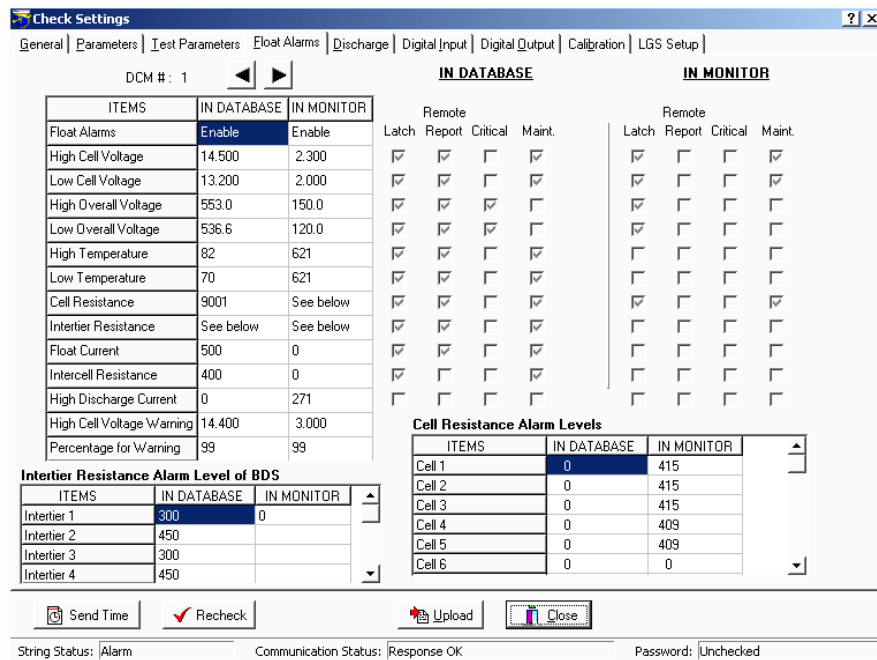


Figure 57. Check Settings - Float Alarms (BDS)

The screenshot shows a software window titled "Check Settings" with a menu bar containing: General, Parameters, Test Parameters, Float Alarms, System, Discharge, Digital Output, Calibration, and LGS Setup. The "System" menu item is selected.

The main content area is divided into two sections: "Thermal Runaway" and "Hardware". Each section has two columns of settings: "IN DATABASE" and "IN MONITOR".

**Thermal Runaway Section:**

- High Float Current (mamps):** Value is 0. Both "IN DATABASE" and "IN MONITOR" have checkboxes for Latch, Reporting, Critical, and Maintenance, all of which are unchecked.
- Temperature Delta:** Value is 0. Both "IN DATABASE" and "IN MONITOR" have checkboxes for Latch, Reporting, Critical, and Maintenance, all of which are unchecked.
- Battery Temperature DCM/Probe:** Both "IN DATABASE" and "IN MONITOR" have a text input field containing "DCM - 1 Probe - 1".
- Ambient Temperature DCM/Probe:** Both "IN DATABASE" and "IN MONITOR" have a text input field containing "DCM - 1 Probe - 1".


**Hardware Section:**

- Hardware Fault:** Both "IN DATABASE" and "IN MONITOR" have checkboxes for Latch, Reporting, Critical, and Maintenance, all of which are unchecked.

At the bottom of the window, there are four buttons: "Send Time", "Recheck", "Upload", and "Close". Below the buttons, the status bar shows: "String Status: Good", "Communication Status: Polling System Status", and "Password: Unchecked".

**Figure 58. Check Settings - System (BDS)**

The Check Settings\Discharge dialog box for the MPM and BDS is shown below.

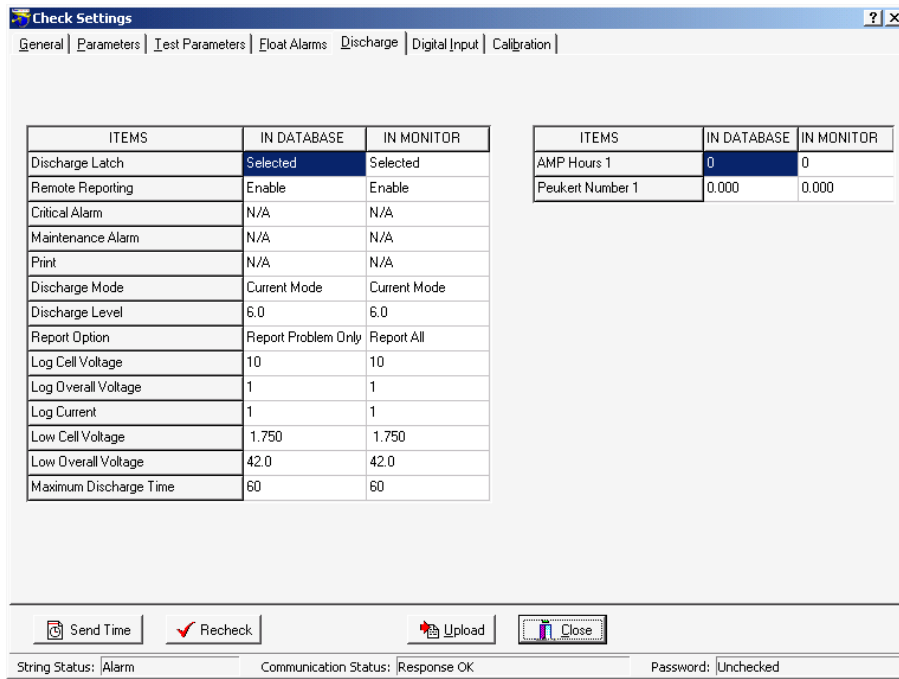

**Figure 59. Check Settings - Discharge (MPM / BDS)**

For BDS setup, the system shows information based on string one only.

The Check Settings|Digital Input dialog boxes for the MPM and BDS-256 are shown below. The BDS Digital Input tab and dialog box are available only for String 1 on a BDS. The tab disappears if a string other than 1 is selected. Not available for the BDS-40.

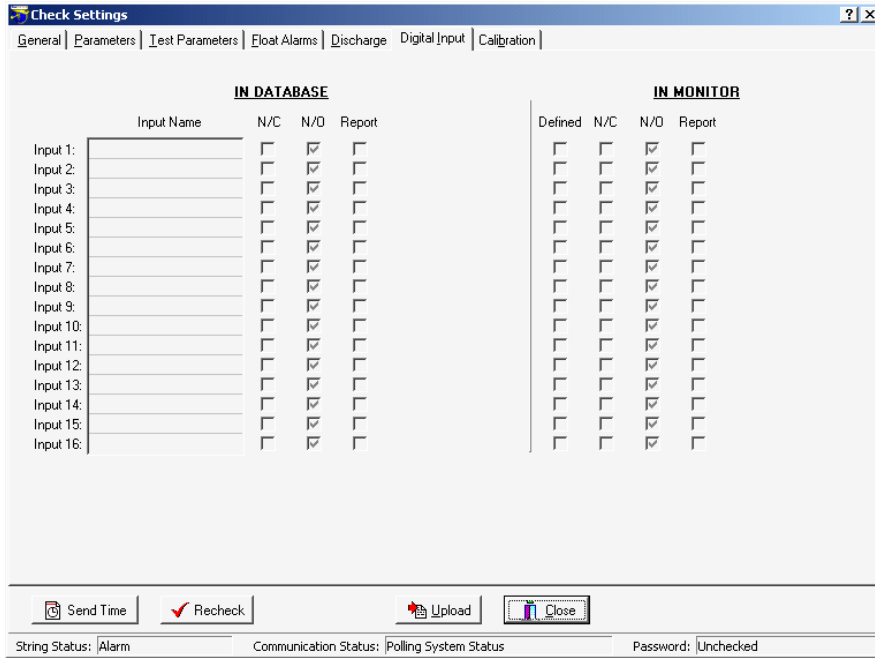


Figure 60. Check Settings - Digital Input (MPM)

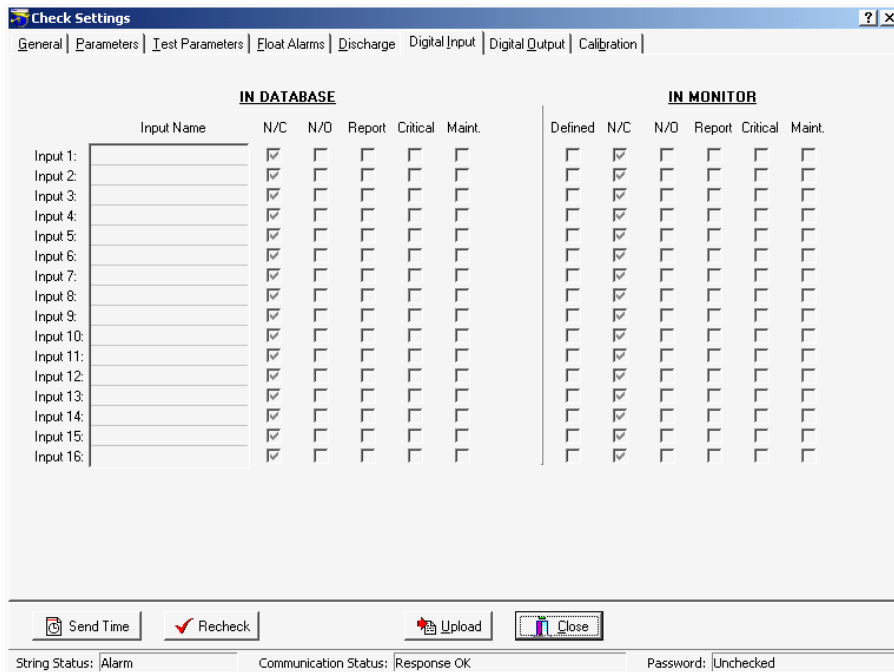


Figure 61. Check Settings - Digital Input (BDS)

The Check Settings|Digital Output dialog boxes for the MPM and BDS-256 are shown below. The Digital Output tab and dialog box disappear if a BDS-40 is selected.

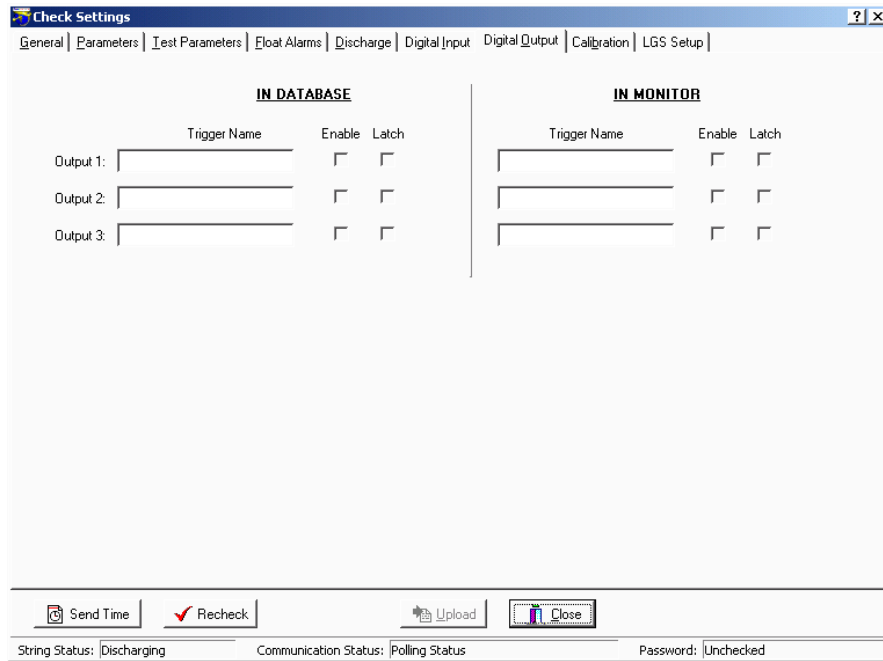


Figure 62. Check Settings - Digital Output (MPM)

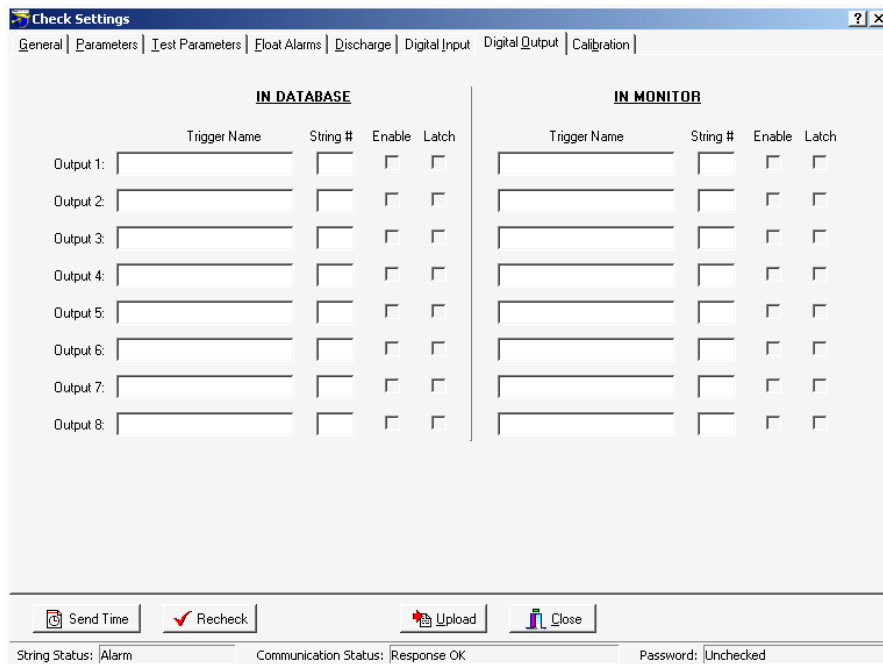


Figure 63. Check Settings - Digital Output (BDS/256)

For BDS setup, the system shows information based on string one only.

The Check Settings|Calibration dialog boxes for the MPM and BDS are shown below. The BDS Calibration dialog box reports the Intercell Calibration Factor in addition to the other factors. The arrow buttons let you upload other DCM's.

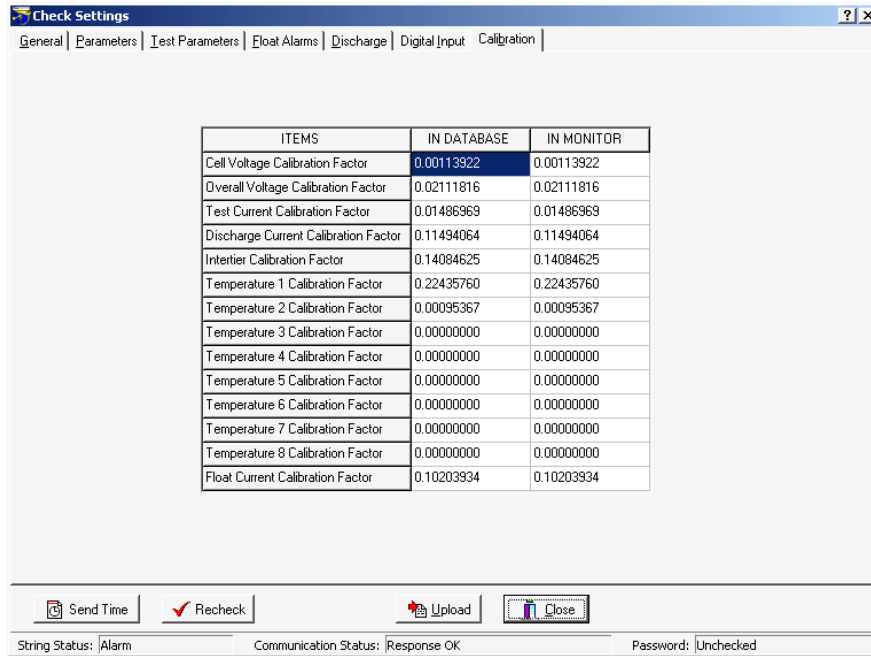


Figure 64. Check Settings - Calibration (MPM)


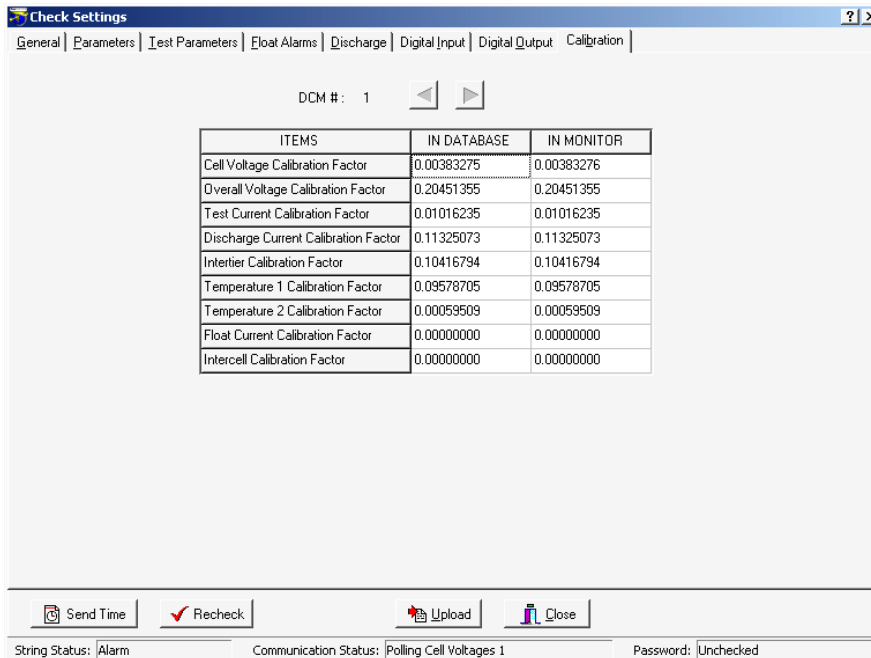


Figure 65. Check Settings - Calibration (BDS)



The Check Settings|LGS dialog box for the MPM and BDS is shown below.

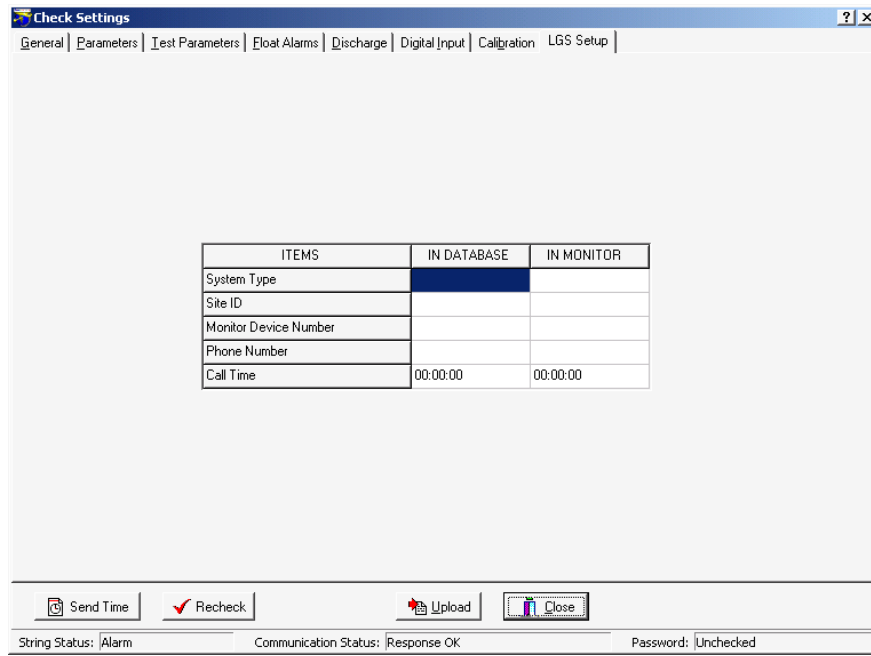


**Figure 66. Check Settings - LGS (MPM / BDS)**

### 18.1. Check Settings Screens in Controller

BDS Only: String Status > Connection  then <CTRL>Setup|Check Settings|dialog box

A second series of Check Settings boxes for diagnostics is available for the BDS. These Check Settings in Controller boxes retrieve data from the BDS Controller instead of the DCM. To open Check Settings in Controller, at String View, hold down the CTRL key while selecting Setup|Check Settings.

A typical dialog box, Check Settings in Controller|Calibration for the BDS, is shown below.

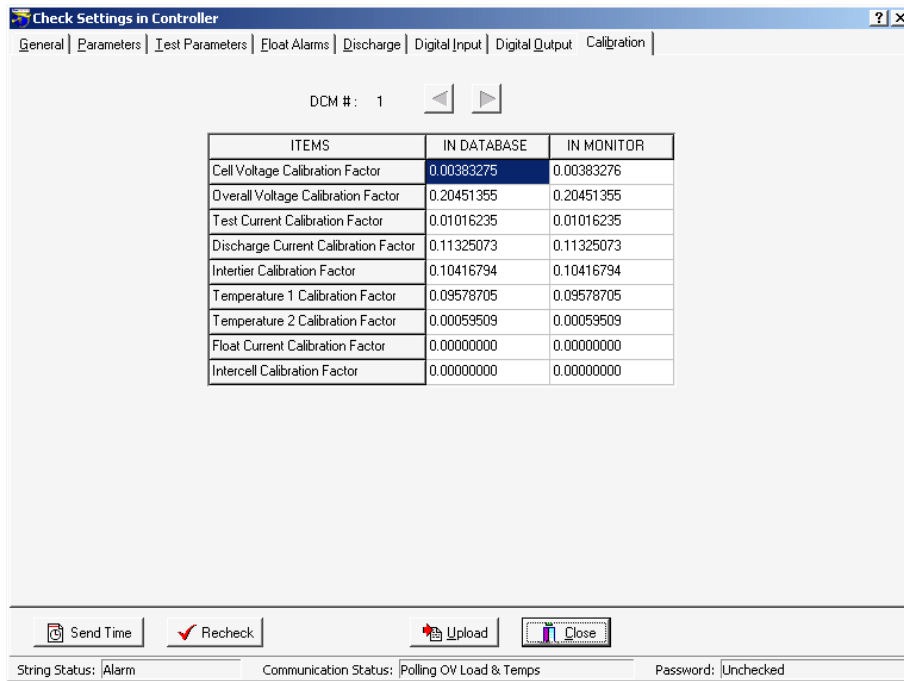

**Figure 67. Check Settings in Controller - Typical Screen (BDS)**

## 19. Programming Battery Setup for the MPM

From String Status, click Connection  to display the String View screen.

String View > Setup|Battery|*dialog box*

After completing Preferences, Communication Setup, and System Setup, complete the Battery Setup dialog boxes. To open Battery Setup, on the String Status screen, highlight the location name, then click Connection. After computer to monitor communication is established, the String View screen appears. To perform battery setup, select Setup|Battery to display the dialog boxes.

**Password** - If the Battery Setup boxes are protected, type the Battery Setup password and click OK. This password closes when communication ends. If the password is incorrect, the Battery Setup boxes appear, but the Send button is inactive.

To change the location, battery or string names after the monitor is set up and communicating, use the Setup|System dialog boxes.

**Send Button** and **Close Button** - On the Battery Setup boxes, the Send button transfers settings to the monitor. On Battery Setup|Test Parameters, the Historical Log, Resistance Test, and Load Test settings are sent only if changed. You may complete all dialog boxes before clicking Send. Clicking Send on any box transfers settings from all boxes. Changes are not saved or sent if you only click Close.

## 19.1. Battery Setup: General (MPM)

String View > Setup|Battery|General

The following appear on the General dialog box.

The screenshot shows the 'Battery Setup - General (MPM)' dialog box. It features several input fields and controls:

- Location Name:** Pompano Beach, FL
- Battery Name:** MPM System 1
- String Name:** MPM-100 2x24x2V
- Date:** 7/17/2014
- Time:** 2:01 PM
- Station Phone Number:** (empty)
- Measure Points:** 48
- Shunt Value (amps/mv):** 5
- Float Current Multiplier:** 1
- Remote Reporting:**  Enable  Disable
- Telco MUX:**  Enable  Disable
- Password:** (empty)
- Re-type Password:** (empty)
- Network Setup:** IP Address: 10.203.123.45, Netmask: 255.255.0.0, Gateway: (empty). Includes a 'Send Network Configuration' button.
- Auto Send Time:**
- Time Difference (Hours):** 0

At the bottom, there are 'Send' and 'Close' buttons. The status bar at the very bottom shows: String Status: Good, Communication Status: Response OK, Password: OK.

**Figure 68. Battery Setup - General (MPM)**

**Location Name, Battery Name, String Name** - Location, battery, and string names identify the strings and hardware to which the monitor is connected. Make sure databases have the same names to ensure proper connection. Location, battery, and string names can only be changed under Setup|System.

**Date, Time** - The date and time of the computer. When you send a new configuration to the monitor, it sends this date and time.

**Station Phone Number** - Type the telephone number of the Central computer the MPM monitor calls when a system goes into alarm or discharge.

**Measure Points** - This is defined by Monitor Configuration on Setup|System|String. Normally, do not change the Measure Points number; however, you may change it for custom configurations (BDS only) not listed on System Setup|String.

**Note** Do not change the Measure Points number for multi-string configurations. If you enter a lower cell number for a configuration of 2x24, for example, only the total cell count for the second string changes.

**Shunt Value** - Type the shunt rating in amps per millivolt. For example, for a shunt of 600 amps/100mV, type 6. (600 amps/100mv = 6 amps/1mv.) This value must be an integer.

**Float Current Multiplier** - When a series of batteries is connected with more than one cable, it may not be possible to get the float current sensor around all the cables. In this case, you may connect the sensor around one of the cables and set the Float Current Multiplier for the total number of cables. The connecting cables must be of equal length.

**Remote Reporting Enable and Disable** - Globally enables or disables the monitor remote reporting function. For a parameter to report on alarm, do not select the global Disable Alarm Reporting on Setup|Preferences, and select Remote Reporting on Setup|Battery|Float Alarms or Setup|Battery|Discharge.

**Telco MUX** - Not available for the MPM.

**Password** - To change the battery setup password, type the new password in the Password and Re-type Password boxes. The password may be up to five alphanumeric characters long.

**IP Address, Netmask and Gateway** - Displays the IP address, netmask, and gateway typed on Setup|System|Link.

**Send Network Configuration** - Click this button to send the IP address, netmask, and gateway to the MPM. The MPM must have the internal network option installed. This button transfers addresses only when MPMs are connected via RS-232 or modem, not network.

**Auto Send Time** - Check this box to have the time of day sent from the computer to the hardware during autopolling and data extraction.

**Time Difference (Hours)** - This spin box lets you compensate for any plus or minus time difference between the computer and hardware installation locations. When the computer sends the time of day to the hardware, either during autopolling or Check Settings upload, the time is automatically adjusted.

**Alarm Button** - If Sequential/Ack is selected on the System Setup Reporting dialog box, select **Acknowledge** so the monitor notifies the computer that acknowledgement was sent and received. This stops sequential calling but does not reset the alarm. Select **Reset** if Sequential is not selected.

## 19.2. Battery Setup: Parameters (MPM)

String View > Setup|Battery|Parameters

On Parameters, select the hardware and parameters that will be polled and displayed.

The screenshot shows the 'Battery Setup - Parameters (MPM)' window. The 'Parameters' tab is selected. The 'Discharge Current' section has 'Current 1' checked. The 'Float Current' section has all options unchecked. The 'Intertier Resistance' section has 'Intertier Resistance 1' checked, with 'String #' set to 1 and 'Cell #' set to 12. The other Intertier Resistance options (2-8) are unchecked. The 'Number of Temperatures' is set to 1. At the bottom, there are 'Send' and 'Close' buttons. The status bar at the very bottom shows 'String Status: Good', 'Communication Status: Response OK', and 'Password: OK'.

**Figure 69. Battery Setup - Parameters (MPM)**

**Discharge Current** - You can define up to four discharge current channels, but only one current channel per string is allowed. If the configuration is one string, then only one current channel may be used. Only Current 1 can trigger the recording of a discharge if Current Mode is selected on Setup|Battery|Discharge.

**Intertier Resistance** - The MPM can monitor up to four strings. If selecting an Intertier Resistance option, at **String #**, type the number of the string that contains the intertier. At **Cell #**, type the number of the cell that is before the intertier. The intertier resistance must be selected in numerical order.


**Number of Temperatures** - You may select up to eight probes to monitor ambient or electrolyte temperature.

**Float Current** - The MPM can monitor up to four float current values, displayed on the Cell Voltage screen. Set the value in the High Float Current field on Setup|Battery|Float Alarms. Actual current that exceeds set value appears in red on the Cell Voltage screen and causes an alarm. The float charging current probe (FCCP) may take 25 minutes to stabilize after a power change. Refer to the Multitel, Inc. *Float Charging Current Probe User's Manual*.

### 19.3. Battery Setup: Test Parameters (MPM)

String View > Setup|Battery|Test Parameters

The following appear on the Test Parameters dialog box.

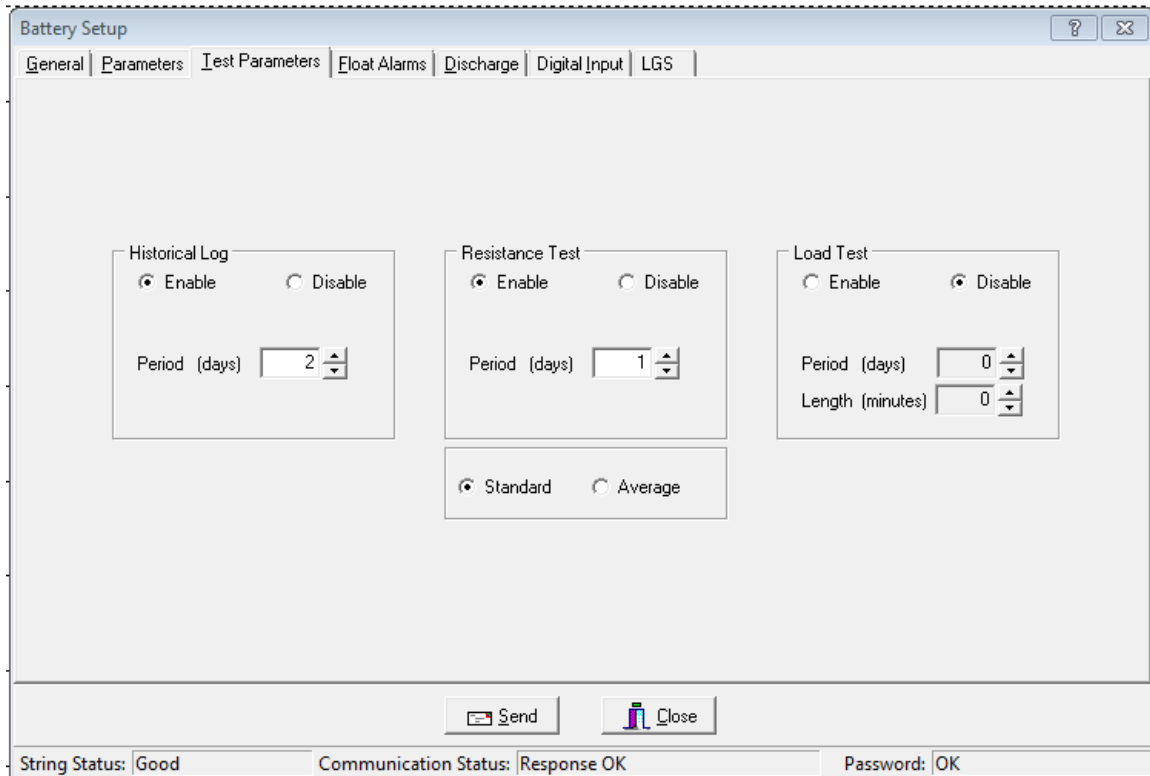

**Figure 70. Battery Setup - Test Parameters (MPM)**

**Logging / R-Test Time Mode** area - Click the **Absolute Date and Time** option button to specify the exact day of the month, from 1 to 28 (29, 30 and 31 are not used), and time the historical log is updated and the resistance test is performed. Click the **Day Interval** button to specify how often (in days) the historical log is updated and the resistance test is performed.

**Historical Log** area - Click **Enable** to activate, then complete Period (days) and Period (time) described below. Specify how often in days or the date and time the voltages, currents, and temperatures are recorded in the history log.

**Period (days)** and **Period (time)** - Either select how often the historical log is updated, or select the day of the month and time the log is updated.

**Resistance Test** area - Click **Enable** to activate, then complete Period (days) and Period (time) described below. Specify the resistance test interval in days or date and time. If set to 30 days, resistance is tested every 30 days starting at 12:00 A.M. (midnight). If you program the Load Test for the same interval as the Resistance Test, the Resistance Test is delayed three days.

**Period (days)** and **Period (time)** - Either select how often the resistance test is performed, or select the day of the month and time the test is performed.

**Standard** or **Average** - Normally select Standard. If the charger employs digital control of battery voltage, which causes voltage fluctuation, select Average.

**Load Test** - Specify load test interval in days and length of the load test in minutes. Load test activates a relay that shuts down the charger, if connected, and enables tracking of the discharge. If set to 30, load test is done every 30 days starting at 12:00 A.M. See Resistance Test (above).

### 19.4. Battery Setup: Float Alarms (MPM)

String View > Setup|Battery|Float Alarms

The following appear on the Float Alarms dialog box.

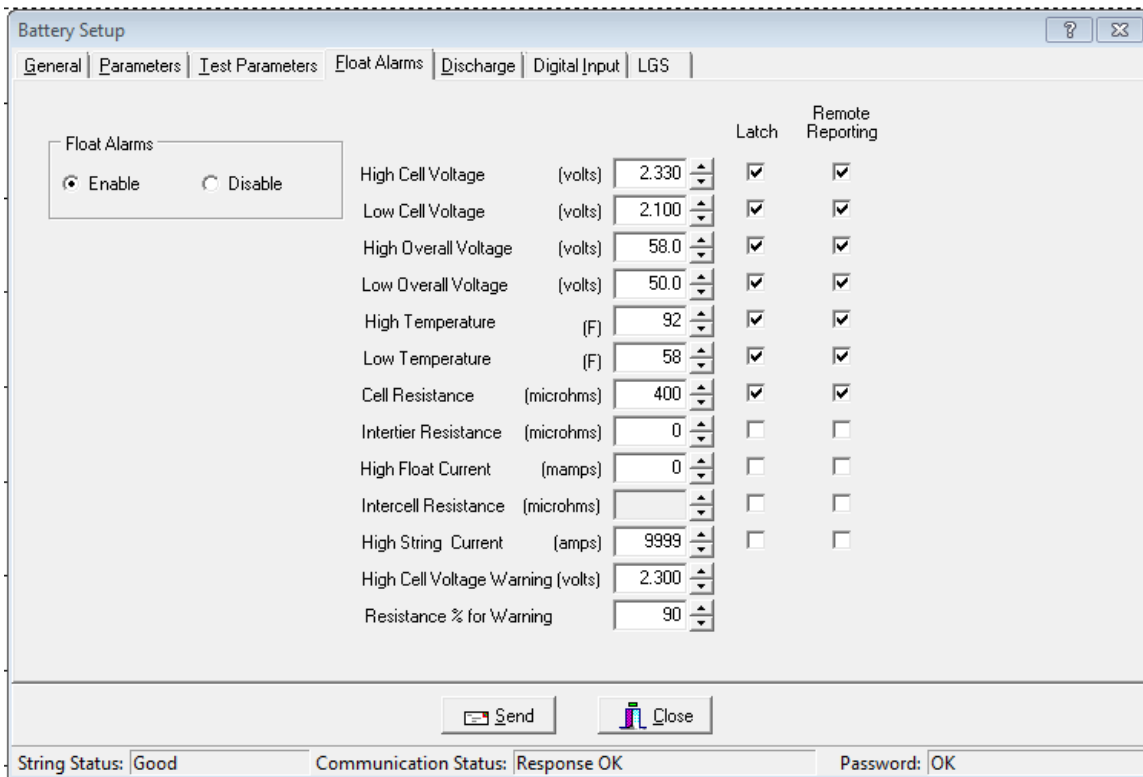


Figure 71. Battery Setup - Float Alarms (MPM)

**Float Alarms Enable** or **Disable** - Global control of all float alarms for local alarm status and alarm contact activation. Select Enable for the call-out of float alarms and digital input alarms. When Disable is selected, the MPM Alarm Disable LED is lit, and the String Status column on the String Status screen indicates Alarms Disabled.

**Cell Resistance Threshold - Global** applies the alarm level in the Cell Resistance (microhms) field to all cells. **Individual** and Input Level sets alarm levels on a cell basis using the Cell Resistance Alarm Levels box.



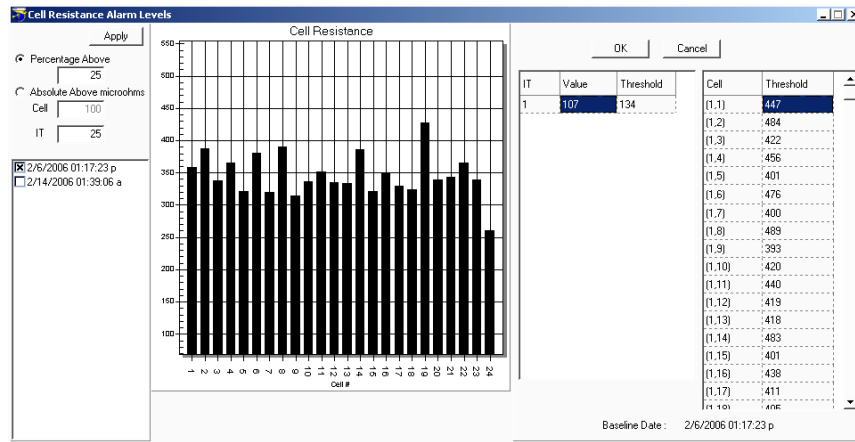


Figure 72. Cell Resistance Alarm Levels Setup (MPM)

**Cell Resistance Alarm Levels** box - To set Alarm Levels on a cell basis, click Individual and Input Level and select options on this box.

**Percentage Above** - Sets the cell alarm level a percentage above the selected dataset levels. Type a value (1 to 99) in the Percentage Above field.

**Absolute Above (Microhms)** - Sets the cell alarm level a numeric value above the selected dataset levels. Type a value (1 to 99) in microhms in the Absolute Above field.

**Date area check boxes** - Click one dataset date in this area on which to base alarm levels. The system stores the date of the baseline data and displays it on the lower right after the Apply button is clicked.

**Apply** - Click apply to apply selected levels to the cells. The values appear in the Threshold column. If you do not want to edit individual cell levels (see below), click OK.

**Cell, Intertier and Threshold** columns - To edit individual cell or intertier alarm levels in the Threshold column, click the value and type a new value. After editing, click OK.

**Note** Values are not saved until Save or Send is clicked on the Float Alarms or another Battery Setup box.

**Alarm Thresholds** - For high and low cell voltage, overall voltage, temperature, resistance, and current, select violation threshold values that activate an alarm during a float condition. These thresholds are deactivated for 30 minutes following a resistance test. If a discharge occurs, the alarms are disabled until the overall voltage recovers to a value above the low threshold.

**High Cell Voltage Warning (volts)** - Type a value between the Low Cell Voltage and High Cell Voltage levels. This setting affects the bar graph colors on the Cell Voltage String View screen. During normal float condition, the bar colors change as follows:

**Bar Colors for all Normal and Violation Types**

- High Violation ..... Red
- Warning ..... Blue
- Normal ..... Green
- Low Violation ..... Yellow
- Out of Range Values ..... Maroon
- Negative Cell Voltage ..... Black

**Percentage for Warning** - Determines the violation threshold that causes a Warning battery status. The value entered is a percentage of the internal resistance alarm. For example, if the internal resistance alarm is set to 100 microhms and the percentage for warning is 75%, the system issues a warning when the internal resistance is between 75 and 100 microhms. When the value exceeds 100 microhms, the system issues an alarm. Warning status is displayed only on the String Status and Historical Events screens, not on the Alarms screen.

<-----Normal-----75%<-----Warning----->100%-----Alarm----->

**Latch** - When selected, the alarm contact stays energized until manually reset. If not selected, the alarm contact de-energizes when the alarm condition clears.

**Remote Reporting** - When selected, causes the monitor to report the alarm. When not selected, call-out is disabled for that parameter. You must select this option and Remote Reporting Enable under Setup|Battery|General to enable the call out function and to display Alarm Detail on the Historical Events screen during polling.

### 19.5. Battery Setup: Discharge (MPM)

String View > Setup|Battery|Discharge

The following appear on the Discharge dialog box.

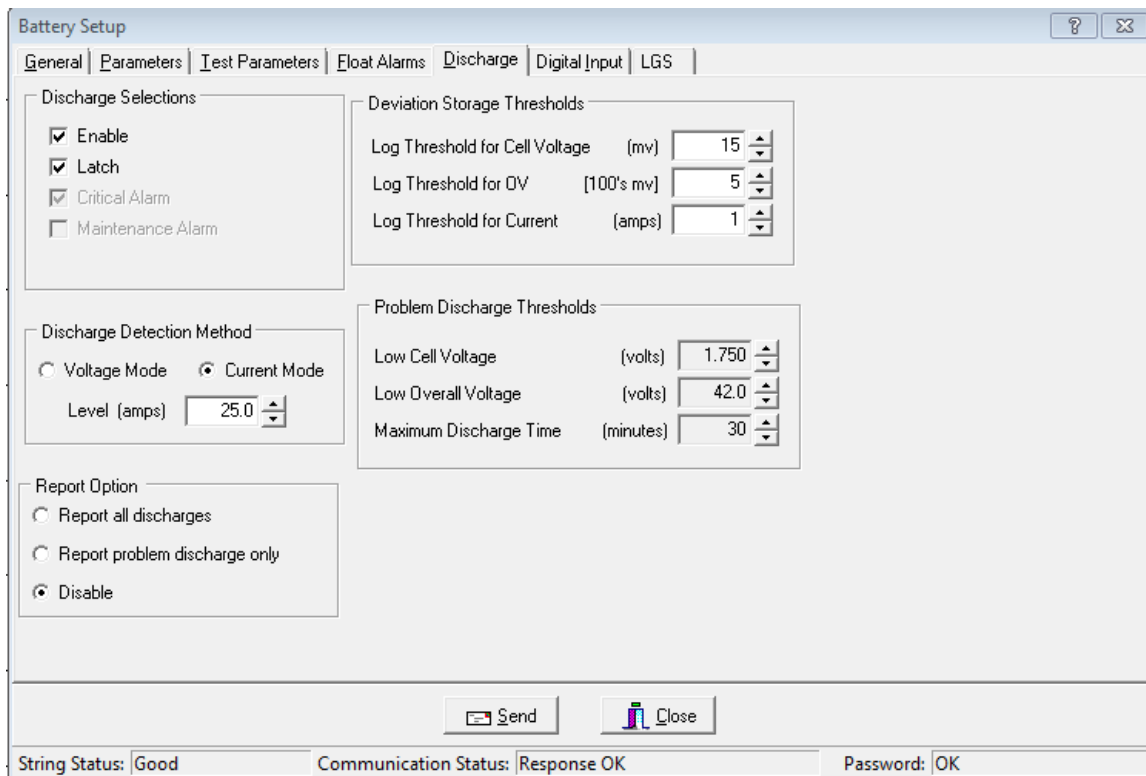


Figure 73. Battery Setup - Discharge (MPM)

#### Discharge Selections Area:

**Enable** - Select to let the monitor capture and store discharge data. If not selected, the MPM does not log discharges.

**Latch** - When selected, the alarm contact stays energized until manually reset. If not selected, the alarm contact de-energizes when the discharge condition clears.

The Critical Alarm and Maintenance Alarm options do not apply to the MPM.

**Discharge Detection Method Area:**

Select **Voltage Mode** or **Current Mode**, then set the threshold **Level** in volts or amps to activate data logging during a discharge. When the voltage goes below the set level or the current exceeds the set level, the monitor begins recording cell voltages, discharge current, and overall voltage, based on the Deviation Storage Thresholds (described later). Only one temperature sample is stored at the beginning of the discharge.

Voltage mode allows data recording during recharge, since data logging does not stop until the voltage goes above the threshold. If measuring discharge current, use Discharge Current Mode as a reliable source of trigger.

In current mode, the monitor triggers only on Current Channel 1 selected on Setup|Battery|Parameters. To enable this mode, you must define the Current Channel on the Setup|Battery|Parameters dialog box.

**Report All Discharges** - If selected, the monitor reports all discharges to the Central computer. You must enable Remote Reporting on Setup|Battery|General.

**Report Problem Discharge Only** - If selected, the monitor reports only discharges that exceed voltage or time values set in Problem Discharge Thresholds (described later) to the Central computer.

**Disable** - If selected, stops the MPM from reporting a discharge.

**Deviation Storage Thresholds Area - Log Threshold for Cell Voltage, Log Threshold for OV (Overall Voltage), and Log Threshold for Current** - When the voltage or current changes by the amounts in these boxes, the event is recorded. For most applications, use 10mv for cell voltage, 100mv for overall voltage, and 1 amp for discharge current. Smaller values could cause monitor memory problems. Do not set these values to 0. If set to 0, no data will be logged during discharge. Refer to *Data Storage in the MPM*.

**Problem Discharge Thresholds Area:**

**Low Cell Voltage, Low Overall Voltage, and Maximum Discharge Time** - Select the voltage or time levels that trigger discharge reporting. To enable these values, select **Report Problem Discharge Only** on this screen. This setting also affects the bar graph colors on the Cell Voltage String View screen. During a discharge, the bars change color:

Normal Condition..... Green  
Problem Discharge Thresholds or Low Cell Voltage..... Yellow

**Time to Go Area:**

The String View screen can display a Time to Go (TTG) number. When an MPM discharge starts, the TTG box on String View indicates the estimated remaining time that the battery can deliver power. To disable this feature, leave the Amp Hours and Peukert Number boxes at zero.

IMPORTANT NOTE: The TTG Time to Go number is only an estimate.


**Amp Hours** - Type the amp hours of the battery at the 8 hour rating. To disable the estimated time feature, set to 0.

**Peukert Number** - Type the Peukert number derived by using Peukert's equation. Refer to *Understanding the Time to Go Algorithm*. To disable the estimated time feature, set to 0.

**19.6. Battery Setup: Digital Input (MPM)**

String View > Setup|Battery|Digital Input

The MPM has 16 digital inputs that may be connected to external dry contacts. You may set up these inputs on the Digital Input dialog box to report an alarm when the external contacts are activated.

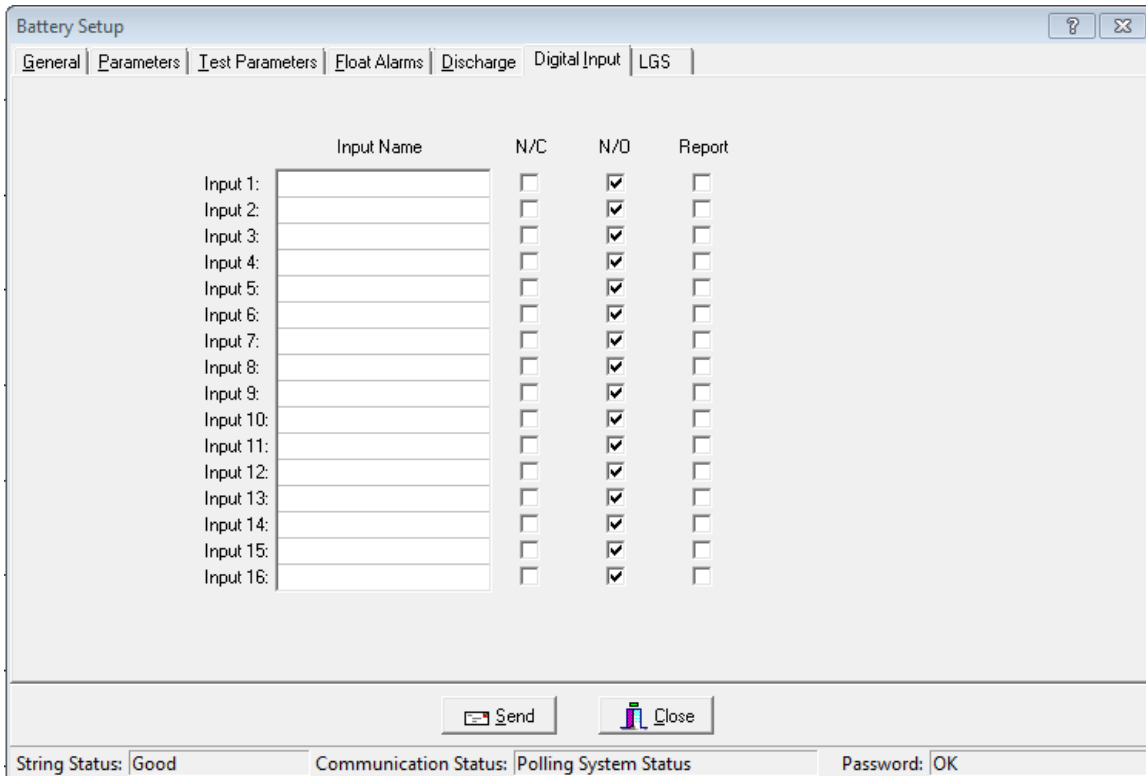

**Figure 74. Battery Setup - Digital Input (MPM)**

**Input Name** - Assign a name to the input connected to the external contacts and indicate if the contacts are normally open or normally closed. To disable an input, clear the input name.


**N/C or N/O** - Select the N/C box if the external contacts are normally closed. Select the N/O box if the external contacts are normally open.

**Report** - Selecting this check box lets the monitor report a digital input alarm. When not selected, reporting is disabled for that input.

**19.7. Battery Setup: Digital Output (MPM)**

String View > Setup|Battery|Digital Output

The MPM has three optional relay contact control outputs you can define to trigger on an alarm event.

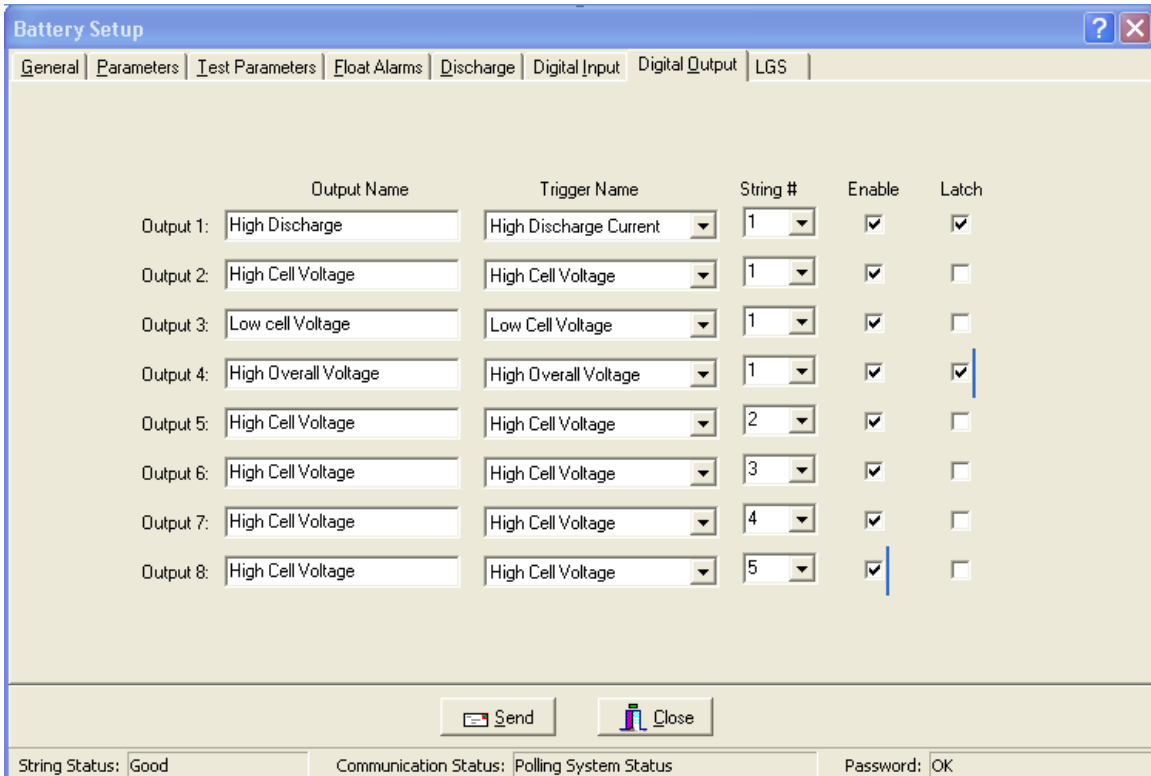

**Figure 75. Battery Setup - Digital Output (MPM)**

After defining an Output Name and Trigger Name, the associated digital output can change state on an alarm to control a user-selected device. If you select Latch, the output latches. The relay is a Form C contact that de-energizes upon alarm condition reset.

**Output Name** - Type a name that describes the external device being controlled.

**Trigger Name** - From the drop-down list, select a parameter that energizes the Control Output relay contact.

**Enable** - Select Enable to energize a rear panel Control Output contact on a trigger event.

**Latch** - When selected, the Control Output contact energizes until manually reset. If not selected, the Control Output de-energizes when the trigger event clears.

## 19.8. Battery Setup: LGS (MPM)

String View > Setup|Battery|LGS

Leibert Global Services (LGS) offers a service in which its Customer Response Center (CRC) remotely monitors your Vertiv BDS or MPM equipment and other facility devices around the clock. The CRC evaluates alarms and provides immediate telephone and e-mail assistance using a customer-defined response and escalation plan. For details about subscribing to the service, phone (800) 748-3666 or (800) SITEMON or e-mail LGS.monitoring@vertivco.com.

If you have subscribed to an LGS monitoring plan, complete the Battery Setup|LGS dialog box as follows.

The screenshot shows a 'Battery Setup' dialog box with the 'LGS' tab selected. The fields are as follows:

- System Type: 000 (xxx)
- Site ID: 00000 (00000 - 99999)
- Monitor Device Number: 0000000 (0000000 - 9999999)
- LGS Phone Number: (empty)
- LGS Report Time: 00:00 (HH:MM)
- Enabled:

Buttons: Send, Close

Status bar: String Status: Good, Communication Status: Response OK, Password: OK

**Figure 76. Battery Setup - LGS (MPM)**

**System Type** - Type three characters to identify the device being monitored. For MPM-100, type MPM; for BDS-256, type 256; for BDS-40, type 040.

**Site ID** - Type the five character ID for customer site identification.

**Monitor Device Number** - Type the seven digit number used for customer device tracking.

**LGS Phone Number** - Type the telephone number that connects to the LGS remote monitoring service. This number is used for a daily communication test and alarm reporting.

**LGS Report Time** - Type the time the monitor calls in each day to confirm communication. Use the 24 hour clock; e.g., 13:45.

**Enabled** - Check this box to enable remote monitoring by LGS. Monitoring is enabled only after a monitoring plan has been purchased from LGS.

## 20. Programming Battery Setup for the BDS

From String Status, click Connection  to display the String View screen.

String View > Setup|Battery|*dialog box*

After completing Preferences, Communication Setup, and System Setup, complete the Battery Setup dialog boxes. To open Battery Setup, on the String Status screen, highlight the location name, then click Connection. After computer to monitor communication is established, the String View screen appears. To perform battery setup, select Setup|Battery to display the dialog boxes.

**Password** - If the Battery Setup boxes are protected, type the Battery Setup password and click OK. This password closes when communication ends. If the password is incorrect, the Battery Setup boxes appear, but the Send button is inactive.

To change the location, battery or string names after the monitor is set up and communicating, use the Setup|System dialog boxes.

**Send Button** and **Close Button** - On the Battery Setup boxes, the Send button transfers settings to the monitor. On Battery Setup|Test Parameters, the Historical Log, Resistance Test, and Load Test settings are sent only if changed. You may complete all dialog boxes before clicking Send. Clicking Send on any box transfers settings on all boxes. Changes are not saved or sent if you only click Close.

## 20.1. Battery Setup: General (BDS)

String View > Setup|Battery|General

The following appear on the General dialog box.

**Figure 77. Battery Setup - General (BDS)**

**Location Name, Battery Name, String Name** - Location, battery, and string names identify the strings and hardware to which the monitor is connected. Make sure databases have the same names to ensure proper connection. Location, battery, and string names can only be changed under Setup|System.

**Date/Time** - The date and time of the computer. When you send a new configuration to the monitor, it sends this date and time.

**Charger Ripple Freq** - Select to set the system to the charger ripple frequency of either 50Hz or 60Hz.

**Station Phone Number** - Type the telephone number of the Central computer the BDS monitor calls when a system goes into alarm or discharge.

**Measure Points** - This is defined by Monitor Configuration on Setup|System|String. Normally, do not change the Measure Points number; however, you may change it for custom configurations not listed on System Setup|String. The Measure Points number defines the total number of cells.

**Shunt Value** - Type the shunt rating in amps per millivolt. For example, for a shunt of 600 amps/100mV, type 6. (600 amps/100mv = 6 amps/1mv.) This value must be an integer.



**Float Current Multiplier** - When a series of batteries is connected with more than one cable, it may not be possible to get the float current sensor around all the cables. In this case, you may connect the sensor around one of the cables and set the Float Current Multiplier for the total number of cables. The connecting cables must be of equal length.

**Remote Reporting Enable and Disable** - Globally enables or disables the monitor remote reporting function. For a parameter to report on alarm, do not select the global Disable Alarm Reporting on Setup|Preferences, and select Remote Reporting on Setup|Battery|Float Alarms or Setup|Battery|Discharge.

**Telco MUX Enable and Disable** - Select Enable when using a Telco multiplexer. This can only be set when the BDS Controller is connected to String 1.

**Password** - To change the battery setup password, type the new password in the Password and Re-type Password boxes. The password may be up to five alphanumeric characters long.

**IP Address, Netmask and Gateway** - Displays the IP address, netmask, and gateway typed on Setup|System|Link.

**Send Network Configuration** - Click this button to send the IP address, netmask, and gateway to the BDS. The BDS must have the internal network option installed. This button transfers address only when BDSs are connected via RS-232 or modem, not network.

**Set BDS Default Values** - Click to transfer parameters for the Monitor Configuration selected under System Setup|String to the Battery Setup|Parameters and Battery Setup|Float Alarms dialog boxes and to the Measure Points number field.

**Auto Send Time** - Check this box to have the time of day sent from the computer to the hardware during autopolling and data extraction.

**Time Difference (Hours)** - This spin box lets you compensate for any plus or minus time difference between the computer and hardware installation locations. When the computer sends the time of day to the hardware, either during autopolling or Check Settings upload, the time is automatically adjusted.

**Alarm Button** - If Sequential/Ack is selected on the System Setup Reporting dialog box, select **Acknowledge** so the monitor notifies the computer that acknowledgement was sent and received. This stops sequential calling but does not reset the alarm. Select **Reset** if Sequential is not selected.

## 20.2. Battery Setup: Parameters (BDS)

String View > Setup|Battery|Parameters

The following appear on the Parameters dialog box. For the BDS-40, the OV Enable, Cell Voltage selection, and Intercell Enabled boxes are not available.

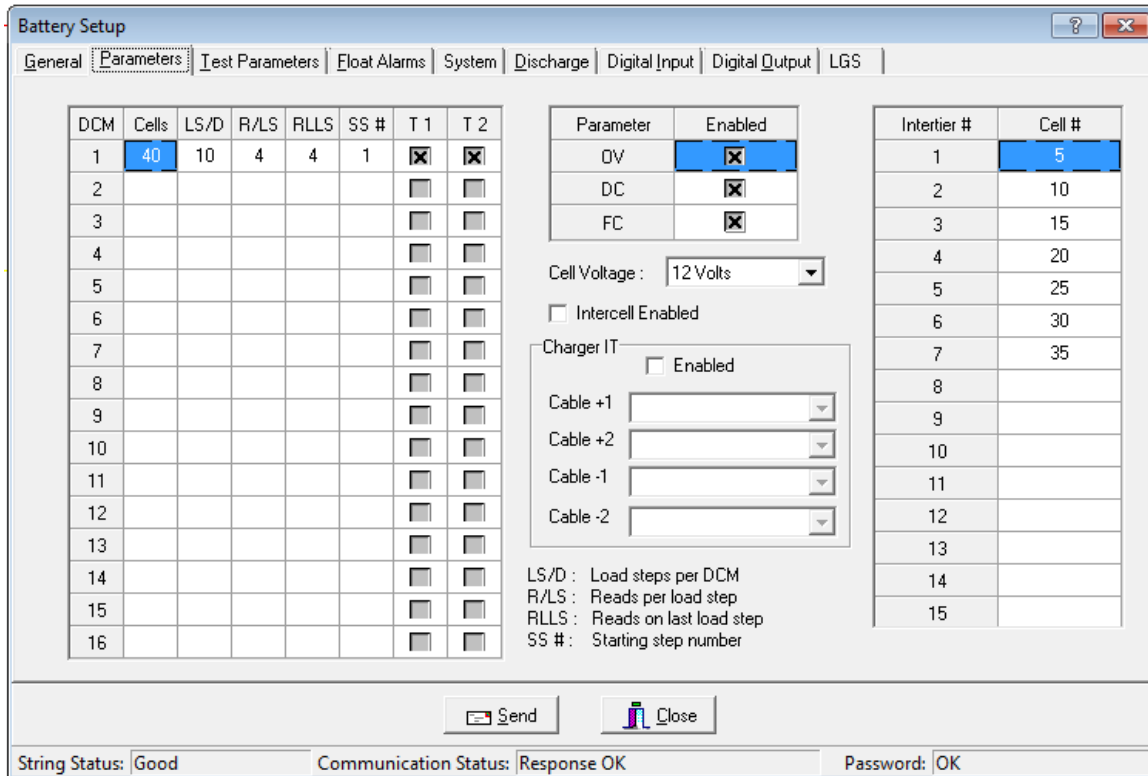


Figure 78. Battery Setup - Parameters (BDS-256)

**DCM** - For all DCM units 1 to 16 in use, configure these items according to the configuration chart on the following pages.

**Cells** - Total number of cells monitored by the DCM.

**LS/D** - Load Steps per DCM.

**R/LS** - Reads per Load Step.

**RLLS** - Reads on Last Load Step.

**SS#** - Starting Step Number.

**T1** and **T2** columns - Temperature 1 and 2. Each DCM can monitor up to two temperatures. No more than ten temperatures may be monitored for the entire string.

| Config          | DCM | Cells | LS/D | R/LS | RLLS | SS# |
|-----------------|-----|-------|------|------|------|-----|
| <b>1x198x1V</b> | 1   | 44    | 2    | 22   | 22   | 1   |
|                 | 2   | 44    | 2    | 22   | 22   | 3   |
|                 | 3   | 44    | 2    | 22   | 22   | 5   |
|                 | 4   | 44    | 2    | 22   | 22   | 7   |
|                 | 5   | 22    | 1    | 22   | 22   | 9   |
| <b>1x8x2V</b>   | 1   | 8     | -    | -    | -    | -   |
| <b>1x31x2V</b>  | 1   | 31    | 3    | 10   | 11   | 6   |
| <b>1x62x2V</b>  | 1   | 30    | 2    | 15   | 15   | 5   |
|                 | 2   | 32    | 2    | 15   | 17   | 7   |
| <b>1x65x2V</b>  | 1   | 32    | 2    | 16   | 16   | 5   |
|                 | 2   | 33    | 2    | 16   | 17   | 7   |
| <b>1x108x2V</b> | 1   | 36    | 2    | 18   | 18   | 1   |
|                 | 2   | 36    | 2    | 18   | 18   | 3   |
|                 | 3   | 36    | 2    | 18   | 18   | 5   |
| <b>1x122x2V</b> | 1   | 48    | 4    | 12   | 12   | 1   |
|                 | 2   | 48    | 4    | 12   | 12   | 5   |
|                 | 3   | 26    | 4    | 12   | 14   | 9   |
| <b>1x180x2V</b> | 1   | 46    | 2    | 23   | 23   | 1   |
|                 | 2   | 46    | 2    | 23   | 23   | 3   |
|                 | 3   | 46    | 2    | 23   | 23   | 5   |
|                 | 4   | 42    | 2    | 23   | 19   | 7   |
| <b>1x182x2V</b> | 1   | 46    | 2    | 23   | 23   | 1   |
|                 | 2   | 46    | 2    | 23   | 23   | 3   |
|                 | 3   | 46    | 2    | 23   | 23   | 5   |
|                 | 4   | 44    | 2    | 23   | 21   | 7   |
| <b>1x188x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 44    | 2    | 24   | 20   | 7   |
| <b>1x192x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
| <b>1x193x2V</b> | 1   | 44    | 2    | 22   | 22   | 1   |
|                 | 2   | 44    | 2    | 22   | 22   | 3   |
|                 | 3   | 44    | 2    | 22   | 22   | 5   |
|                 | 4   | 44    | 2    | 22   | 22   | 7   |
|                 | 5   | 17    | 1    | 17   | 17   | 9   |
| <b>1x203x2V</b> | 1   | 40    | 2    | 20   | 20   | 1   |
|                 | 2   | 40    | 2    | 20   | 20   | 3   |
|                 | 3   | 40    | 2    | 20   | 20   | 5   |
|                 | 4   | 40    | 2    | 20   | 20   | 7   |
|                 | 5   | 45    | 2    | 20   | 10   | 9   |
| <b>1x205x2V</b> | 1   | 40    | 2    | 20   | 20   | 1   |
|                 | 2   | 40    | 2    | 20   | 20   | 3   |
|                 | 3   | 40    | 2    | 20   | 20   | 5   |
|                 | 4   | 40    | 2    | 20   | 20   | 7   |
|                 | 5   | 45    | 2    | 20   | 25   | 9   |
| <b>1x210x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
|                 | 5   | 18    | 1    | 18   | 18   | 9   |
| <b>1x216x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
|                 | 5   | 24    | 1    | 24   | 24   | 9   |

Figure 79. BDS Configuration Data for Setup Files

| Config          | DCM | Cells | LS/D | R/LS | RLLS | SS# |
|-----------------|-----|-------|------|------|------|-----|
| <b>1x232x2V</b> | 1   | 46    | 2    | 23   | 23   | 1   |
|                 | 2   | 46    | 2    | 23   | 23   | 3   |
|                 | 3   | 46    | 2    | 23   | 23   | 5   |
|                 | 4   | 46    | 2    | 23   | 23   | 7   |
|                 | 5   | 48    | 2    | 23   | 25   | 9   |
| <b>1x234x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
|                 | 5   | 42    | 2    | 24   | 18   | 9   |
| <b>1x238x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
| <b>1x239x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
|                 | 5   | 47    | 2    | 24   | 23   | 9   |
| <b>1x240x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
|                 | 5   | 48    | 2    | 24   | 24   | 9   |
| <b>1x241x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
|                 | 5   | 24    | 1    | 24   | 24   | 9   |
|                 | 6   | 25    | 1    | 25   | 25   | 10  |
| <b>1x244x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
|                 | 5   | 24    | 1    | 24   | 24   | 9   |
|                 | 6   | 28    | 1    | 28   | 28   | 10  |
| <b>1x246x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
|                 | 5   | 24    | 1    | 24   | 24   | 9   |
|                 | 6   | 36    | 1    | 30   | 30   | 10  |
| <b>1x252x2V</b> | 1   | 48    | 2    | 24   | 24   | 1   |
|                 | 2   | 48    | 2    | 24   | 24   | 3   |
|                 | 3   | 48    | 2    | 24   | 24   | 5   |
|                 | 4   | 48    | 2    | 24   | 24   | 7   |
|                 | 5   | 24    | 1    | 24   | 24   | 9   |
|                 | 6   | 36    | 1    | 36   | 36   | 10  |
| <b>1x6x4V</b>   | 1   | 6     | 1    | 6    | 6    | 1   |
| <b>1x90x4V</b>  | 1   | 45    | 5    | 9    | 9    | 1   |
|                 | 2   | 45    | 5    | 9    | 9    | 6   |
| <b>1x120x4V</b> | 1   | 48    | 4    | 12   | 12   | 1   |
|                 | 2   | 48    | 4    | 12   | 12   | 5   |
|                 | 3   | 24    | 2    | 12   | 12   | 9   |
| <b>1x121x4V</b> | 1   | 48    | 4    | 12   | 12   | 1   |
|                 | 2   | 48    | 4    | 12   | 12   | 5   |
|                 | 3   | 25    | 2    | 12   | 13   | 9   |
| <b>1x122x4V</b> | 1   | 48    | 4    | 12   | 12   | 1   |
|                 | 2   | 48    | 4    | 12   | 12   | 5   |
|                 | 3   | 26    | 2    | 12   | 14   | 9   |
| <b>1x123x4V</b> | 1   | 48    | 4    | 12   | 12   | 1   |
|                 | 2   | 48    | 4    | 12   | 12   | 5   |
|                 | 3   | 27    | 2    | 12   | 15   | 9   |

Figure 80. BDS Configuration Data for Setup Files (continued)

|                 |   |    |    |   |   |   |
|-----------------|---|----|----|---|---|---|
| <b>1x60x6V</b>  | 1 | 30 | 5  | 6 | 6 | 1 |
|                 | 2 | 30 | 5  | 6 | 6 | 6 |
| <b>1x62x6V</b>  | 1 | 30 | 5  | 6 | 6 | 1 |
|                 | 2 | 32 | 5  | 6 | 8 | 6 |
| <b>1x65x6V</b>  | 1 | 32 | 4  | 8 | 8 | 1 |
|                 | 2 | 33 | 4  | 8 | 9 | 5 |
| <b>1x78x6V</b>  | 1 | 40 | 5  | 8 | 8 | 1 |
|                 | 2 | 38 | 5  | 8 | 6 | 6 |
| <b>1x80x6V</b>  | 1 | 40 | 5  | 8 | 8 | 1 |
|                 | 2 | 40 | 5  | 8 | 8 | 6 |
| <b>1x81x6V</b>  | 1 | 40 | 5  | 8 | 8 | 1 |
|                 | 2 | 41 | 5  | 8 | 9 | 6 |
| <b>1x60x8V</b>  | 1 | 30 | 5  | 6 | 6 | 1 |
|                 | 2 | 30 | 5  | 6 | 6 | 6 |
| <b>1x61x8V</b>  | 1 | 30 | 5  | 6 | 6 | 1 |
|                 | 2 | 31 | 5  | 6 | 7 | 6 |
| <b>1x30x12V</b> | 1 | 30 | 10 | 3 | 3 | 1 |
| <b>1x31x12V</b> | 1 | 31 | 10 | 3 | 4 | 1 |
| <b>1x32x12V</b> | 1 | 32 | 8  | 4 | 4 | 1 |
| <b>1x33x12V</b> | 1 | 33 | 10 | 3 | 6 | 1 |
| <b>1x36x12V</b> | 1 | 36 | 9  | 4 | 4 | 1 |
| <b>1x40x12V</b> | 1 | 40 | 10 | 4 | 4 | 1 |

**Figure 81. BDS Configuration Data for Setup Files (continued)**

**Parameter / Enabled** - The OV, DC and FC parameters are assigned to DCM #1. Select Enabled to view the parameter in String View and enable the hardware.

**OV** - Overall Volts. Not available for BDS-40.

**DC** - Discharge Current.

**FC** - Float Current.

**Cell Voltage** - From the drop-down list, select the nominal voltage of the cell or jar being measured.

**Intercell Enabled** - Select this box if making separate measurements for intercells. Not available for BDS-40.

**Charger IT** - Select the enabled check box if using the Charger IT option. This area allows you to select and assign a cable to a DCM and intertier channel. The Cable+1 is the first DCM and the Cable -1 is the last DCM.

**Note:** When intercells are enabled, they are defaulted to discrete. Each cable will have up to four intertier channels, for example:

- <DCM 1> <IT 1>
- <DCM 1> <IT 2>
- <DCM 1> <IT 3>
- <DCM 1> <IT 4>

**Note:** On combined reading board, the intertier channel number will always start the first available channel past the cells.

**Intertier # / Cell #** - For intertiers 1 to 15 in use, assign a cell number that relates to each intertier.


**Note:** When cell 1 is most negative, when assigning an intertier to a cell, use the cell number after the intertier.

The cell number is the lower of the two cell numbers across which the intertier is connected. For example, typing 16 assigns the intertier between cells 16 and 17. Each DCM can monitor up to ten intertiers. No more than 15 intertiers can be monitored for the entire string.

### 20.3. Battery Setup: Test Parameters (BDS)

String View > Setup|Battery|Test Parameters

The following appear on the Test Parameters dialog box.

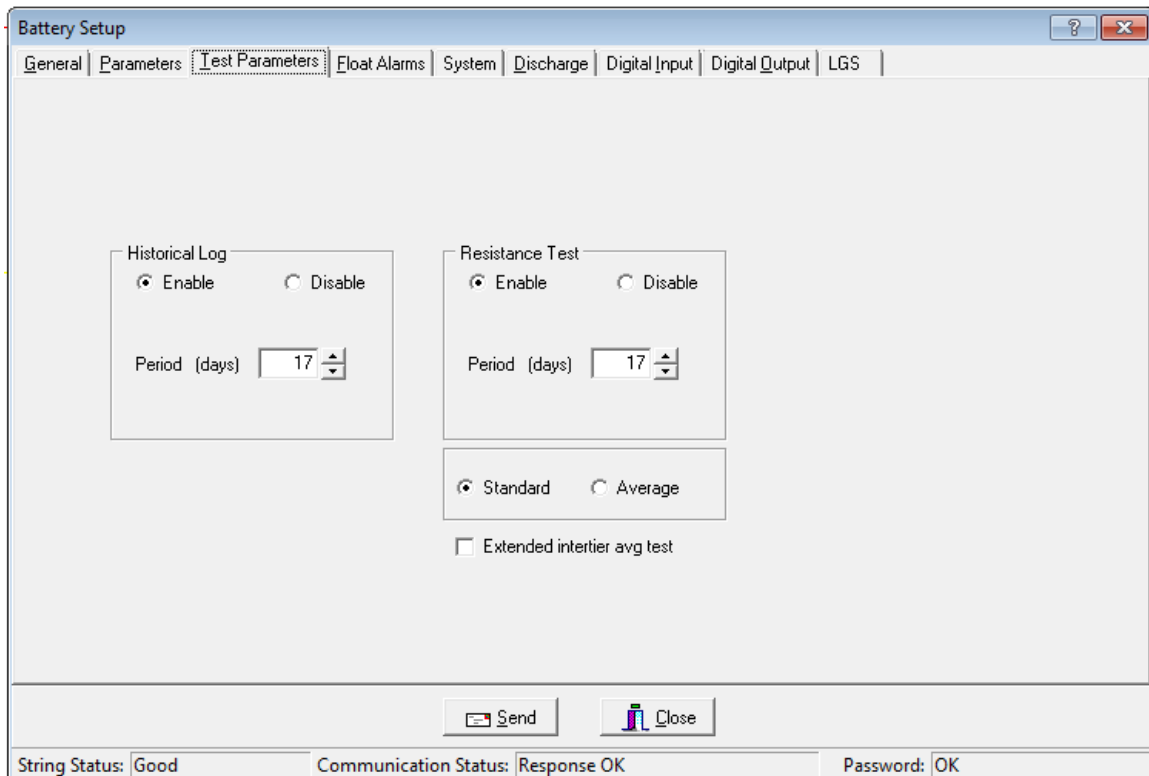

**Figure 82. Battery Setup - Test Parameters (BDS)**

**Logging / R-Test Time Mode area** - Click the **Absolute Date and Time** option button to specify the exact day of the month, from 1 to 28 (29, 30 and 31 are not used), and time the historical log is updated and the resistance test is performed. Click the **Day Interval** button to specify how often (in days) the historical log is updated and the resistance test is performed.

**Historical Log area** - Click **Enable** to activate, then complete Period (days) and Period (time) described below. Specify how often in days or the date and time the voltages, currents, and temperatures are recorded in the history log.

**Period (days) and Period (time)** - Either select how often the historical log is updated, or select the day of the month and time the log is updated.

**Resistance Test** area - Click **Enable** to activate, then complete **Period (days)** and **Period (time)** described below. Specify the resistance test interval in days or date and time. If set to 30 days, resistance is tested every 30 days starting at 12:00 A.M. (midnight). When the monitor performs a resistance test, it creates a historical log entry. For this reason, you may want to select a resistance test 14 days away from a historical log entry.

**Period (days)** and **Period (time)** - Either select how often the resistance test is performed, or select the day of the month and time the test is performed.

**Standard** or **Average** - Normally select **Standard**. If the charger employs digital control of battery voltage, which causes voltage fluctuation, select **Average**.

**Extended Intertier Avg Test** - If this box is checked, when a resistance test is performed, the intertier resistance is sampled a greater number of times and the result is averaged. This feature is useful when testing in high noise environments.

**Average Cell Resistance** - This field displays the average value of the last resistance test run.

**Resistance offset adjustment +/-** - This field allows you to adjust your resistance measurements by percentage with a plus or minus offset adjustment. This function only applies to future resistance tests that are rerun. You may enable or disable this function at anytime during the process by clicking on the Enabled checkbox.

## 20.4. Battery Setup: Float Alarms (BDS)

String View > Setup|Battery|Float Alarms

The following appear on the Float Alarms dialog box.

| Float Alarms   |  |                           |                        | Latch                               | Remote Reporting                    | Critical                            | Maintenance                         |
|--|--|---------------------------|------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| <input type="radio"/> Enable <input checked="" type="radio"/> Disable    |  | High Cell Voltage         | (volts) 14.500         | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> |
|  |  | Low Cell Voltage          | (volts) 13.200         | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> |
|  |  | High Overall Voltage      | (volts) 553.0          | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            |
|  |  | Low Overall Voltage       | (volts) 536.6          | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            |
|  |  | High Temperature          | (F) 82                 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> |
|  |  | Low Temperature           | (F) 69                 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> |
| <input checked="" type="radio"/> Global <input type="radio"/> Individual |  | Cell Resistance           | (microhms) 9001        | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> |
|  |  | Intertier Resistance      | (microhms) Input Level | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> |
|  |  | High Float Current        | (mamps) 500            | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> |
|  |  | Intercell Resistance      | (microhms) 400         | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/>            | <input checked="" type="checkbox"/> |
|  |  | High String Current       | (amps) 9999            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |
|  |  | High Cell Voltage Warning | (volts) 14.400         |                                     |                                     |                                     |                                     |
|  |  | Resistance % for Warning  | 99                     |                                     |                                     |                                     |                                     |

String Status: Good    Communication Status: Polling System Status    Password: OK

**Figure 83. Battery Setup - Float Alarms (BDS)**

**Float Alarms Enable or Disable** - Global control of all float alarms for local alarm status and alarm contact activation. Select Enable for the call-out of float alarms and digital input alarms. When Disable is selected, the String Status column on the String Status screen indicates Alarms Disabled.

**Cell Resistance Threshold - Global** applies the alarm level in the Cell Resistance (microhms) field to all cells. **Individual** and Input Level sets alarm levels on a cell basis using the Cell Resistance Alarm Levels box.



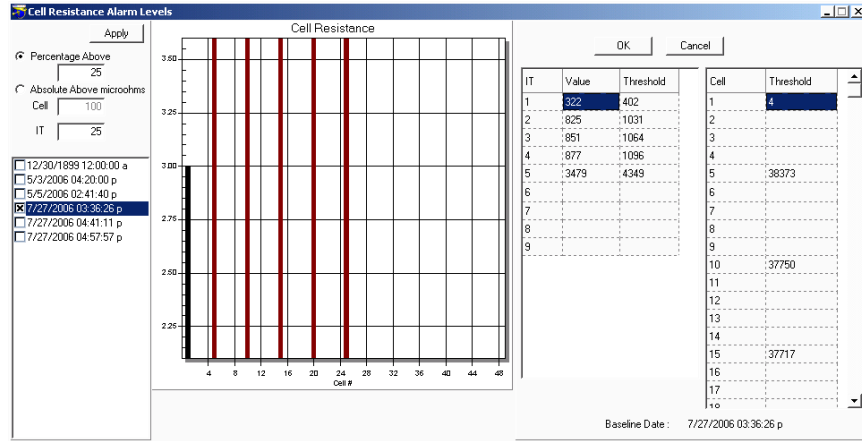


Figure 84. Cell Resistance Alarm Levels Setup (BDS)

**Cell Resistance Alarm Levels** box - To set Alarm Levels on a cell basis, click Individual and Input Level and select options on this box.

**Percentage Above** - Sets the cell alarm level a percentage above the selected dataset levels. Type a value (1 to 99) in the Percentage Above field.

**Absolute Above (Microhms)** - Sets the cell alarm level a numeric value above the selected dataset levels. Type a value in microhms in the Absolute Above field.

**Date area check boxes** - Click one dataset date in this area on which to base alarm levels. The system stores the date of the baseline data and displays it on the lower right after the Apply button is clicked.

**Apply** - Click apply to apply selected levels to the cells. The values appear in the Threshold column. If you do not want to edit individual cell levels (see below), click OK.

**Cell, Intertier and Threshold** columns - To edit individual cell or intertier alarm levels in the Threshold column, click the value and type a new value. After editing, click OK.

**Note** Values are not saved until Save or Send is clicked on the Float Alarms or another Battery Setup box.

**Alarm Thresholds** - For high and low cell voltage, overall voltage, temperature, and resistance, select violation threshold values that activate an alarm during a float condition. These thresholds are deactivated for 30 minutes following a resistance test. If a discharge occurs, the alarms are disabled until the overall voltage recovers to a value above the low threshold.


**High Cell Voltage Warning (volts)** - Type a value between the Low Cell Voltage and High Cell Voltage levels. This setting affects the bar graph colors on the Cell Voltage String View screen. During normal float condition, the bar colors change as follows:

|  |                            |        |
|--|----------------------------|--------|
| <b>Bar Colors for all Normal and Violation Types</b> | High Violation .....       | Red    |
|  | Warning .....              | Blue   |
|  | Normal.....                | Green  |
|  | Low Violation .....        | Yellow |
|  | Out of Range Values.....   | Maroon |
|  | Negative Cell Voltage..... | Black  |

String View > Setup|Battery|Float Alarms|Input Level *then Save or Cancel*

**Intertier Resistance Input Level** - Click **Input Level** to display the Input Alarm Level box. Type the resistance alarm level threshold (in microhms) for each intertier. The cell numbers in this box are the lower of the two cell numbers across which the intertier is connected. (These cell numbers are selected under Battery Setup|Parameters.)

**Note:** The charger cable is only used for BDS and is intended to only be used for individual thresholds.

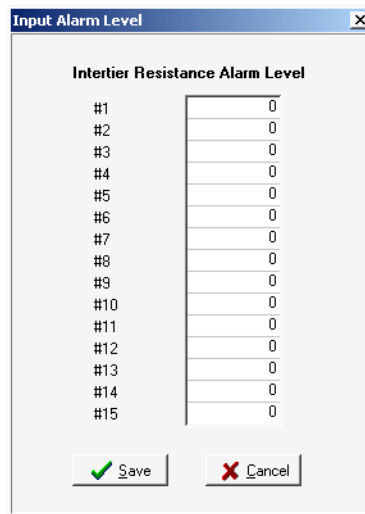

**Figure 85. Input Alarm Level (Intertier Resistance Alarm Level)**

**Percentage for Warning** - Determines the violation threshold that causes a Warning battery status. The value entered is a percentage of the internal resistance alarm. For example, if the internal resistance alarm is set to 100 microhms and the percentage for warning is 75%, the system issues a warning when the internal resistance is between 75 and 100 microhms. When the value exceeds 100 microhms, the system issues an alarm. Warning status is displayed only on the String Status and Historical Events screens, not on the Alarms screen.

<-----Normal-----75%<-----Warning----->100%-----Alarm----->

**Latch** - When selected, the alarm contact stays energized until manually reset. If not selected, the alarm contact de-energizes when the alarm condition clears.

**Remote Reporting** - When selected, causes the monitor to report the alarm. When not selected, reporting is disabled for that parameter. You must select this option and Remote Reporting Enable under Setup|Battery|General to enable the call out function and to display Alarm Detail on the Historical Events screen during polling.

**Critical and Maintenance** - Two alarm contacts are available. Select Critical or Maintenance to define which contacts energize upon alarm. If neither is selected, the Remote Reporting check box clears and alarm reporting is disabled for that parameter. These settings do not affect bar graph colors.

## 20.5. Battery Setup: System (BDS)

String View > Setup|Battery|System

The Thermal Runaway and Hardware parameters are used to trigger system events.

**Thermal runaway** can be a very destructive and serious condition on standby batteries if not identified in the beginning of the development stages. If thermal runaway is ignored, severe damage to the battery as well as surrounding equipment can occur resulting in costly repairs or worse, injury to personnel. In all cases, thermal runaway can lead to abrupt system failure and disruption of service if not detected. A proactive method of some form must be instituted to deal with a thermal runaway condition. Furthermore, as described in the International Fire Code (IFC), VRLA battery systems shall be provided with a listed device or other approved method to preclude, detect and control thermal runaway (IFC 608.3)<sup>1</sup>.

**Figure 86. Battery Setup - Thermal Runaway (BDS)**

**High Float Current (in mamps)** A float current threshold, which is independent of the Float Alarms - Float Current threshold, can be set. Entering a value of 0 will disable this parameter from the analysis for thermal runaway. Otherwise, a value from 1-5000ma can be entered. Seeing an abnormal rise in float current can be an indication of a thermal runaway condition. However, normal conditions like charging after a discharge can and will show elevated float currents for a period of time. The length of time and the amount of this elevated float current is difficult to predict as the depth of discharge and type of battery will affect this. Due to this, this parameter will be temporary disabled for making thermal analysis for 72 hours following a discharge.

<sup>1</sup> ICC, 2012 ICC International Fire Code® (IFC)

**Temperature Delta** A temperature delta can be set to identify the difference in temperature between two temperature probes. The desired location of these probes would be one measuring ambient temperature in the vicinity of the battery and the other placed directly onto the battery. Entering a 0 will disable this parameter for the analysis for thermal runaway. Otherwise, a value from 1-99F or 1-38C can be entered.

**Note:** To apply the Thermal Runaway feature, you must select a **High Float Current mamps** value and/or a **Temperature Delta** value. If both methods are used then both conditions must be met.

Although only one parameter can be used, it is advised to use both as the float current can be automatically disabled for a period of time following a discharge event. In the event a thermal runaway condition occurs during the recharge following a discharge, the temperature delta will rise indicating a thermal runaway condition. The BDS will now log high float current and/or temperature.

**Latch** - When selected, the high float current and temperature Delta alarm stays on until manually reset. If not selected, the alarm will go off when the high float current or temperature condition clears.

**Reporting** - When selected, the alarm will be reported and an alert will be displayed in the system. If not selected, the alarm will not be reported when a high float current or temperature alarm occurs on the system.

**Critical Alarm and Maintenance Alarm** - Two alarm are available for thermal runaway. Select Critical or Maintenance Alarm to define which alarm will report and appear in the system. If neither alarms are selected, alarm reporting is disabled for discharge.

**Battery Temperature and Ambient Temperature DCM/Probe** – These are selections to define where the probes are physically attached to the monitoring hardware. The system will know what DCM's are available but the individual setting the system up will need to know which probes to use and therefore properly assign them.

There is only one set of Latch/Reporting/Critical/Maintenance settings because either parameter will cause a thermal runaway event to be created in the alarm logging.

**Optional Relay Module** - If the system is configured with the optional relay module, each contact can be configured to a thermal runaway event as shown below. Each contact can be defined to a particular string and programmable to be latching or non-latching. If the alarm module is used for the BDS-40, there are only six alarm contacts available. If it is a BDS-256, then there are eight contacts available.

The **Hardware** section allows you to configure and generate alarms on hardware faults. At the time of this BMDM software release, the only hardware fault monitored is a communication fault between the BDS Controller and DCM's.

It is required to have Latching enabled. Critical and Maintenance should only be checked if the indicators on the front panel and alarm relay operation are required. Remote reporting is not required for this alarm to function properly.

## 20.6. Battery Setup: Discharge (BDS)

String View > Setup|Battery|Discharge

The following appear on the Discharge dialog box.

Figure 87. Battery Setup - Discharge (BDS)

### Discharge Selections Area:

**Enable** - Select to let the monitor capture and store discharge data. If not selected, the BDS does not log discharges.

**Latch** - When selected, the alarm contact stays energized until manually reset. If not selected, the alarm contact de-energizes when the discharge condition clears.

**Critical Alarm** and **Maintenance Alarm** - Two alarm contacts are available. Select Critical Alarm or Maintenance Alarm to define which contacts energize upon alarm. If neither is selected, alarm reporting is disabled for discharge. These settings do not affect bar graph colors.

### Discharge Detection Method Area:

Select **Voltage Mode** or **Current Mode**, then set the threshold **Level** in volts or amps to activate data logging during a discharge. When the voltage goes below the set level or the current exceeds the set level, the monitor begins recording cell voltages, discharge current, and overall voltage, based on the Deviation Storage Thresholds (described later). Only one temperature sample is stored at the beginning of the discharge.

**Note** If using the Current Mode, the minimum threshold **Level** to detect discharges must be at least 5% of the current transducer (CT) rating. For example, if the CT rating is 600A, the minimum Level is 30A.

Voltage mode allows data recording during recharge, since data logging does not stop until the voltage goes above the threshold. If measuring discharge current, use Discharge Current Mode as a reliable source of trigger.

To enable current mode, you must define the Current Channel on Setup|Battery|Parameters in the DCM# column.

**Report All Discharges** - If selected, the monitor reports all discharges to the Central computer. You must enable Remote Reporting on Setup|Battery|General.

**Report Problem Discharge Only** - If selected, the monitor reports only discharges that exceed voltage or time values set in Problem Discharge Thresholds (described later) to the Central computer.

**Disable** - If selected, stops the BDS from reporting a discharge.

**Deviation Storage Thresholds Area** - This feature does not apply to the BDS.

**Problem Discharge Thresholds Area:**

**Low Cell Voltage, Low Overall Voltage, and Maximum Discharge Time** - Select the voltage or time levels that trigger discharge reporting. To enable these values, select **Report Problem Discharge Only** on this screen. This setting also affects the bar graph colors on the Cell Voltage String View screen. During a discharge, the bars change color:

Normal Condition..... Green  
 Problem Discharge Thresholds or Low Cell Voltage..... Yellow

**Time to Go Area:**

The String View screen can display a Time to Go (TTG) number. When a BDS discharge starts, the TTG box on String View indicates the estimated remaining time that the battery can deliver power. To disable this feature, leave the Amp Hours and Peukert Number boxes at zero.

**IMPORTANT NOTE:** The TTG Time to Go number is only an estimate.


**Amp Hours** - Type the amp hours of the battery at the 8 hour rating. To disable the estimated time feature, set to 0.

**Peukert Number** - Type the Peukert number derived by using Peukert's equation. Refer to *Understanding the Time to Go Algorithm*. To disable the estimated time feature, set to 0.

## 20.7. Battery Setup: Digital Input (BDS)

String View > Setup|Battery|Digital Input

The Digital Input dialog box is available only when connected to String 1 of the BDS controller, as defined on Setup|System|String. The BDS has 16 digital inputs that may be connected to external dry contacts. You may set up these inputs to report an alarm when the external contacts are activated. An alarm can also activate the critical or maintenance relay on the BDS. Not available for BDS-40.

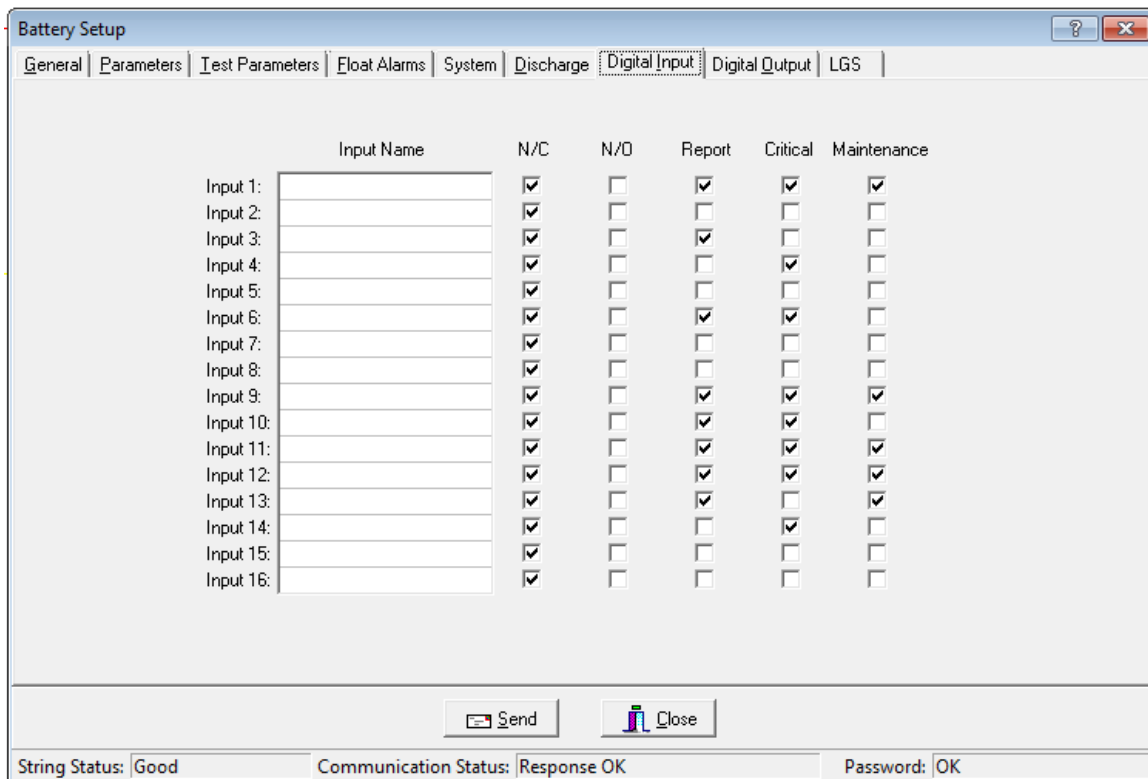

|           | Input Name | N/C                                 | N/O                      | Report                              | Critical                            | Maintenance                         |
|-----------|------------|-------------------------------------|--------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| Input 1:  |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Input 2:  |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Input 3:  |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Input 4:  |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> | <input type="checkbox"/>            |
| Input 5:  |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Input 6:  |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            |
| Input 7:  |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Input 8:  |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Input 9:  |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Input 10: |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            |
| Input 11: |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Input 12: |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Input 13: |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> |
| Input 14: |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> | <input type="checkbox"/>            |
| Input 15: |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Input 16: |            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |

String Status: Good      Communication Status: Response OK      Password: OK

Figure 88. Battery Setup - Digital Input (BDS-256)

**Input Name** - Assign a name to the input connected to the external contacts and indicate if the contacts are normally open or normally closed. To disable an input, clear the input name.

**N/C or N/O** - Select the N/C box if the external contacts are normally closed. Select the N/O box if the external contacts are normally open.

**Report** - Selecting this check box lets the monitor report a digital input alarm. When not selected, reporting is disabled for that input.

**Critical and Maintenance** - Two alarm contacts are available. Select Critical or Maintenance to define which contacts energize upon digital input alarm. If neither is selected, the Report check box clears and alarm reporting is disabled for that input. These settings do not affect the bar graph colors.

## 20.8. Battery Setup: Digital Output (BDS)

String View > Setup|Battery|Digital Output

The Digital Output dialog box is available only when connected to String 1 of the BDS controller, as defined on Setup|System|String. Not available for BDS-40.

**Note:** Hardware failure – Latching should be enabled when using this trigger.

|           | Output Name          | Trigger Name           | String #             | Enable                   | Latch                    |
|-----------|----------------------|------------------------|----------------------|--------------------------|--------------------------|
| Output 1: | <input type="text"/> | High Discharge Current | <input type="text"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Output 2: | <input type="text"/> | High Discharge Current | <input type="text"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Output 3: | <input type="text"/> | High Discharge Current | <input type="text"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Output 4: | <input type="text"/> | High Discharge Current | <input type="text"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Output 5: | <input type="text"/> | High Discharge Current | <input type="text"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Output 6: | <input type="text"/> | High Discharge Current | <input type="text"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Output 7: | <input type="text"/> | High Discharge Current | <input type="text"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Output 8: | <input type="text"/> | High Discharge Current | <input type="text"/> | <input type="checkbox"/> | <input type="checkbox"/> |

String Status: Good      Communication Status: Requesting Cell Connection      Password: OK

**Figure 89. Battery Setup - Digital Output (BDS-256)**

The BDS has eight optional relay contact control outputs you can define to trigger on an alarm event. After defining an Output Name and Trigger Name, the associated digital output can change state on an alarm to control a user-selected device. If you select Latch, the output latches. The relay is a Form C contact that de-energizes upon alarm condition reset.

**Output Name** - Type a name that describes the external device being controlled.

**Trigger Name** - From the drop-down list, select a parameter that energizes the Control Output relay contact.

**String #** - The BDS Controller can have up to eight strings. In the String # box, select All or the number that corresponds to the string number on System Setup|String.

**Enable** - Select Enable to energize a rear panel Control Output contact on a trigger event.

**Latch** - When selected, the Control Output contact energizes until manually reset. If not selected, the Control Output de-energizes when the trigger event clears.

**Note:** For BDS setup, the system shows information based on string one only. If you have more than one, they are defaulted from string one.



## 20.9. Battery Setup: LGS (BDS)

String View > Setup|Battery|LGS

Leibert Global Services (LGS) offers a service in which its Customer Response Center (CRC) remotely monitors your Vertiv BDS or MPM equipment and other facility devices around the clock. The CRC evaluates alarms and provides immediate telephone and e-mail assistance using a customer-defined response and escalation plan. For details about subscribing to the service, phone (800) 748-3666 or (800) SITEMON or e-mail LGS.monitoring@vertivco.com.

If you have subscribed to an LGS monitoring plan, complete the Battery Setup|LGS dialog box as follows.

The screenshot shows the 'Battery Setup' dialog box with the 'LGS' tab selected. The fields are as follows:

- System Type: 000 (xxx)
- Site ID: 00000 (00000 - 99999)
- Monitor Device Number: 0000000 (0000000 - 9999999)
- LGS Phone Number: (empty)
- LGS Report Time: 00:00 HH:MM
- Enabled:

Buttons: Send, Close

Status Bar: String Status: Good, Communication Status: Response OK, Password: OK

**Figure 90. Battery Setup - LGS (BDS)**

**System Type** - Type three characters to identify the device being monitored. For MPM-100, type MPM; for BDS-256, type 256; for BDS-40, type 040.

**Site ID** - Type the five character ID for customer site identification.

**Monitor Device Number** - Type the seven digit number used for customer device tracking.

**LGS Phone Number** - Type the telephone number that connects to the LGS remote monitoring service. This number is used for a daily communication test and alarm reporting.


**LGS Report Time** - Type the time the monitor calls in each day to confirm communication. Use the 24 hour clock; e.g., 13:45.

**Enabled** - Check this box to enable remote monitoring by LGS. Monitoring is enabled only after a monitoring plan has been purchased from LGS.

## 21. Selecting the Database Range

String Status > Setup|Database Range

To select a database range before connecting to a location, select Setup|Database Range. The Select Database Range dialog box appears.

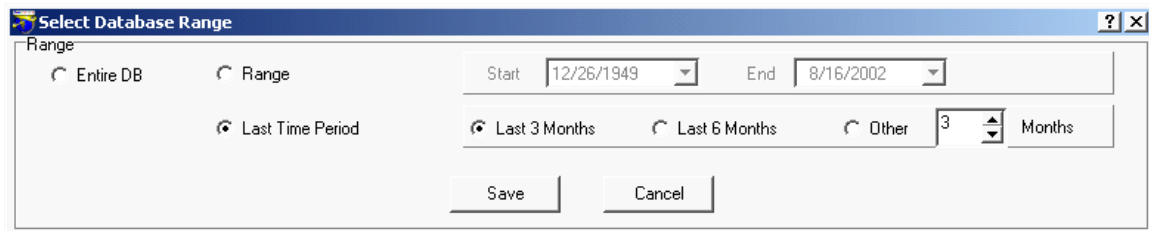

**Figure 91. Select Database Range**

**Entire DB** - Select to view all available data in the string database.

**Range** - To view data within a range of dates, click Range then select Start and End dates. To choose a date, click the date box drop-down button and click the calendar. To change months, click the left or right arrows on the calendar or press the Page Up / Page Down keys. To change years, hold the Ctrl key while pressing Page Up or Page Down.

**Last Time Period** - To select three or six months back from today's date, click Last Time Period then select **Last 3 Months** or **Last 6 Months**. Select **Other** for other month periods and choose a value. Close the dialog box to save the selections.

**IMPORTANT NOTE:** If no data appears on String View, select Entire DB to determine if data is available.

**Save** - Clicking Save saves the selected range for all databases, not just the database currently open. To close the dialog box without making any changes, click Cancel.

## 22. Connecting to a Battery Location

This section describes how to connect the BMDM program to a location. At this point, the computer and monitor should have been synchronized using Check Settings. You may connect to an MPM or BDS battery location site via modem or network from a remote location or on-site using the network or RS-232 Local port. These connection methods check all battery parameters. If you cannot connect to a location, refer to *Synchronizing Using Check Settings*. If using a Service computer, refer to the Service computer notes in the same section.

### 22.1. Connecting via Modem

Connection 

Confirm Setup\System|Link is set for a modem connection. On the String Status screen, click the string to which you want to connect, then click Connection to call the number specified under Setup\System|Link. Upon connection, String View displays all real time data. If no data appears, check the Setup|Database Range setting.

### 22.2. Modem Hang Up

Connection  then Hang up 

When connecting via modem, sometimes you may want to disconnect before the BMDM connects to the string. To stop modem dial out after clicking **Connection**, click the Hang Up button on String Status or select Setup|Hang Up.

**Note** If the BMDM connects and String View appears, closing the String View screen disconnects the modem.

### 22.3. Connecting via Network

Connection 

Confirm Setup\System|Link is set for a network connection. On String Status, click the string to which you want to connect, then click **Connection** to connect to the IP address specified under Setup\System|Link. Upon connection, String View displays all real time data. If no data appears, check the Setup|Database Range setting.

### 22.4. Connecting via RS-232 Local Port

Connection 

Confirm Setup\System|Link is set for a direct connection. On String Status, click the string to which you want to connect, then click **Connection**. If the site has been set up, String View displays all real time data. If the site was not set up, set up the new system.

## 23. Viewing Battery and Monitor Status

At program start, the String Status screen lists all available monitor systems. The program can sound an alarm, contact a pager, send a fax or email, or print alarm event details. When a monitor reports an alarm, an alarm detail box appears until you acknowledge it. The String Status column on the String Status screen lists the condition, and Update Date indicates alarm time. Historical Events displays the history and details about the alarm. When there is a new entry, click the flashing Historical Events button to display the history. This chapter describes these screens.

**F3** - Press the F3 key to toggle between the string, battery, location, and customer status screens.

There are two ways to view data from a battery: real-time and offline.

**Viewing battery data in real time** means having the computer connected to the monitor via modem, LAN, or an RS-232 cable. After communication is established, String View displays the real time readings.

**Viewing data offline** means viewing data removed from the monitor and stored in the computer database. To view data offline, highlight the site on String Status, then select View|Offline. String View displays data for the site. No voltages are displayed because the system is offline and not connected to the site.

**IMPORTANT NOTE:** If no bar graph data appears on String View, go to the menu bar on String Status, click Setup|Database Range, then select Entire DB to determine if data is available.

### 23.1. Opening and Saving a Database


String Status > Open  or File|Open

At start up, the BMDM opens the previously opened database. To open another database, select Open, highlight the desired database, and click Open. You do not need to close the currently open database before opening a new one.

String Status > File|Open Backup

The Open Backup selection works the same as Open. When the program opens an Access backup file, it converts it from a ZIP to an MDB file.

String Status > File|Save As

String Status > Backup database  or File|Backup Database

To save an Access database as an MDB database file, select File|Save As. To save the database as a backup, select File|Backup Database, which saves the MDB file as a ZIP file. BMDM generation of backup files for SQL-based MDF and LDF files is not available. Refer to *Understanding Polling, Extraction and Backup*.

String Status > Close  or File|Close

String Status > File|New

To close a database, select File|Close. To create a new database, select File|New.

## 23.2. String Status Screen

At start-up, the BMDM displays the String Status screen. The first time the program runs, no strings are listed. The communication and status fields summarize the polling status, string and location names, connection status, and errors.

| String ID | Customer Name | Location Name  | Battery Name | String Name | String Status | Monitor Status | Update Date/Time      |
|-----------|---------------|----------------|--------------|-------------|---------------|----------------|-----------------------|
| 1         | ALBERCORP     | BOCA RATON LAB | BATTERY 8x40 | STRING 1    | Unknown       | Network Error  | 7/21/2004 12:38:09 PM |
| 2         | ALBERCORP     | BOCA RATON LAB | BATTERY 8x40 | STRING 2    | Unknown       | Network Error  | 7/21/2004 12:05:26 PM |
| 3         | ALBERCORP     | BOCA RATON LAB | BATTERY 8x40 | STRING 3    | Unknown       | Network Error  | 7/21/2004 12:05:49 PM |

Polling Site:  Customer:  Location:  Battery:  String:   
 Communication Status: idle Sort: Location Name Modem Status:

**Figure 92. String Status**

String Status has up to eight columns that indicate the status of each string: String ID, Customer Name, Location Name, Battery Name, String Name, String Status, Monitor Status, and Update Date/Time. The columns are updated every time the monitor reports status, you manually call a location, or during polling. You can hide the String ID, Customer Name, Location Name, and Battery Name columns using Setup|Preferences.

**String ID** - The string ID is needed only if using a pager. When a page is issued, the numeric message includes the string ID, which indicates the string in alarm condition.

**String Status** - The String Status column reports six conditions on the Historical Events screen, no priority assigned, and eleven on the String Status screen, each assigned a priority. For example, if conditions Alarm and Warning exist, when the monitor calls, it reports Alarm because Alarm has higher priority than Warning. However, Warning is not lost. When you acknowledge and reset Alarm, the Warning status appears on disconnect.

| Priority | Status                  | Meaning  |
|----------|-------------------------|--|
| 1        | Acknowledge             | When acknowledge function is enabled, indicates an event has occurred that must be acknowledged, either through the program or by pressing the reset button. |
| 2        | Names do not match      | Location, battery or strings names do not match between the hardware and database.   |
| 3        | Names need to be set up | Location, battery or strings names are not programmed into the hardware.   |
| 4*       | DCM Com Error           | Communication error between DCM and BDS Controller.  |
| 5        | Discharging             | The battery is in discharge.   |
| 6*       | Unknown                 | The system has not yet been called. (New string entry.)  |
| 7*       | Discharge Occurred      | Battery discharge occurred.  |
| 8*       | Alarm                   | A battery parameter violated an alarm threshold.   |
| 9*       | Warning                 | A resistance reading violated a warning threshold.   |
| 10*      | Alarm Disabled          | Alarm Disabled in Battery Setup.   |
| 11       | Good                    | System within normal parameters.   |

\* also appears on Historical Events screen.

**Monitor Status** - The Monitor Status column can report ten conditions, which do not have priority ratings assigned.

| Status         | Meaning  |
|----------------|--|
| Invalid Data   | Data received from the monitor was corrupted.  |
| Check Hardware | Monitor reported a hardware failure. Items checked are described in <i>Diagnostics - Self Test</i> .   |
| Network Error  | Cannot connect or cannot initialize.   |
| No Dial Tone   | No dial tone detected when calling.  |
| Monitor Busy   | Busy signal detected when calling.   |
| Modem Error    | Modem cannot be initialized.   |
| Inactive       | Monitor did not answer. This could be hiding a problem. With no response, assumes the monitor is inoperative. For no dial tone or a busy line, attempts to poll a second time. |
| Active         | Monitor answered. No problems reported.  |
| Data Corrupt   | After connecting to the monitor, you must click Clear Data Memory on Diagnostics Memory.   |
| Comm Error     | During autopolling, if computer cannot establish communication after three tries, this message appears.  |
| Line Busy      | The phone number the modem dialed is busy.   |
| No Answer      | The phone number the modem dialed did not respond.   |

All conditions except Active produce an Unknown in the String Status column.

**Update Date/Time** - The date and time the status was delivered.

String Status > Sort|*column name*

The String Status screen sorts on String ID. To sort on a different column, select Sort then the column name, or click a column header. To move columns, click and drag a column header onto another column header.

String Status > Right click a string name


or String Status > View|String in Alarm or String in Discharge or String in Inactive


|                      |  |
|----------------------|--|
| Strings in Alarm     | Right click on a string name on the String Status screen to display a pop-up menu. Click Strings in Alarm, Strings in Discharge or Strings in Inactive to display a list of the selected category. The Strings in Alarm screen is shown below. The Strings in Inactive and Strings in Discharge screens are similar. |
| Strings in Discharge |  |
| Strings in Inactive  |  |
| Extract Data         |  |
| Get String Status    |  |
| Acknowledge Alarm    |  |

**Figure 93. String Status Viewing Selection**

| String Name | String Status | Monitor Status | Update Date           |
|-------------|---------------|----------------|-----------------------|
| STRING 3    | Alarm         | Active         | 3/19/2004 10:21:35 AM |
| STRING 5    | Alarm         | Active         | 3/19/2004 10:21:56 AM |
| STRING 6    | Alarm         | Active         | 3/18/2004 1:21:04 PM  |

**Figure 94. Strings in Alarm**


String Status > Extract all data  or String Status > Right click a string name | Extract data  
 The **Extract All Data** button and the **Extract Data** item on the pop-up menu are enabled if Auto Extract Data is selected and Disable Auto Polling / Auto Answering is not selected on Setup|Communication. The Extract All Data button polls all strings listed on the screen. Extract Data polls only the string highlighted. In both cases, the BMDM gets the string status and alarm events and extracts the voltage float data, resistance data, and discharge data.

String Status > Call all modem strings  or  
 String Status > Right click a string name | Get String Status  
 The **Call All Modem Strings** button and the **Get String Status** item on the pop-up menu are enabled if any string is connected via modem and Auto Extract Data is selected and Disable Auto Polling / Auto Answering is not selected on Setup|Communication. The Call All Modem Strings button polls all strings listed on the screen. Get String Status polls only the string highlighted. In both cases, the BMDM gets the present string status and alarm events, but does not extract data.


String Status > Right click a string name | Acknowledge alarm

You may acknowledge alarms three ways. One way is to right click the mouse on the String Status screen and click Acknowledge Alarm on the pop-up menu. Refer to *Alarm Acknowledge* for details.

### 23.3. Report Alarm Event Screens

String Status > Show all alarm events 

There are four dialog boxes that appear on String Status when an alarm event occurs: Report Alarm Event, Print Report Alarm Event, Fax Report Alarm Event, and Page Report Alarm Event. If there is an alarm condition, the Report Alarm Event box appears during polling.

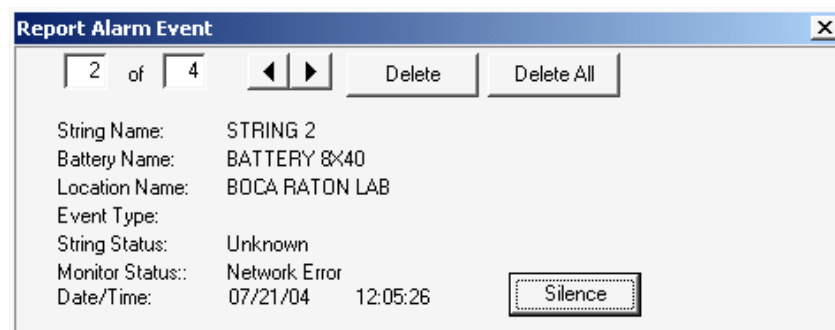


**Figure 95. Report Alarm Event**

The Print, Fax and Page Report Alarm Event boxes appear only if Print Alarm Event, Fax Alarm Event or Page On Alarm are checked on Setup|System|Reporting and Disable Alarm Reporting on Setup|Preferences is not checked. To stop the audible alarm if enabled, click **Silence**. Click Delete to remove the currently displayed alarm. Delete All removes all displayed alarms. The print, fax, and page event boxes close after the printer, fax machine or pager receives the alarm.

Clicking Show All Alarm Events displays the Report Alarm Event dialog box. You may view all events by clicking the left or right arrows on the box.

### 23.4. Summary Screen

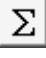String Status > Summary  or View|Summary

The Summary dialog box displays a status summary of the battery sites. Click the Summary button to display this box.

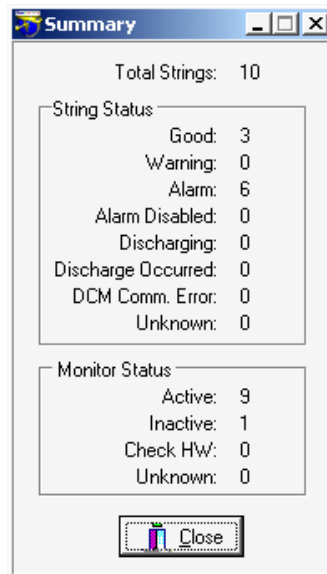



Figure 96. Summary (Battery Sites)

### 23.5. Historical Events Screen

String Status > Historical events  or View|Historical Events

Note: View Alarm has a ringing clock 

When a new event is added, the Historical Events button flashes. Select Historical Events to display the Historical Events screen, which lists reported events and the history of one or all strings. You may click the column header to sort on the column. To move columns, click and drag a column header onto another header.

String Status > View|Historical Events|View|Single String

To view a single string, select Single String on the Historical Events screen. On the Input Dialog box, choose a string name from the drop-down list, then click OK. The screen displays all the historical events for the selected string.

| String ID | Customer Name | Battery Name | String Name | String Status | Alarm Detail                      | Monitor Status | Date/Time            |
|-----------|---------------|--------------|-------------|---------------|-----------------------------------|----------------|----------------------|
| 2         | ALBERCORP     | BATTERY 8x40 | STRING 2    | Alarm         | Low Temperature 1 Alarm           | Active         | 3/15/2004 5:39:00 PM |
| 2         | ALBERCORP     | BATTERY 8x40 | STRING 2    | Alarm         | High Temperature 2 Alarm          | Active         | 3/10/2004 8:59:03 PM |
| 2         | ALBERCORP     | BATTERY 8x40 | STRING 2    | Alarm         | Low Cell Voltage Alarm at Cell 37 | Active         | 3/2/2004 5:12:11 PM  |

View: All Strings      Sort: String Name (A)

Figure 97. Historical Events



**Alarm Detail** - A computer polling or receiving an alarm call from a monitor receives and displays this information if:

- Remote Reporting options are enabled under Setup|Battery|Float Alarms,
- Remote Reporting is enabled on Setup|Battery|General,
- Report Option is not disabled on Setup|Battery|Discharge, and
- Disable Alarm Reporting is not checked on Setup|Preferences.

The Alarm Detail column can report the following conditions, which do not have priority ratings assigned.

 
|  |                                    |
|--|------------------------------------|
| High Cell Voltage at String <i>n</i> , Cell <i>n</i>         | High Intertier Resistance <i>n</i> |
| Low Cell Voltage at String <i>n</i> , Cell <i>n</i>          | Discharge                          |
| High Resistance at String <i>n</i> , Cell <i>n</i>           | Digital Input <i>n</i>             |
| High Intercell Resistance at String <i>n</i> , Cell <i>n</i> | UPS Low Voltage                    |
| High Overall Voltage   | UPS Line Fail                      |
| Low Overall Voltage  | Pager Busy                         |
| High Float Current   | Pager Error                        |
| Warning at String <i>n</i> , Cell <i>n</i>                   | Pager Fail                         |
| High Temperature <i>n</i>                                    | Unknown                            |
| Low Temperature <i>n</i>                                     | Inactive                           |

### 23.6. String View Screens

From String Status, click Connection  to display the String View screen.

String View > Cell voltage or Cell resistance or Intercell resistance

From the String Status screen, highlight the location name, then click Connection. After communication is established, the String View screen appears. The title bar displays S, B and L for string, battery, and location names. This chapter describes features common among the Cell Voltage, Cell Resistance, and Intercell Resistance screens, which are accessed by clicking the tabs. The Intercell Resistance tab appears for a BDS only after you request a resistance test.



To open a different string, choose a string name on the drop-down list or click the arrows on String View. Only MPM and BDS strings with the same phone number appear in the list. MPM strings with a MUX setting of zero do not appear.


String View > View|Undo Zoom

To view the level of an individual cell, refer to *Cell Voltage Box*. To perform a trend analysis, refer to *Trend Analysis*. To zoom in on the bar graph, place the cursor over the bars and drag a rectangle over the area of interest while holding the left mouse button. To restore to original size, click Undo Zoom.

## 23.7. Cell Voltage (String View Screen)

String View > Cell voltage (default)

The String View Cell Voltage screen bar graph shows the voltage of each cell or module within the battery. A readings summary appears at the bottom. The cells with the maximum and minimum values are indicated as Max(*n*) and Min(*n*). If current channel and temperature transducers are installed, these readings also appear. If you click a bar on the graph, the cell voltage value appears in the box near the top left.

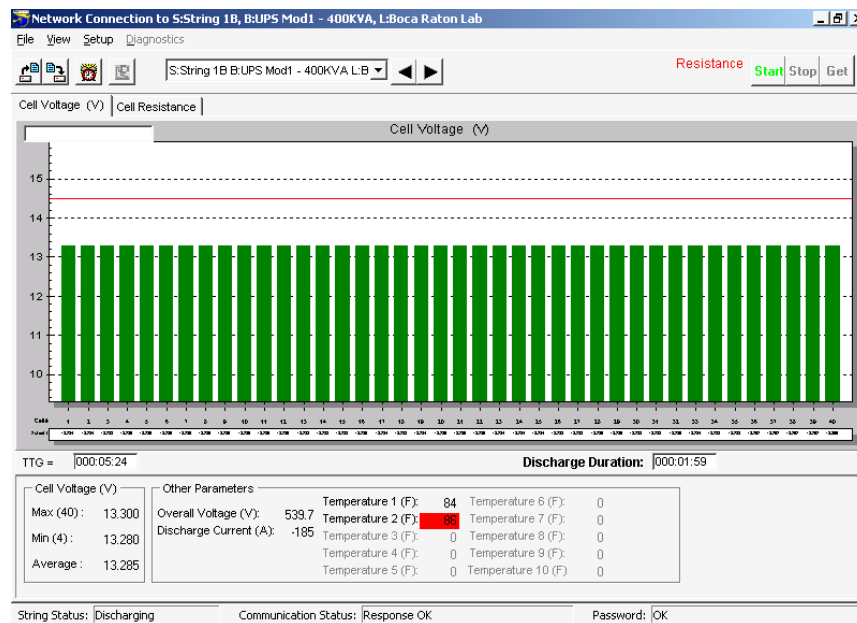

**Figure 98. String View - Cell Voltages (MPM shown)**

Clicking certain text in the lower portion of the String View screen displays screens related to the item clicked. For example, clicking Other Parameters - Overall Voltage displays the Overall Voltage Trend screen.

If the Peukert number is enabled for the MPM under Battery|Setup|Discharge, the screen displays the **TTG** (Time to Go) and **Discharge Duration** boxes. During discharge, TTG gives an estimate of the discharge time remaining, based on user-entered data. Discharge Duration indicates the time that has elapsed since the start of the discharge.

**IMPORTANT NOTE:** The TTG Time to Go is only an estimate.

When in discharge mode, if a cell goes negative, the respective bar on the bar graph is displayed in black.

The String Status box on the bottom left of the String View screen can report nine conditions.

| Priority | Status                  | Meaning  |
|----------|-------------------------|--|
| 1        | DCM Com Error           | Communication error between DCM and BDS Controller.  |
| 2        | Discharging             | The battery entered a discharge.   |
| 3        | R-Test in Progress      | Resistance test in progress.   |
| 4        | Calibration in Progress |  |
| 5        | Check Hardware          | Monitor reported a hardware failure. The items checked are described in <i>Diagnostics – Self Test</i> . |
| 6        | Discharge Occurred      |  |
| 7        | Alarm                   | A battery parameter violated an alarm threshold.   |
| 8        | Warning                 | A resistance reading violated a warning threshold.   |
| 9        | Good                    | System is within normal parameters.  |

### 23.8. Cell Resistance and Intercell Resistance (String View Screens)

String View > Cell resistance or Intercell resistance

You may automatically read internal cell resistance and intercell resistance by setting a timer under Setup|Battery|Test Parameters, or you may start the test from the Cell Resistance screen. The BMDM reads cell and intercell resistance at the same time. The Intercell Resistance tab (BDS only) appears after the BMDM performs a resistance test. An intercell reading option is required in the BDS.

The Cell Resistance and Intercell Resistance screens display bar graphs. Click the Cell Resistance tab to transfer resistance readings from monitor to computer. It may take a few seconds for the bar graph to appear. If readings are available, the BMDM displays the latest set and saves them to the database with the date and time taken.


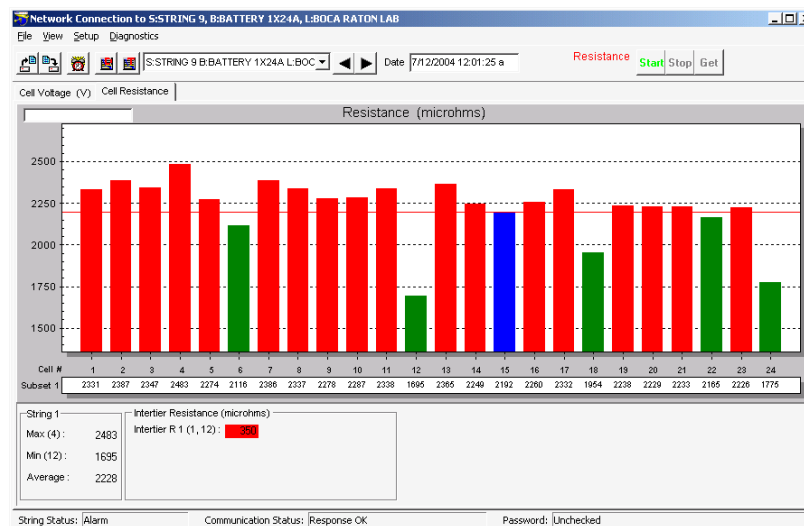


Figure 99. String View - Cell Resistance (MPM shown)

String View > Start resistance test or Stop resistance test or Get test results



To start a resistance test and capture new readings, click Start. After the Test in Progress message disappears, the monitor Resistance Test LED goes out and the Get button becomes active. Click Get to display the readings and transfer them to the computer. The bottom of the screen summarizes resistance and intertier values. Intertier cells are indicated in black. To stop the test before completion, click Stop.

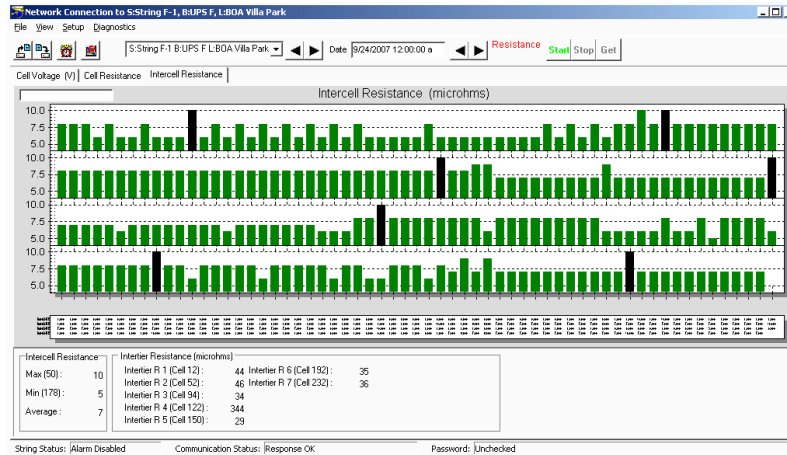

**Figure 100. String View - Intercell Resistances (BDS only)**

To view the Intercell Resistance bar graph, click the Intercell Resistance tab.

Clicking Start when using a BDS selects all DCM's for testing. For troubleshooting, you may select Diagnostics|R-Test in a DCM and choose which DCM's to resistance test. Refer to *Resistance Testing Multiple DCM Units*.

## 23.9. Historical Graphs

String View > Cell voltage or Cell resistance or Intercell resistance

When the BMDM is displaying a String View Cell Voltage, Cell Resistance or Intercell Resistance screen, you may save or view historical graphs.

String View > Save history record  or File|Save history record

**Save History Record** - To save a history record of the graph and table values on the String View screen, click Save History Record. This captures the readings, stamped with the date and time taken.

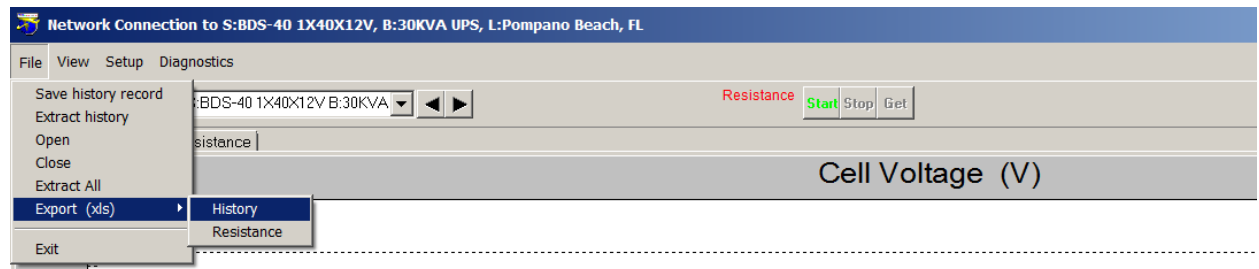



Figure 101. History Options and Record Date/Time Box

String View > Open history record  or File|Open

**Open** - To display a historical graph and table on String View, click Open History Record, select a date/time, and click OK. The graph and table appear, with the historical record date/time box at the top right of the screen. You may step through historical records by clicking the left or right arrows.

String View > File|Close

**Close** - To close the history record and return to the active String View screen, click Close. (Do not click the X on the upper right corner.) The historical graph, record date/time box, and left/right arrows close.

String View > File|Extract History *then (optional) File|Open|date then File|Close*

**Extract History** - Click Extract History to have the computer extract historic float data for the string the computer is polling. To view the extracted data, click File|Open and select the date. If a date is not listed, no new data was extracted on that date.

String View > File|Extract All *then (optional) File|Open|date then File|Close*

**Extract All** - This function is similar to the Extract All Data button on String Status, except String View is displaying an active connection. Click Extract All to extract historic float data, resistance data, and discharge data for the string being polled. To view the extracted data, click File|Open and select the date. If a date is not listed, no new data was extracted on that date.

The Export History (Voltage) function allows you to export resistance data by date and time. To export history on resistance, from the main menu, click **File, Export** (xls) then History. The **Select Date/Time** window appears to select the date and time of the data to be exported. The file will be exported and saved to the following default folder: ... \Alber\MPM Manager\Export\History\_BDS-40 with the string configuration and the month, day, year and time. (for example; History\_BDS-40 1X40X12V\_02\_06\_12\_08\_15\_00\_am.xls). Click **OK** to export the file.

The Export Resistance function allows you to export resistance data by date and time. To export history on resistance, from the main menu, click **File, Export** (xls) then Resistance. The **Select Date/Time** window appears to select the date and time of the data to be exported. The file will be exported and saved to the following default folder: ... \Alber\MPM Manager\Export\Resistance\_BDS-40 with the string configuration and the month, day, year and time. (for example; Resistance\_BDS-40 1X40X12V\_02\_06\_12\_09\_45\_00\_am.xls). Click **OK** to export the file.

### 23.10. Cell Voltage Box

String View > Click a bar on the graph or Alt + Click a bar on the graph

To display the numerical value of an individual cell on the String View Cell Voltage screen, click a bar on the graph. The cell voltage value appears in the box near the top left. To display the Cell Voltage box, hold the Alt key while clicking a bar. The Cell Voltage box opens to the right of the bar graph.

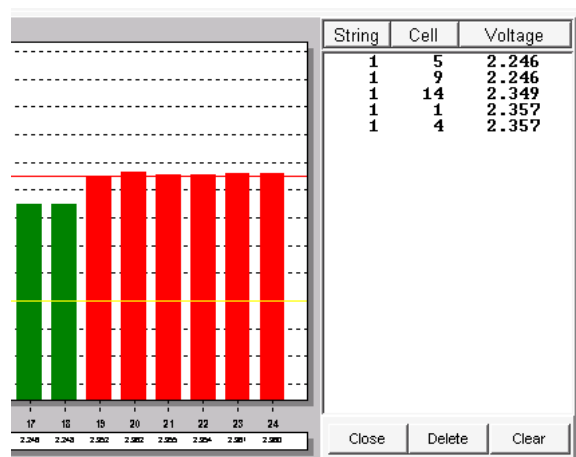


Figure 102. Cell Voltage Box

You may create a list of cells in the Cell Voltage box and monitor the continually updated voltages. This is convenient when monitoring a discharge. To add cells to the list, hold the Alt key and click a cell bar. To sort the list, click the String, Cell or Voltage column header. To remove a cell from the list, click the cell listing to highlight it, then click Delete. To remove all cells from the list, click Clear. To close the box, click Close.

### 23.11. Trend Analysis

String View > Click a bar to make it gray; right click the bar; Trend|Cell or Average

To perform a voltage, resistance or intercell resistance trend analysis for a cell, click a bar of interest on the graph to change it to gray, then right click the same bar to display a pop-up menu.

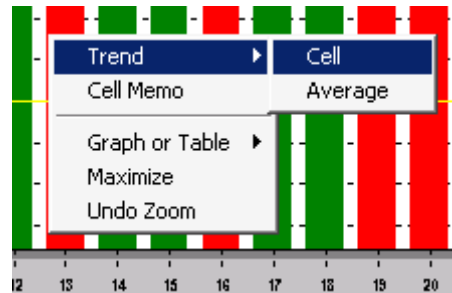


Figure 103. Trend Menu

On the pop-up menu, click **Trend** then **Cell** or **Average** to display the trend analysis graph. If the trend analysis box has active Previous/Next Parameter arrows, you may click them to view other cells. All trend analysis screens have a Print button.

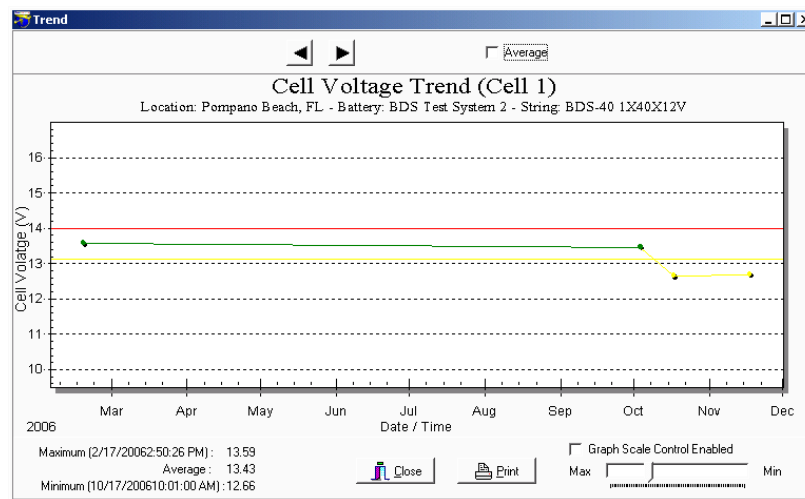




Figure 104. Trend - Cell Voltage (Typical of all Trend screens)

To use the **Graph Scale Control** to vary the y-axis scale on the graph, click the Graph Scale Control Enabled check box. This keeps the y-axis the same when viewing other cells. To determine a data point numerical value (in volts or ohms) and date and time for an event on the graph, click a dot on the graph. The value appears on the upper left. Right click a graph to change display features, such as font size, shadows, numeric precision or grid. The Average check box averages the readings.


## 23.12. Alarm Data

String View > View alarm  or View|Alarm

The MPM or BDS monitor constantly checks threshold values set under Battery Setup. As long as alarms are enabled, the monitor creates a record of thresholds violated. Click View Alarm to display alarm screens.

String View > View alarm  or View|Alarm *then, if not displayed, Get current alarms*  or View|Current Alarm

The **Current Alarms** screen indicates Active or Latched for the alarm contacts. **Active** indicates a parameter is presently violating a threshold. The screen displays the alarm name and start time. **Latched** indicates the parameter returned to normal, but the alarm relay must be reset. The end time indicates when the alarm event changed to a latched state. Peak Value lists the highest or lowest value reached during the event. For latch to function, enable the latch under Battery Setup for each parameter. If latch is not selected, the alarm contact de-energizes when the parameter returns to normal. A record of a present alarm is saved as a Current Historical Alarm.

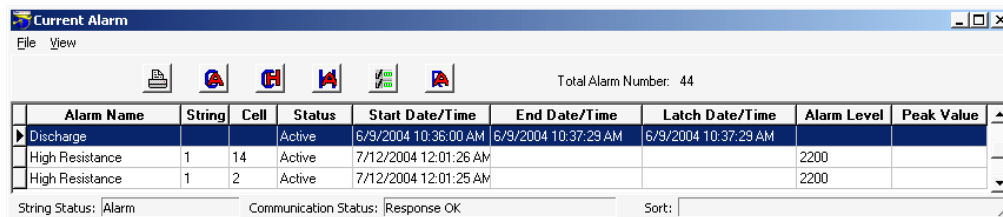



The screenshot shows a window titled "Current Alarm" with a menu bar (File, View) and a toolbar. The main area contains a table with the following data:



| Alarm Name      | String | Cell | Status | Start Date/Time       | End Date/Time        | Latch Date/Time      | Alarm Level | Peak Value |
|-----------------|--------|------|--------|-----------------------|----------------------|----------------------|-------------|------------|
| Discharge       |        |      | Active | 6/9/2004 10:36:00 AM  | 6/9/2004 10:37:29 AM | 6/9/2004 10:37:29 AM |             |            |
| High Resistance | 1      | 14   | Active | 7/12/2004 12:01:26 AM |                      |                      | 2200        |            |
| High Resistance | 1      | 2    | Active | 7/12/2004 12:01:25 AM |                      |                      | 2200        |            |

Below the table, there are status fields: String Status: Alarm, Communication Status: Response OK, and a Sort: field.

Figure 105. Current Alarm List

String View > View alarm  or View|Alarm *then Reset alarm*  or View|Reset Alarm

When you select Alarm, active or latched alarms in the monitor are retrieved. These alarms stay active until the condition clears or you click Reset Alarm. However, if you click Reset Alarm and the violation still exists, the alarm reappears in the Current Alarm list.


String View > View alarm  or View|Alarm *then Get current historical alarms*  or View|Current historical alarm

The **Current Historical Alarm** screen displays alarms that reset or cleared on their own and were not set to latch. Select Current Historical Alarm to retrieve the alarms still in monitor memory. **Normal** indicates the alarm returned to a valid value on its own. No reset date or time is displayed. If an alarm exists and it is reset, an entry is created in Current Historical Alarms at the reset time, and a new alarm is created because the alarm condition still exists. **Reset** indicates a latched alarm was reset. The reset date and time column indicates when the reset occurred. Peak Value lists the highest or lowest value the parameter reached during the event. When you select Current Historical Alarm, data is transferred from the monitor to the database and saved under Historical Alarms. If you select Current Historical Alarm using a Central computer, the current history data is permanently removed from the monitor.



String View > View alarm  or View|Alarm then View historical alarms  or View|Historical alarm


The **Historical Alarm** screen shows a history of alarms transferred to the computer database using Current Historical Alarm. Select Historical Alarm to display a list of alarm events that pertain to the battery and are saved in the database.

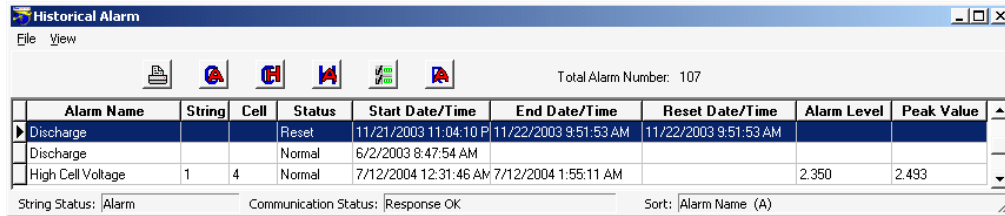

| Alarm Name        | String | Cell | Status | Start Date/Time       | End Date/Time         | Reset Date/Time       | Alarm Level | Peak Value |
|-------------------|--------|------|--------|-----------------------|-----------------------|-----------------------|-------------|------------|
| Discharge         |        |      | Reset  | 11/21/2003 11:04:10 P | 11/22/2003 9:51:53 AM | 11/22/2003 9:51:53 AM |             |            |
| Discharge         |        |      | Normal | 6/2/2003 8:47:54 AM   |                       |                       |             |            |
| High Cell Voltage | 1      | 4    | Normal | 7/12/2004 12:31:46 AM | 7/12/2004 1:55:11 AM  |                       | 2.350       | 2.493      |

String Status: Alarm      Communication Status: Response OK      Sort: Alarm Name (A)


**Figure 106. Historical Alarm List**

String View > View alarm  or View|Alarm then Select historical alarms  or View|Selection

If any alarm records exist, select Selection to display the Historical Alarm Selection dialog box, then choose alarm filters, such as **All Dates** or **Selected Types**, so only alarms of interest appear.

String View > View alarm  or View|Alarm then File|Delete or File|Delete All

To delete an alarm from the database, highlight the alarm line, then select File|Delete. To delete all alarms for the string, select File|Delete All. If the Historical Alarm list is filtered using the Historical Alarm Selection box, selecting Delete All will delete all alarms in the database, not just those listed on the screen.

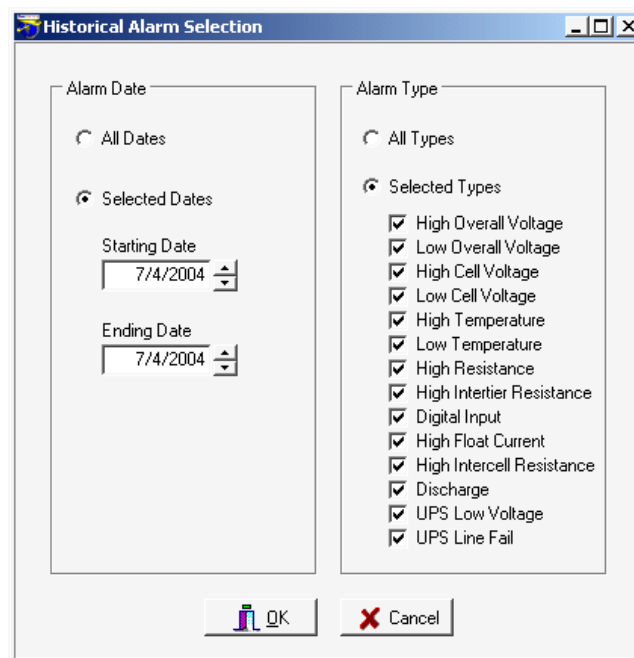

**Historical Alarm Selection**

Alarm Date

All Dates

Selected Dates

Starting Date: 7/4/2004

Ending Date: 7/4/2004

Alarm Type

All Types

Selected Types

- High Overall Voltage
- Low Overall Voltage
- High Cell Voltage
- Low Cell Voltage
- High Temperature
- Low Temperature
- High Resistance
- High Intertier Resistance
- Digital Input
- High Float Current
- High Intercell Resistance
- Discharge
- UPS Low Voltage
- UPS Line Fail

OK      Cancel

**Figure 107. Historical Alarm Selection**


### 23.13. Alarm Acknowledge


String View > View alarm  or View|Alarm *then* Acknowledge alarm 

If the alarm acknowledge options are selected on Setup|System|Reporting and Setup|Battery|General, the Acknowledge Alarm button appears on the Current Alarm screen, and, to indicate an alarm event, the String Status screen displays Acknowledge in the String Status column. You may acknowledge alarms three ways:


1. Press the alarm reset button on the MPM or BDS monitor, or
2. On the Current Alarm screen, click the Acknowledge Alarm button, or
3. On the String Status screen, right click the mouse and click Acknowledge Alarm on the pop-up menu.

### 23.14. Discharge Data

String View > View load test  or View|Load test

String View > View discharge  or View|Discharge

Click Load Test (MPM only) or Discharge to display the All Load Tests or All Discharges screens, which list records of load tests or discharges for the connected string. View Load Test lists discharges detected by user-programmed tests. View Discharge lists automatically detected discharges. If String Status on the bottom left of the String View screen indicates Discharging, Logging Discharge Data or R-test in Progress, View Discharge and View Load Test cannot be selected.

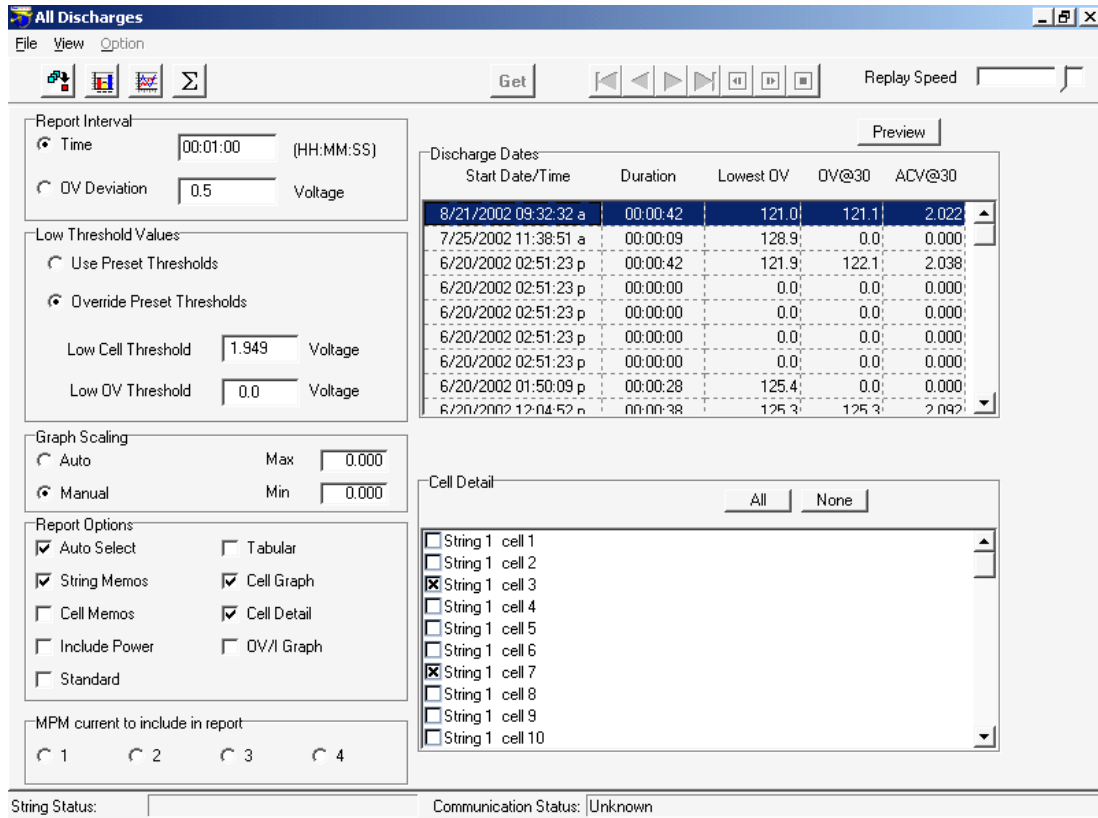

**Figure 108. All Discharges (MPM shown)**

The BDS and MPM All Discharges screens are similar, except the MPM screen has the MPM Current to Include in Report selection. The View|Load Test and View|Discharge screens are the same, except View|Load Test has the Start, Stop and Get buttons available.

**Report Interval area** - Click **Time** or **OV Deviation** and type a value in the box. The Report Interval determines the frequency of report sampling. If Time is selected, replay time advances in increments measured against real-time. For example, if 00:10 is entered, playback advances 10 seconds every second. If Overall Voltage is selected, playback advances each time the voltage changes. For example, if 0.1 is entered, playback advances each time a 100mv deviation in overall voltage occurs. Specify time in hours, minutes, and seconds (10 second minimum) or OV (overall voltage) deviation in volts (0.2 volt minimum).

Click **Use Preset Thresholds** to use values set in the BMDM program when the test was run.

Click **Override Preset Thresholds** to ignore BMDM thresholds, then type values in the **Low Cell Threshold** and **Low OV Threshold** boxes to identify cells that exceed critical levels. Any measurement below these values will be in violation.

**Graph Scaling area** - Click **Auto** to default to automatic graph scaling, or click **Manual** and type the **Max** and **Min** graph scale values. Use Manual scaling when you want to maintain scaling to make it easier to compare several graphs.

Select **Auto Select** to automatically select cells listed on the right side that violate the thresholds. If you change the cell or OV thresholds, cells that meet the new criteria are selected. You may add cells to the report by selecting additional check boxes in the list.

Select **String Memos** and **Cell Memos** to include string and cell memos.

Select **Include Power** to list power in reports, in addition to voltage and current.

Select **Standard** to create a standard report. Cells are listed by string, and strings are listed by time in a Cell = Value format.

Select **Tabular** to create a tabular report, which is the same as a standard report, but in a spreadsheet format, with Cells vs. Time.

Click **Cell Graph** to create a report that includes a cell graph.

Click **Cell Detail** to create a report that includes cell detail.

Click **OV/I Graph** to create a report that includes Overall Voltage and Load Current graphs.

**MPM Current to Include in Report** (MPM only) - Choose up to four current channels Current 1 to Current 4 to view simultaneously if they are connected.

The **Discharge Dates** columns list the Start Date/Time, Duration, Lowest OV, OV@30 and ACV@30 of all discharges. The **Lowest OV** column lists the lowest value reached during discharge. **OV@30** lists the overall voltage 30 seconds into discharge, and **ACV@30** lists the average cell voltage 30 seconds into discharge. Click the discharge for which the report will be generated. Only one discharge date may be selected for a report.

**Cell Detail** area - To manually select cells to include in the report, click the cells in the list or click All to select all items. If Auto Select is selected, cells that violate thresholds are already selected. To clear all selected items, click None. If more than one subdirectory of cell data is available, tabs for each subdirectory appear above the list of cell names.

After all options are selected, click the **Preview** button to create a report and display it on the Preview screen. Refer to *Using the Preview Screens*.

Adjust the **Replay Speed** slider to have a replay run faster or slower. You may do this while the replay is in process.

String View > Start resistance test or Stop resistance test or Get test results 

If View|Load Test was selected, to start a load test and capture new readings, click **Start**.


After the Test in Progress message disappears, the Get button becomes active. Click **Get** to retrieve the readings and transfer them to the computer. To stop the test before completion, click **Stop**.

If View|Discharge was selected, to retrieve new discharge readings, click **Get** to display the readings and transfer them to the computer. You cannot start a discharge test from this screen.


Options selected on the All Discharge screen are saved by the battery name.

After selecting a discharge from the list by clicking it, you can perform two types of analysis. Click Discharge Replay to play back the discharge. Click Discharge Curve to display line graphs of up to three specified parameters.

### 23.14.1. Discharge Replay

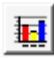String View > View|Load test or Discharge *then* Discharge replay   
or View|Discharge Replay

Click the Discharge Replay button to display the Discharge Replay screen, which shows the variations of cell levels over time.

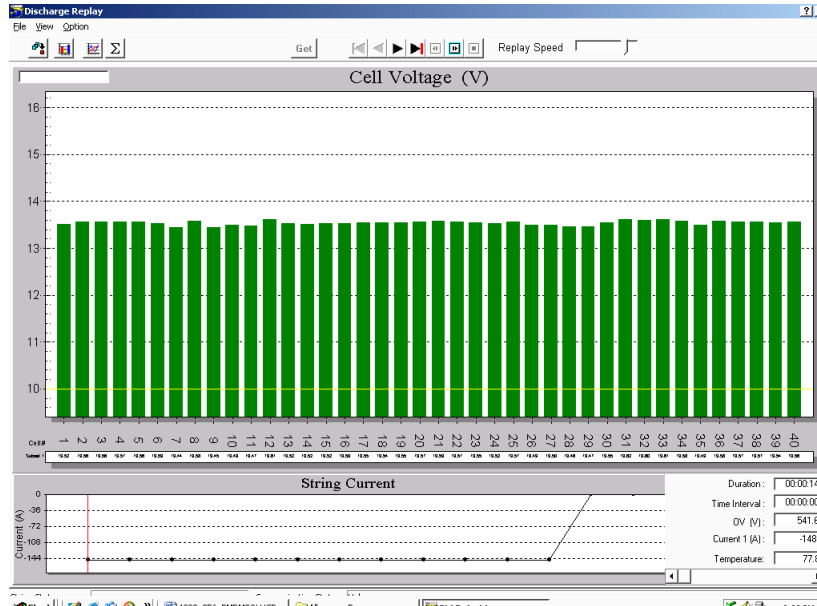


**Figure 109. Discharge Replay**

Play Buttons: Show First, Show Previous, Show Next, Show Last, Replay Backward, Replay Forward *and* Stop


The play buttons are at the top of the screen. Click Replay Forward to play the discharge. The display advances either by time or voltage at the rate selected. Move the Replay Speed slider at the upper right to increase or decrease replay speed.

You can click a point on the lower graph or move the Change Elapsed Time slider at the lower right to cause the bar graph to display the cell voltages for the time selected. The Duration, Time Interval, Overall Voltage, and Current are indicated above the slider.

### 23.14.2. Discharge Curve

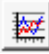String View > View|Load test *or* Discharge *then* Discharge curve  *or* View|Discharge Curve

Click Discharge Curve to display the Discharge Curve screen, which shows the relationship of the Overall Voltage, Discharge Current, and Cell Voltages on a graph.

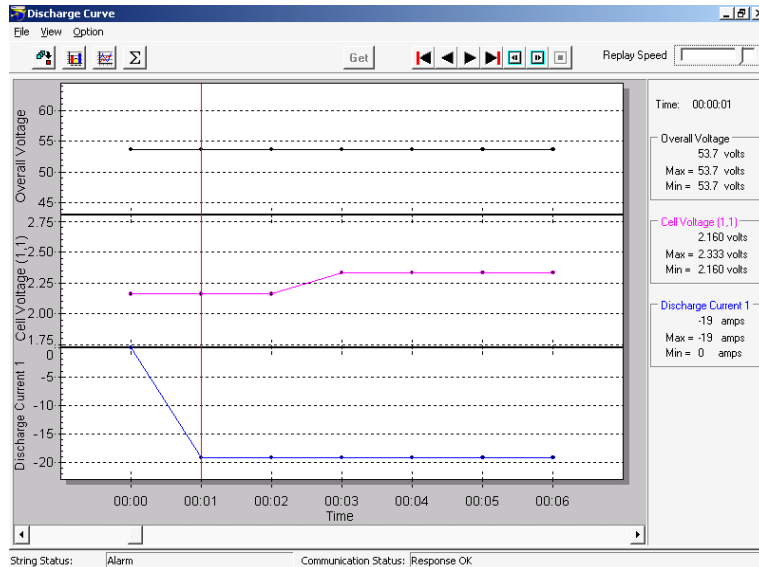

**Figure 110. Discharge Curve**


Play Buttons: Show First, Show Previous, Show Next, Show Last, Replay Backward, Replay Forward *and* Stop

The play buttons are at the top of the screen. Click Replay Forward to play the discharge. The display advances either by time or voltage at the rate selected. Move the Replay Speed slider at the upper right to increase or decrease replay speed.

You can click a point on the graph or move the Change Time slider on the bottom to display readings for the time selected. The Overall Voltage, Cell Voltage and Discharge Current values are to the right of the graph.

String View > View|Load test *or* Discharge *then* View|Discharge Curve|Option|Curve Option

On the Discharge Curve screen, select Option|Curve Option to display the Curve Option dialog box, which lets you select up to three parameters for viewing.

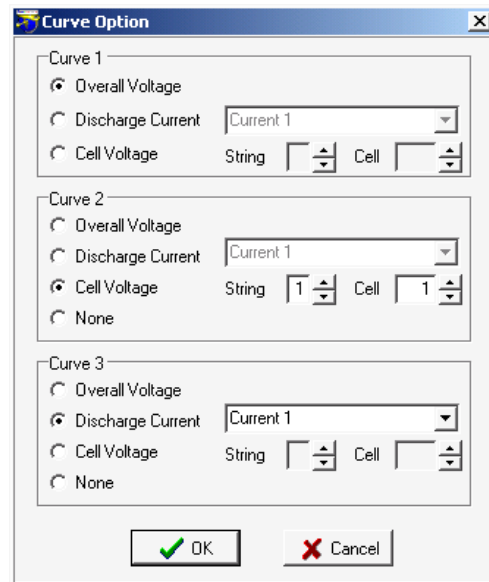



**Figure 111. Curve Option**

In Curve 1, 2 or 3, select Overall Voltage, Discharge Current or Cell Voltage curves. If you select Discharge Current, choose a Current (for string) 1, 2, 3 or 4 from the drop-down list. The MPM has strings 1 to 4 available; the BDS has only string 1.

If you select Cell Voltage, choose a string and cell number. If an invalid current, string or cell number is selected, the area appears on the Discharge Curve screen, but no curve is displayed. If you select None in Subset 2 or 3, the area does not appear.

### 23.14.3. Summary

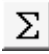String View > View|Load test or Discharge *then* Summary  or View|Summary  
 Select Summary to display the Summary screen.

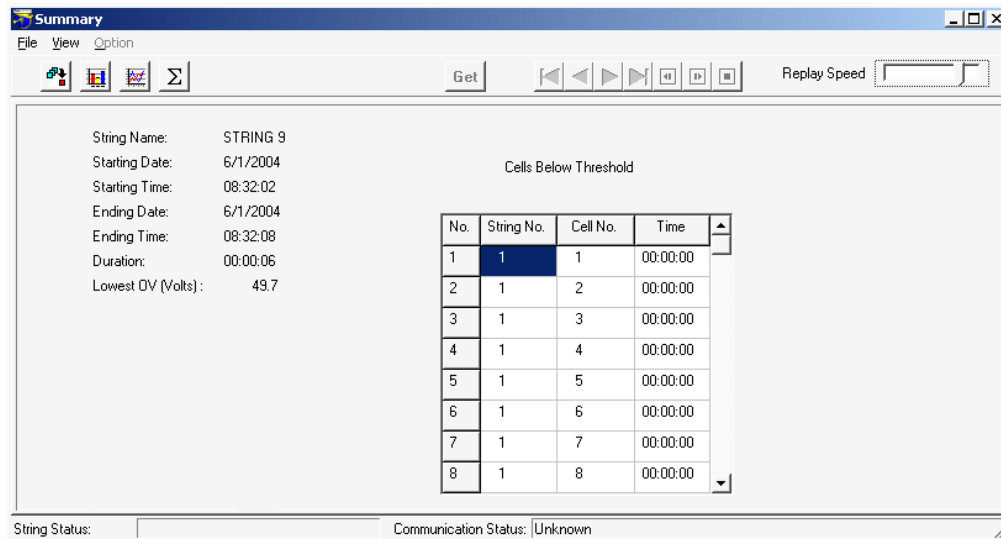

**Figure 112. Summary (Discharges)**

This screen summarizes the following information.

The **String Name** selected on the String Status screen.

The **Starting Date** and **Starting Time** the discharge or load test began.

The **Ending Date** and **Ending Time** the discharge or load test stopped.

The **Duration** of the test.

The **Lowest OV (Volts)** reached during the discharge or load test.

If any cells went below the threshold level during the test, **Cells Below Threshold** displays a table that lists the String Number, Cell Number, and Time the cell went below threshold.



### 23.15. Cell Memo / String Memo

Cell Memo or String Memo saves notes for a cell or string to the database using a Local, Central or Service computer. A Service computer can store a string memo in the monitor, but not a cell memo. The Service computer saves the string memo in the database and monitor memory; the memo is removed from monitor memory if manually imported or the Central computer performs an automatic data extraction.

String View > *Click a bar to make it gray, then right click the bar* | Cell Memo or View|Cell Memo

To create a cell memo, click a bar on the graph to change it to gray, then right click the bar. On the pop-up menu, click Cell Memo. On the Cell Memo dialog box, click the New button and type the data and memo. To have the installation date, model, and serial number apply to all cells in the string, select Entire String. To save the memo, click Save. If Entire String was checked, when you select Cell Memo and click New for another cell, the installation date, model number, and serial number appear.

To determine which cells have cell memos assigned, press the F5 key. Cell bars with memos assigned display in blue.

String View > View|String Memo

To create a string memo, click String Memo. On the String Memo dialog box, type a global memo that applies to the entire string. To save the memo, click Save. To import a string memo into the Central computer database that was entered into the monitor using a Service computer, on the String Memo dialog box, select File|Import. This removes the memo from monitor memory.

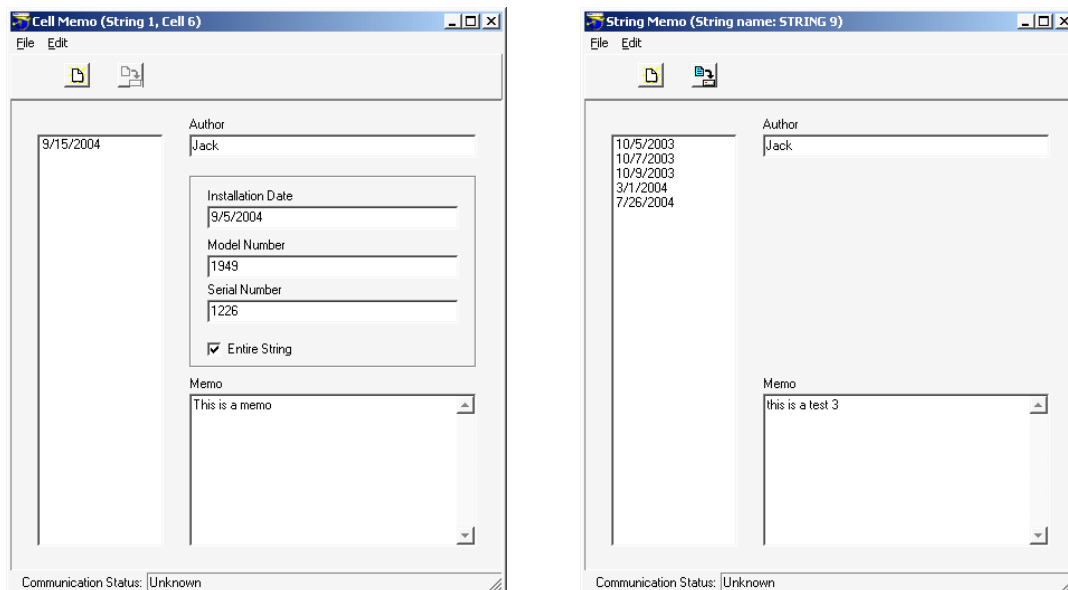


Figure 113. Cell Memo and String Memo

## 24. Using the Report Generator

The BMDM Report Generator uses BMDM data files to create reports. After a BMDM-controlled system reads voltage or resistance, the data is saved, and it is this data, presented in report format, that battery monitoring personnel use to analyze battery system performance. The Report Generator displays and prints text and graphs and saves customized reports in an archive ZRF format that protects against changes. You may also view and print ZRF files using the Archive Reader program.

String View > View|Reports|*item*

View|Reports accesses eleven Report Generator setup boxes. Use these boxes to create Detail and Trend reports. Choose a Detail report to generate a report on an entire string by date. Choose Trend to report on an individual cell or cells, temperature or overall voltage over a range of dates.

Some report dialog boxes let you select data sets. A **data set** is a set of historical float voltages, resistance readings, alarm readings and/or discharge data for a string. A data set is for a single date and time, and all data is displayed in one report.

After you select all the options on a Setup dialog box, click the **Preview** button to create a report and display it on the Preview screen. Refer to *Using the Preview Screens*.

### 24.1. Detail Cell Voltage Report

String View > View|Reports|Detail|Cell Voltage

To create a Detail Cell Voltage report, click Cell Voltage. The Detail Cell Voltage Setup box appears.

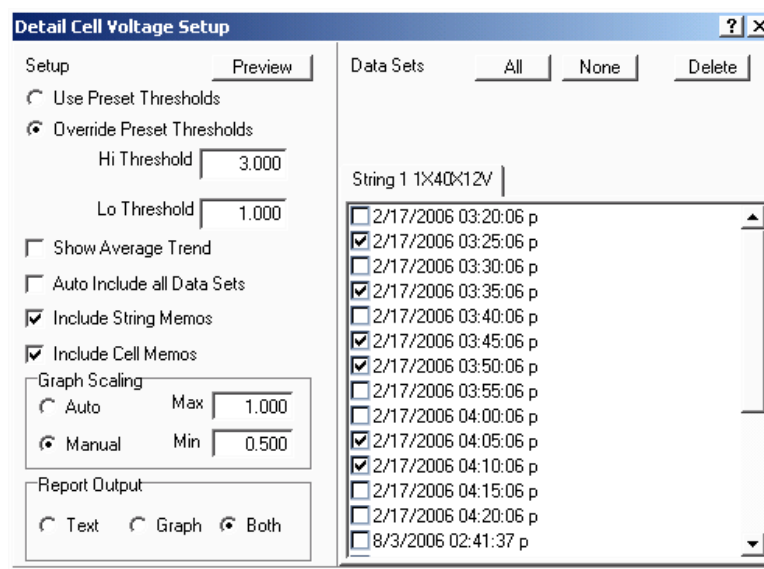


Figure 114. Detail Cell Voltage Setup

Click **Use Preset Thresholds** to use values set in the BMDM program when the test was run.

To ignore BMDM thresholds, click **Override Preset Thresholds**, then type values in the **Hi Threshold** and **Lo Threshold** boxes.

Select **Show Average Trend** to generate a graph that shows the average voltage of all the cells in the string for each date selected.

Select **Auto Include All Data Sets** to automatically select string data sets listed on the right side that violate high or low thresholds. If you change threshold values, data sets that meet the new criteria are selected. You may add data sets to the report by selecting additional check boxes in the list.

Select **Include String Memos** or **Include Cell Memos** to include string or cell memos.

**Graph Scaling** area - Click **Auto** to default to automatic graph scaling, or click **Manual** and type the **Max** and **Min** graph scale values. Use Manual scaling when you want to maintain scaling to make it easier to compare several graphs.


**Report Output** area - Click **Text** to create a report with text only; click **Graph** for graphs only. Click **Both** to include both text and graphs in the report.

**Data Sets** area - To manually select string data sets to include in the report, click the data sets in the list or click **All** to select all items. If Auto Include All Data Sets is selected, strings that violate thresholds are already selected. To clear all selected items, click **None**. To delete all selected items from the database, click **Delete**. If the selected range contains no data, no dates appear under Data Sets.

## 24.2. Detail Cell Resistance Report

String View > View|Reports|Detail|Cell Resistance

To create a Detail Cell Resistance report, click Cell Resistance. The Detail Cell Resistance Setup box appears.

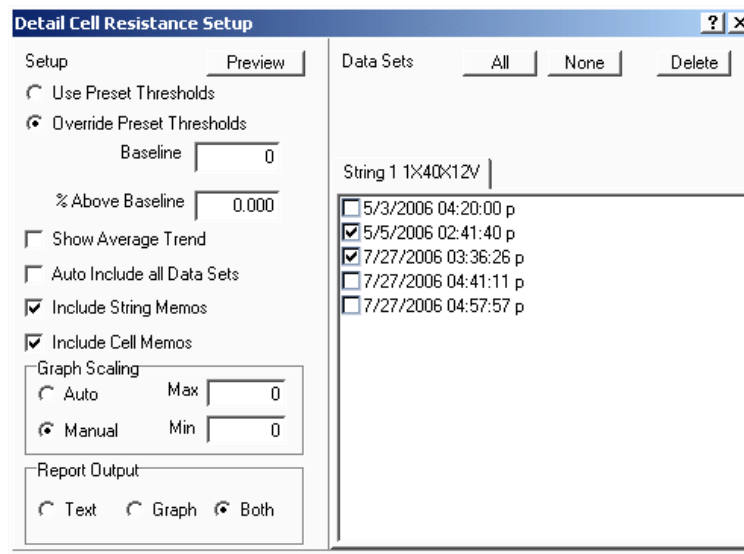

**Figure 115. Detail Cell Resistance Setup**

The items on the Detail Cell Resistance Setup box are the same as those on the Detail Cell Voltage Setup box (refer to *Detail Cell Voltage Report*), with the following exceptions.

To ignore BMDM thresholds, click **Override Preset Thresholds**. In the **Baseline** box, type the resistance in microhms. In the **% Above Baseline** box, type the percentage above which a measurement will be in violation. For example, if the baseline resistance is 300 microhms and the percentage is 10%, any data above 330 microhms violates threshold.

Select **Show Average Trend** to generate a graph that shows the average resistance of all the cells in the string for each date selected.

### 24.3. Detail Intercell Resistance Report

String View > View|Reports|Detail|Intercell Resistance

To create a Detail Intercell Resistance report, click Intercell Resistance. The Detail Intercell Resistance Setup box appears.

**Figure 116. Detail Intercell Resistance Setup**

The items on the Detail Intercell Resistance Setup box are the same as those on the Detail Cell Voltage Setup box (refer to *Detail Cell Voltage Report*), with the following exceptions.

To ignore BMDM thresholds, click **Override Preset Thresholds**, then type a high intercell resistance value in the **High** box.

## 24.4. Trend Cell Voltage Report

String View > View|Reports|Trend|Cell Voltage

To create a Trend Cell Voltage report, click Cell Voltage. The Trend Cell Voltage Setup box appears.

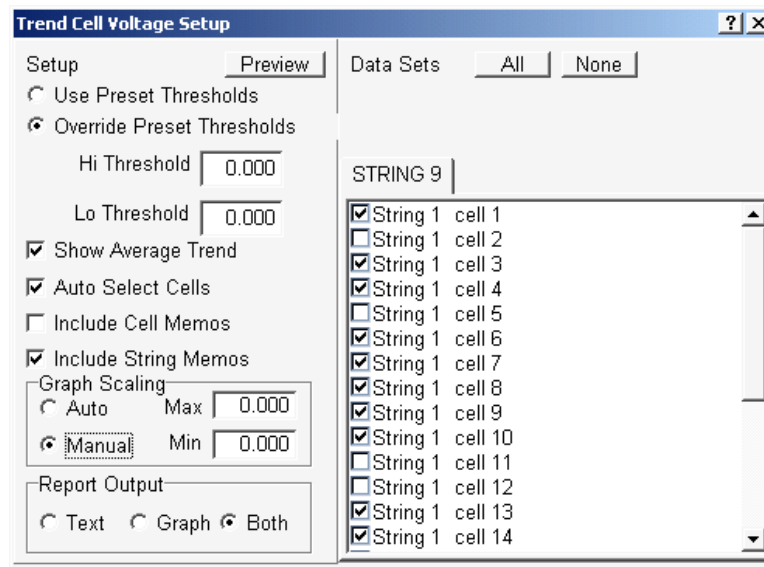


Figure 117. Trend Cell Voltage Setup

Click **Use Preset Thresholds** to use values set in the database.

Click **Override Preset Thresholds** to ignore BMDM thresholds, then type values in the **Hi Threshold** and **Lo Threshold** boxes.

Select **Show Average Trend** to generate a graph that shows the average cell voltage over the range of dates.

Select **Auto Select Cells** to automatically select cells listed on the right side that violate high or low thresholds. If you change threshold values, cells that meet the new criteria are selected. You may add cells to the report by selecting additional check boxes in the list.

Select **Include Cell Memos** and **Include String Memos** to include cell and string memos.

**Graph Scaling** area - Click **Auto** to default to automatic graph scaling, or click **Manual** and type the **Max** and **Min** graph scale values. Use Manual scaling when you want to maintain scaling to make it easier to compare several graphs.


**Report Output** area - Click **Text** to create a report with text only; click **Graph** for graphs only. Click **Both** to include both text and graphs in the report.

**Data Sets** area - To manually select cells to include in the report, click the cells in the list or click All to select all items. If Auto Select Cells is selected, cells that violate thresholds are already selected. To clear all selected items, click None. If the BMDM was used with an MPM, the list shows string and cell. If a BDS was used, the list shows cell only. If the selected range contains no data, no cells appear under Data Sets.

## 24.5. Trend Cell Resistance Report

String View > View|Reports|Trend|Cell Resistance

To create a Trend Cell Resistance report, click Cell Resistance. The Trend Cell Resistance Setup box appears.

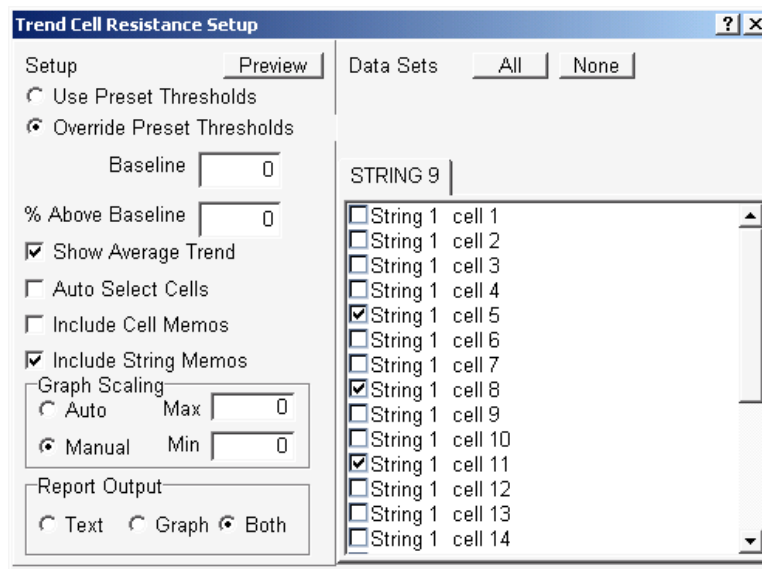

**Figure 118. Trend Cell Resistance Setup**

The items on the Trend Cell Resistance Setup box are the same as those in *Trend Cell Voltage Report*, with the following exceptions.


To ignore BMDM thresholds, click **Override Preset Thresholds**. In the **Baseline** box, type the resistance in microhms. In the **% Above Baseline** box, type the percentage above which a measurement will be in violation. For example, if the baseline resistance is 300 microhms and the percentage is 10%, any data above 330 microhms violates threshold.

Select **Show Average Trend** to generate a graph that shows the average cell resistance over the range of dates.

## 24.6. Trend Intercell Report

String View > View|Reports|Trend|Intercell

To create a Trend Intercell report, click Intercell. The Trend Intercell Resistance Setup box appears.

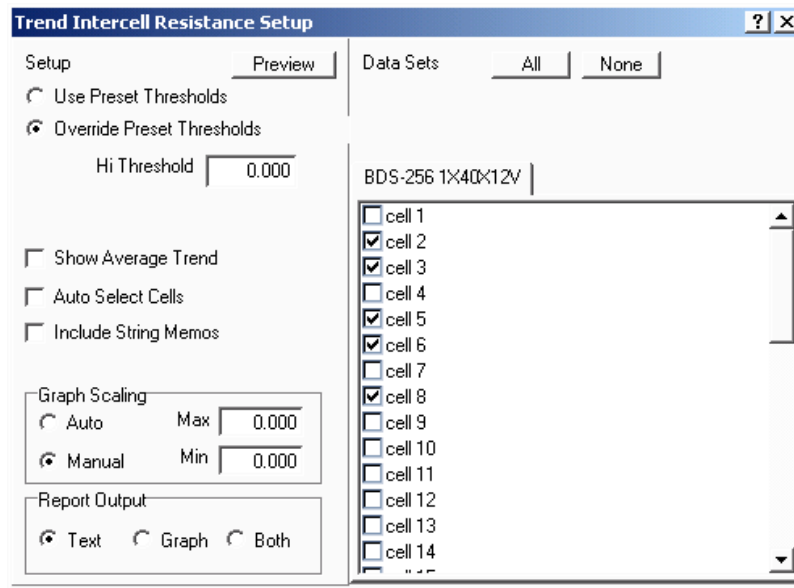

**Figure 119. Trend Intercell Resistance Setup**


The items on the Trend Intercell Resistance Setup box are the same as those in *Trend Cell Voltage Report*, except that Trend Intercell Resistance Setup does not have check boxes for Low Threshold or for Include Cell Memos.



## 24.7. Trend Overall Voltage Report

String View > View|Reports|Trend|Overall Voltage

To create a Trend Overall Voltage report, click Overall Voltage. The Trend Overall Voltage Setup box appears.

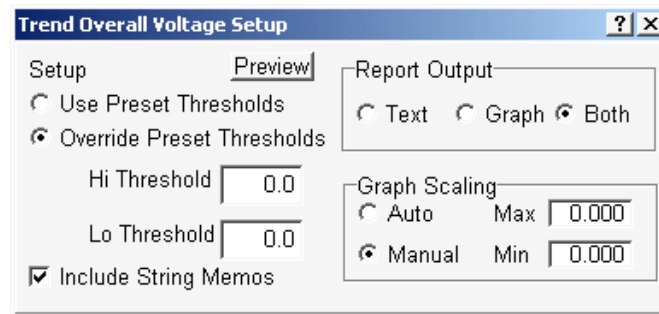

**Figure 120. Trend Overall Voltage Setup**

Click **Use Preset Thresholds** to use values set in the database.

Click **Override Preset Thresholds** to ignore BMDM thresholds, then type values in the **Hi Threshold** and **Lo Threshold** boxes.

Select **Include String Memos** to include string memos.


**Report Output** area - Click **Text** to create a report with text only; click **Graph** for graphs only. Click **Both** to include both text and graphs in the report.

**Graph Scaling** area - Click **Auto** to default to automatic graph scaling, or click **Manual** and type the **Max** and **Min** graph scale values. Use Manual scaling when you want to maintain scaling to make it easier to compare several graphs.

## 24.8. Trend Temperature Report

String View > View|Reports|Trend|Temperature

To create a Trend Temperature report, click Temperature. The Trend Temperature Setup box appears.

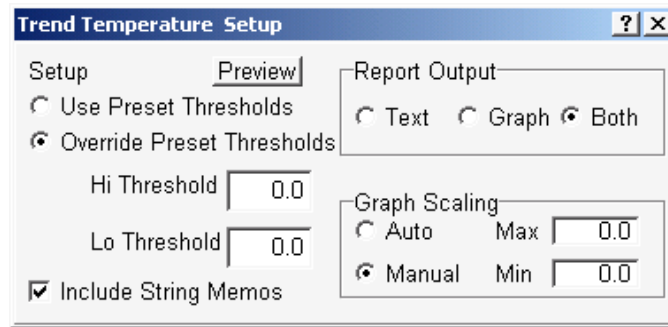


**Figure 121. Trend Temperature Setup**

The items on the Trend Temperature Setup box are the same as those in *Trend Overall Voltage Report*.

## 24.9. Trend Intertier Report

String View > View|Reports|Trend|Intertier

To create a Trend Intertier report, click Intertier. The Trend Intertier Setup box appears.

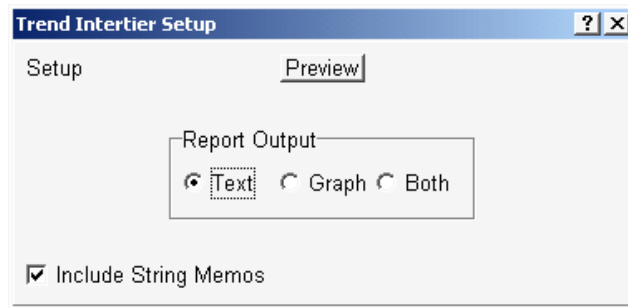

**Figure 122. Trend Intertier Setup**

**Report Output** area - Click **Text** to create a report with text only; click **Graph** for graphs only. Click **Both** to include both text and graphs in the report.

Select **Include String Memos** to include string memos.

## 24.10. Discharge Report

String View > View|Reports|Discharge

To create a Discharge report, click Discharge. The Discharge Setup box appears. Options selected on Discharge Setup are saved by the battery name.

| Start Date/Time      | Duration | Lowest OV | OV@30 | ACV@30 |
|----------------------|----------|-----------|-------|--------|
| 6/11/2004 01:39:16 p | 00:00:52 | 502.8     | 504.4 | 12.599 |
| 6/11/2004 01:21:31 p | 00:00:52 | 501.8     | 503.4 | 12.575 |
| 6/8/2004 11:00:39 a  | 00:01:29 | 500.4     | 503.0 | 12.569 |
| 6/8/2004 10:54:28 a  | 00:00:39 | 502.9     | 502.9 | 12.567 |
| 6/1/2004 04:20:27 p  | 00:00:36 | 506.0     | 523.8 | 13.119 |
| 6/1/2004 04:19:31 p  | 00:00:11 | 522.1     | 0.0   | 0.000  |

Figure 123. Discharge Setup

**Report Interval** area - Click **Time** or **OV (Overall Voltage) Deviation** and type a value in the respective box. Report Interval determines the frequency of report sampling. Specify time in hours, minutes, and seconds (10 second minimum) or OV deviation in volts (0.2 volt minimum).

**Low Threshold Values** area - Click **Use Preset Thresholds** to use values set in the BMDM program when the test was run. Click **Override Preset Thresholds** to ignore BMDM thresholds, then type values in the **Low Cell Threshold** and **Low OV Threshold** boxes. Any measurement below these values will be in violation.

**Graph Scaling** area - Click **Auto** to default to automatic graph scaling, or click **Manual** and type the **Max** and **Min** graph scale values. Use Manual scaling when you want to maintain scaling to make it easier to compare several graphs.

Select **Auto Select** to automatically select cells listed on the right side that violate thresholds. If you change cell or OV threshold values, cells that meet the new criteria are selected. You may add cells to the report by selecting additional check boxes in the list.

Select **String Memos** and **Cell Memos** to include string memos and cell memos.

Select **Include Power** to list power in reports, in addition to voltage and current.

Select **Standard** to create a Standard report. Cells are listed by string, and strings are listed by time in a Cell = Value format.

Select **Tabular** to create a Tabular report, which is the same as a standard report, but in a spreadsheet format, with Cells vs. Time.

Click **Cell Graph** to create a report that includes a cell graph.

Click **Cell Detail** to create a report that includes cell detail.

Click **OV/I Graph** to create a report that includes Overall Voltage and Load Current graphs.

The **Discharge Dates** columns list the Start Date/Time, Duration, Lowest OV, OV@30 and ACV@30 of all discharges. The **Lowest OV** column lists the lowest value reached during discharge. **OV@30** lists the overall voltage 30 seconds into discharge, and **ACV@30** lists the average cell voltage 30 seconds into discharge. Click the discharge for which the report will be generated. Only one discharge date may be selected for a report.

**Cell Detail** area - To manually select cells to include in the report, click the cells in the list or click All to select all items. If Auto Select is selected, cells that violate thresholds are already selected. To clear all selected items, click None. If more than one subdirectory of cell data is available, tabs for each subdirectory appear above the list of cell names.

### 24.11. Alarm Report

String View > View|Reports|Alarm

To create an Alarm report, click Alarm. The Alarms Setup box appears. Options selected on Alarms Setup are saved by the battery name.

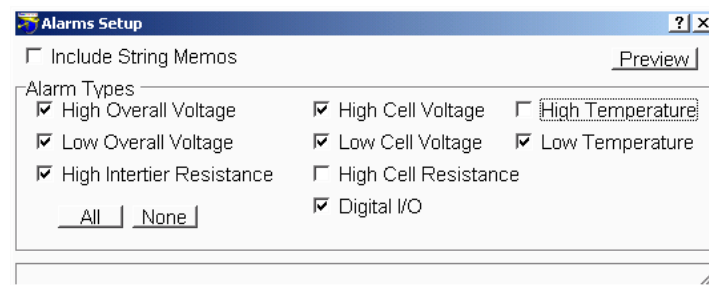



Figure 124. Alarms Setup


Select **Include String Memos** to include string memos in the report.

**Alarm Types** area - Alarm types that you may include in the report are high and low overall voltage, high intertier resistance, high and low cell voltage, high cell resistance, and high and low temperature. Select these items to include full details of each alarm, not just a summary. If Digital I/O is selected, the system generates an alarm if a digital input is selected on the battery setup digital output screen.

## 24.12. Summary Report

String Status > Summary report  or String View > View|Reports|Summary [see text]

To create a Summary report that includes data only for the string to which the system is connected, click View|Reports|Summary (String View screen). To create a Summary report for all strings in the system, click the Summary Report button (String Status screen). The Summary Setup box appears. A report generated using the Summary Report button may be more than 100 printed pages long.

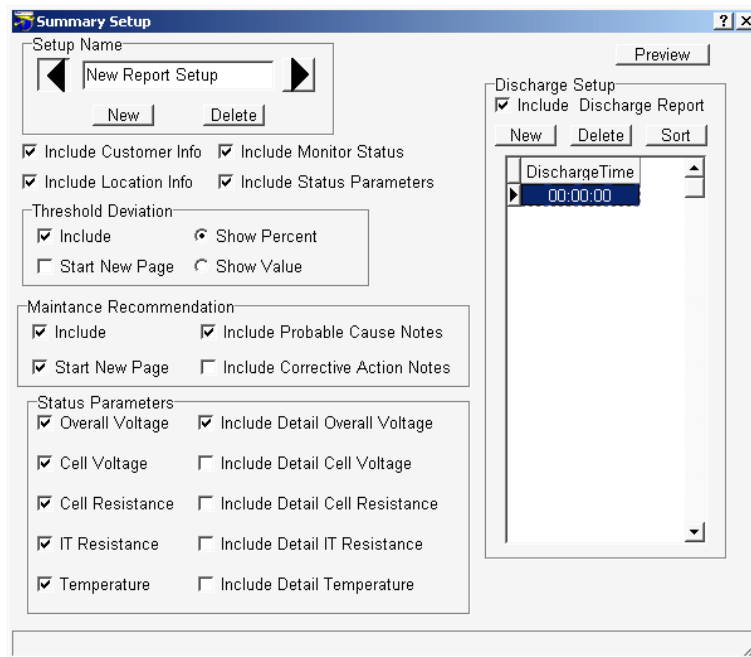

**Figure 125. Summary Setup**

**Setup Name** area - You can save the options and discharge times as a template, so you do not have to choose them each time you generate a report. After choosing the options, type a name in the **Setup Name** box and click New to save the template. To view existing templates, click the arrows. To delete a template, display it and click Delete. Although the same name can be used for different templates, you may want to use a unique name for each template.

Select **Include Customer Info** and **Include Location Info** to include the customer and location names, addresses, and contact information in the report.

Select **Include Monitor Status** to print Last Known Status, which lists string name, monitor status string status, and the date and time of the last known status.

Select **Include Status Parameters** to print Parameter Status as of Last Reading, which lists the following if they are checked under Status Parameters: overall voltage, low and high cell voltage and cell resistance, highest intertier resistance, and average temperature.

**Threshold Deviation** area - Select **Include** to include the threshold deviation report. Select **Start New Page** to insert a page break before the report. Select **Show Percent** or **Show Value** to have deviations shown as percent change or actual values. Only cells that exceed threshold values are listed.

**Maintenance Recommendation** area - Select **Include** to include the maintenance recommendation report. Select **Start New Page** to insert a page break before the report. Select **Include Probable Cause Notes** and **Include Corrective Action Notes** to include text that attempts to resolve the types of violations found, such as high resistance. Only cells with violations are listed.

**Status Parameters** area - Select **Overall Voltage, Cell Voltage, Cell Resistance, IT (Intertier) Resistance** or **Temperature** to list these items in Parameter Status as of Last Reading. You must also select the Include Status Parameters check box.

Select **Include Detail Overall Voltage, Include Detail Cell Voltage, Include Detail Cell Resistance, Include Detail IT Resistance** or **Include Detail Temperature** to print these sections, which have graphs of each item in violation. Items with Normal status do not print.

**Discharge Setup** area - Select the **Include Discharge Report** check box to print a discharge report. To add a discharge duration time to the list, Click New then type a new time in the highlighted 00:00:00 in the **Discharge Time** list. To sort the times, click Sort. To remove a time from the Discharge Time list, click the time to highlight it, then click Delete.

For a description of the items in Discharges in the report, refer to *Using the Web Report Generator*.

## 25. Using the Preview Screens

[Previously described Setup screen] > Preview

After all report parameters are selected, to view the report on a report preview screen, click **Preview**. To change the size of the page display, click **Page**, **Width** or **Full**. To view different pages, click the first, previous, next or last page arrows on the toolbar.

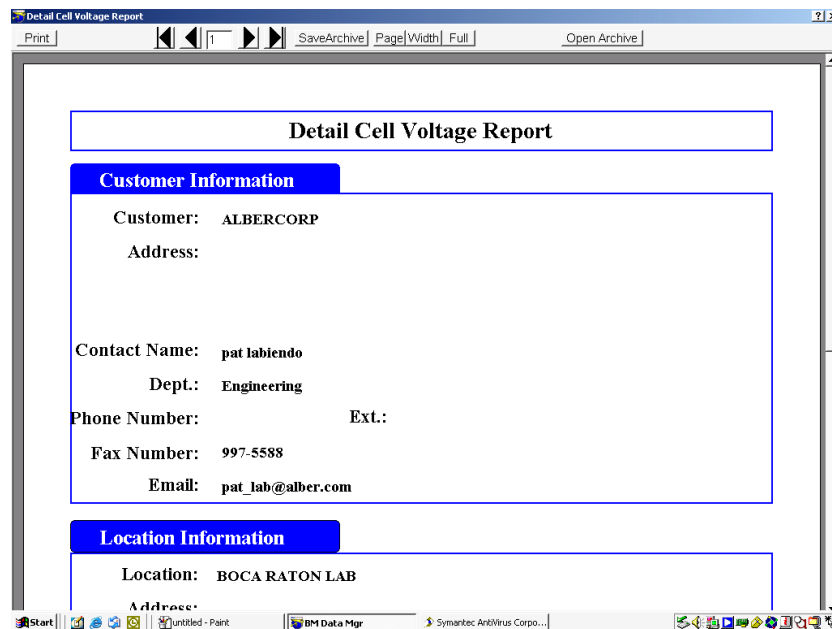


Figure 126. Preview (Typical Screen)

The Discharge Report preview screen is different from the other preview screens. This screen has tabs along the top that let you select different sections of the report. These tabs are labeled Battery Info, Cell Summary, Standard, Cell Detail, Tabular, Cell Graph, and OV/I Graph.

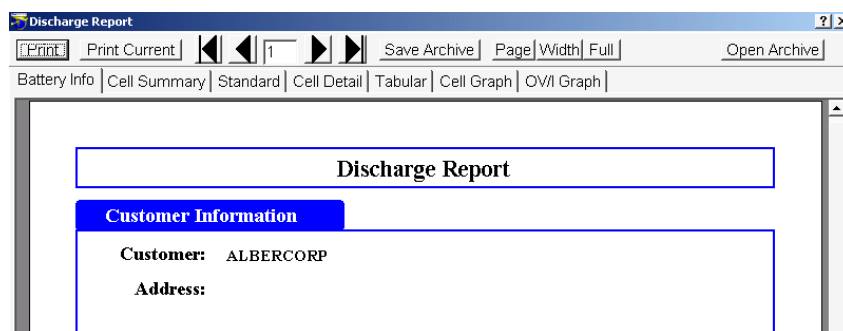


Figure 127. Preview (Discharge Report)

To view a section of the report, click a tab. To view different pages in one section, click the first, previous, next or last page arrows on the toolbar.

### **25.1. Saving a Report in Archive (ZRF) Format**

Preview screen > Save Archive

The Report Generator can save a report as an archive ZRF file, which cannot be changed after it is saved. Archive format lets you distribute the report file while ensuring the integrity of the data. The file can be opened by the Report Generator or the Archive Reader and viewed or printed. To save a report in archive format, click **Save Archive**. In the Save Archive dialog box, select the subdirectory, type the file name, then click Save. Reports are saved in the folder last opened, unless a different folder is selected.

### **25.2. Printing a Report**

Preview screen > Print

To print the report displayed, click Print; in reports with more than one section, to print only the currently selected tab, click Print Current or, to print the entire report, click Print. When the Print dialog box appears, select the pages to print, the number of copies, and the printer setup. To print a single page, do not select Current Page. Instead, select Pages and type the page number in the box.

### **25.3. Opening an Archive File**

Preview screen > Open Archive

You can open an archive ZRF file to compare data before saving a currently open report. To open and display an archive file, click **Open Archive**, select the subdirectory and file name, then click Open. Use the toolbar buttons to change the page size and view different pages. To print the report, click Print. To close the file, click the Close button. Archive files cannot be changed.

### **25.4. Archive Reader Program**

The Archive Reader, distributed with the Report Generator, is used to view and print ZRF files when the Report Generator program is unavailable. It is typically sent with archive files when these files are sent to locations that do not have the Report Generator. You may freely copy and distribute the Archive Reader when required. The Report Generator is a licensed product and may not be duplicated for multiple site use. You may download the Archive Reader from the Vertiv Web site at [www.vertivco.com](http://www.vertivco.com) and copy it to a CD for distribution with ZRF files.



## 26. Using the Web Report Generator

Every 24 hours, the Web Report Generator automatically creates and saves an executive summary report as a PDF file at Program Files\Alber\MPM Manager\Web\SystemSummary. New reports overwrite previous reports automatically or when you manually generate a report. You may view the executive summary report by connecting via the Web to vertivco.com.

### 26.1. Setting Up the Web Report

String Status > *highlight a name then* Reports|Setup

To enable automatic Web report generation, select the Detail Executive Report Enable check box on Setup|Preferences. To set up report format, highlight a string name on String Status, then click Reports|Setup to open the Technician Detail Summary Report Setup dialog box.

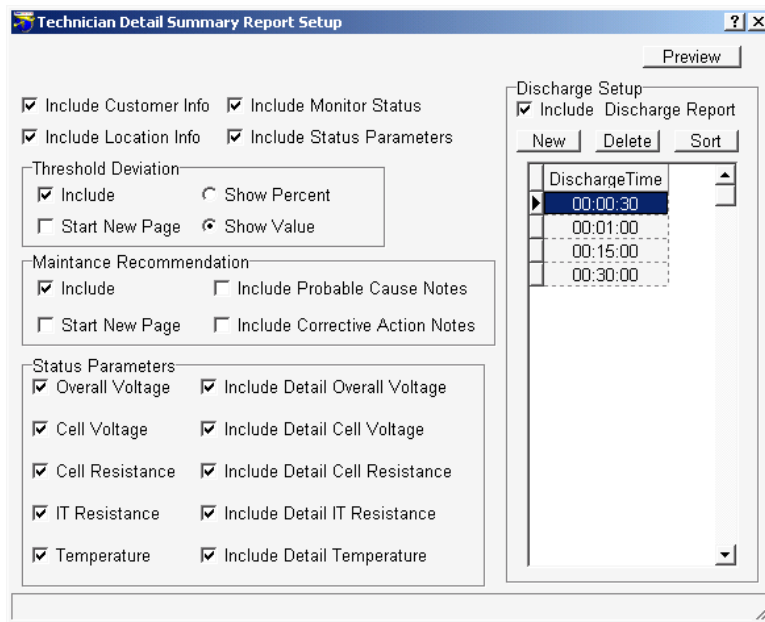


Figure 128. Technician Detail Summary Report Setup

Select **Include Customer Info** and **Include Location Info** to include the customer and location names, addresses, and contact information in the report.

Select **Include Monitor Status** to print Last Known Status, which lists string name, monitor status, string status, and the date and time of the last known status.

Select **Include Status Parameters** to print Parameter Status as of Last Reading, which lists the following if they are checked under Status Parameters: overall voltage, low and high cell voltage and cell resistance, highest intertier resistance, and average temperature.


**Threshold Deviation** area - Select **Include** to include the threshold deviation report. Select **Start New Page** to insert a page break before the report. Select **Show Percent** or **Show Value** to have deviations shown as percent change or actual values. Only cells that exceed threshold values are listed.

**Maintenance Recommendation** area - Select **Include** to include the maintenance recommendation report. Select **Start New Page** to insert a page break before the report. Select **Include Probable Cause Notes** and **Include Corrective Action Notes** to include text that offers solutions for the types of violations found, such as high resistance. Only cells with violations are listed.

**Status Parameters** area - Select **Overall Voltage**, **Cell Voltage**, **Cell Resistance**, **IT (Intertier) Resistance** or **Temperature** to list these items in Parameter Status as of Last Reading. You must also select the Include Status Parameters check box.

Select **Include Detail Overall Voltage**, **Include Detail Cell Voltage**, **Include Detail Cell Resistance**, **Include Detail IT Resistance** or **Include Detail Temperature** to print these sections, which have graphs of each item in violation. Items with Normal status do not print.

**Discharge Setup** area - Select the **Include Discharge Report** check box to print a discharge report. To add a discharge duration time to the list, Click New then type a new time in the highlighted 00:00:00 in the **Discharge Time** list. To sort the times, click Sort. To remove a time from the Discharge Time list, click the time to highlight it, then click Delete.

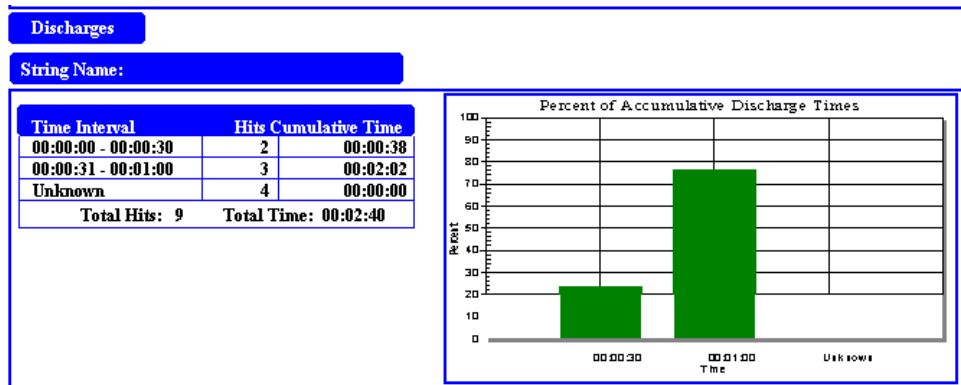

**Figure 129. Technician Report - Discharges Area**

The Discharges area on the report has a table and graph. The **Time Interval** column lists discharge duration limits. For example, if the time listed is 00:00:00 - 00:00:30 and the **Hits** column shows 2, then there were two discharges that lasted somewhere between 0 and 30 seconds. In the preceding figure, the cumulative (total) time of the two discharges was 38 seconds.


The graph in the **Percent of Accumulative Discharge Times** classifies the various discharge durations. In the above figure, 24% of the total discharge time were discharges of zero to 30 seconds, and 76% were discharges 31 seconds to one minute.

After selecting all options, click the **Preview** button to create and display a report. If you click Save Archive on the Preview screen, you can save to the Reports subdirectory as a ZRF file and not overwrite the automatically generated report in the SystemSummary subdirectory. For more on the Preview screen buttons, refer to *Using the Preview Screens*.

## 26.2. Generating an Executive Summary Report

String Status > Reports|Generate

If enabled on Setup|Preferences, the Web Report Generator automatically generates the executive summary report every night after autopolling is done. To manually generate a report, highlight a name on the String Status screen, then click Reports|Generate. At the Generate Executive Reports box, click Yes. The Auto Generating Technician Detail Summary Report dialog box appears while the reports are being generated.

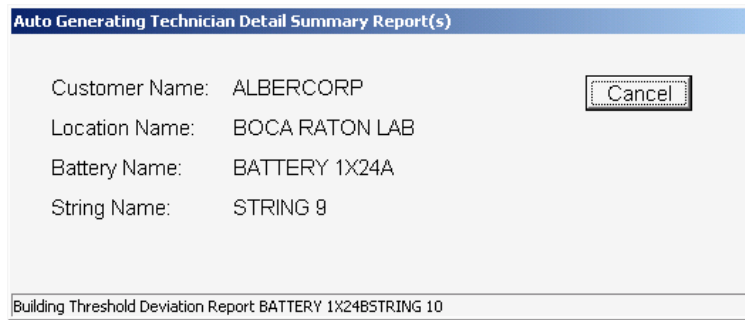

**Figure 130. Auto Generating Technician Detail Summary Report**

The report is saved in the SystemSummary subdirectory, which is created when the BMDM program is installed. To view the new report, use a program such as Adobe Acrobat® Reader and navigate to Program Files\Alber\MPM Manager\Web\SystemSummary. Click on the PDF file name to open the report.

New executive summary reports automatically overwrite previous reports every 24 hours or when you manually generate reports by selecting Reports|Generate.

## 27. Calibration

String View > Setup|Calibration

To ensure reliability of readings, Vertiv recommends that a qualified technician check MPM or BDS monitor calibration annually. Perform calibration using a computer directly connected via the RS-232 port. The Calibration dialog box displays all the parameters the unit monitors. To display this screen, select Setup|Calibration from the String View screen.

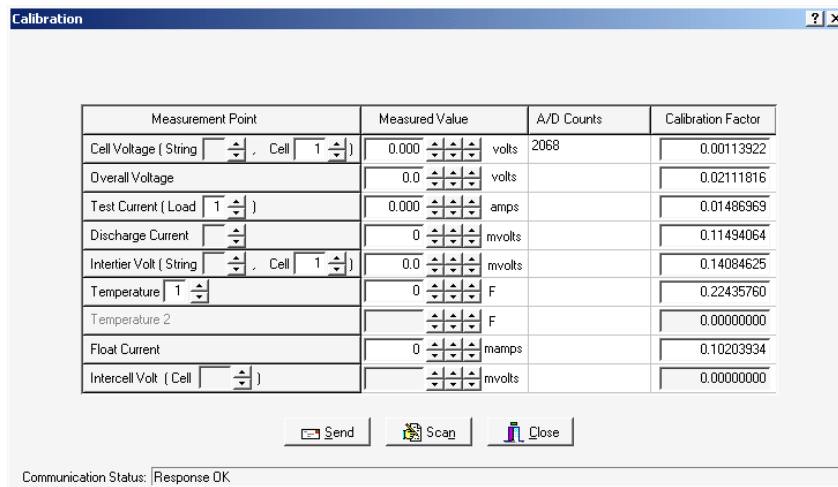


Figure 131. Calibration Setup (MPM)

The BDS Calibration dialog box differs slightly. It has arrows to select other DCM's and does not have a Test Current cell selector. Overall Voltage and Intercell Volt are not available for the BDS-40.

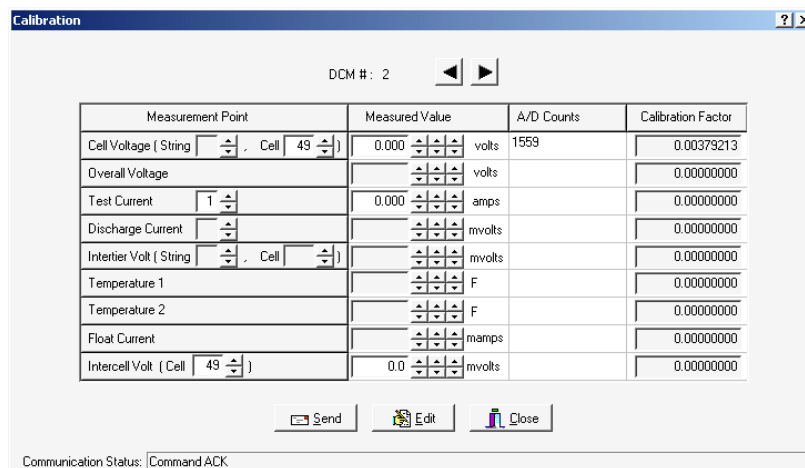


Figure 132. Calibration Setup (BDS)

There are four columns on the Calibration dialog box: Measurement Point, Measured Value, A/D Counts, and Calibration Factor.

**Measurement Point** – Allows selection of input channels when calibrating. Usually, the parameters selected never need to be changed. The Measurement Point also serves as a diagnostic tool that can lock in on a channel for troubleshooting.

**Measured Value** – Type measured values in this column. The MPM uses only Temperature 1; the BDS uses two temperature channels per DCM.

**A/D Counts** – The value from the A/D (Analog to Digital) converter before any calibration (Calibration Factor) is applied. Also referred to as Raw Counts.

**Calibration Factor** – The correction factor required to obtain a value that can be displayed on the String View screen.

Scan / Edit is a toggle action button. Clicking **Edit** allows editing of the Calibration Factors. Clicking **Scan** disables editing. Clicking a Measured Value field displays A/D counts.

Required Test Equipment:

- 4-1/2 digit DVM – Fluke 87 or equivalent.

- 100 millivolt and 10 millivolt source.

- Clamp-on current meter. A 0.1% shunt is recommended.

- Temperature probe.

The calibration procedures are available to qualified personnel trained by Vertiv in the calibration of this equipment.

## **28. MPM Diagnostics**

String View > Diagnostics|*Item*

The diagnostics are used for production testing, but may help troubleshoot a hardware failure in the field. Select Diagnostics from String View. The computer must be connected to an MPM and Communication Status at screen bottom must show Response OK.

### **28.1. Rebooting and Power Up Diagnostics (MPM)**


String View > Setup|Reboot Firmware

To reboot the MPM from the Data Manager, select Reboot Firmware. This does a "warm reset" of the MPM. At power-up, the unit performs diagnostics for about two minutes. If the unit fails any test other than failure to detect a dial tone, the Error LED blinks. Identify the failing parameters by using the *Self Test* diagnostic.

## 28.2. Self Test (MPM)

String View > Diagnostics|Self Test

Self Test reads an MPM status register and displays the parameter status on the Diagnostics dialog box. These parameters are tested only at MPM power-up. If an update is needed, cycle the power to the MPM or reboot by selecting Setup|Reboot Firmware. To open Self Test Diagnostics, select Diagnostics|Self Test.

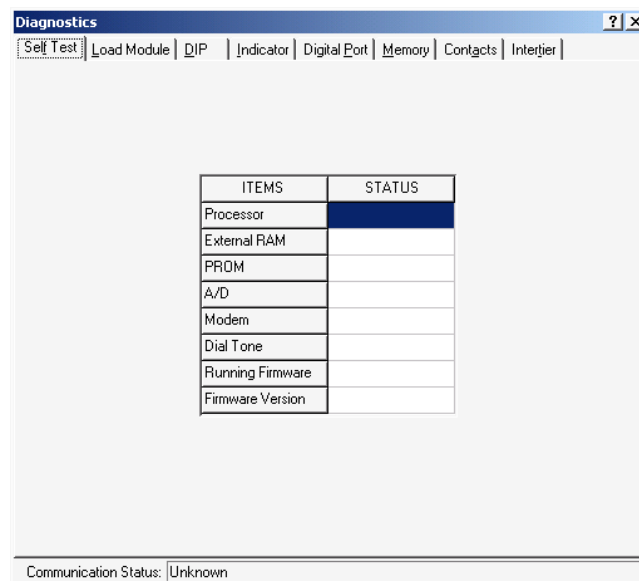

**Figure 133. Diagnostics - Self Test (MPM)**

Items on the Self Test Diagnostics dialog box are described below.

**Processor** - Checks processor internal registers and timers.

**External RAM** - Writes and reads to each RAM location to verify accessibility.

**PROM** - Calculates and verifies the program checksum in the PROM.

**A/D** - Reads and confirms the A/D converter reference voltage is within specification.

**Modem** - Verifies the modem echoes commands.

**Dial Tone** - Confirms the telephone is connected.

**Running Firmware** - Displays the memory type from which the firmware is running. Typically, this is the PROM, but the system can upload a new version to Flash memory.

**Firmware Version** - Displays the version of firmware running.

### 28.3. Load Module (MPM)


String View > Diagnostics|Load Module

The Load Module diagnostic tests each load connection to the battery. This diagnostic tests the connections, load cable fuses, load relays and load module, and can confirm actual load current. Refer to the left side of the load connections drawing in the installation manual to determine the load steps used for each configuration.

The Load Module also has a diagnostic that can confirm the direction of the current transducer.

To test each load connection, open Load Module Diagnostics, select Load Module, then click the Test Current tab on the dialog box. Identify the configuration that applies to the installation. You can turn on each load step and confirm the current for that step. Each load step must be from 17 to 23 amps when energized.

**WARNING:** When testing, do not leave the load module on for a long time. The load module can overheat and damage hardware if not allowed to cool between tests. The load module automatically turns off after 10 seconds.

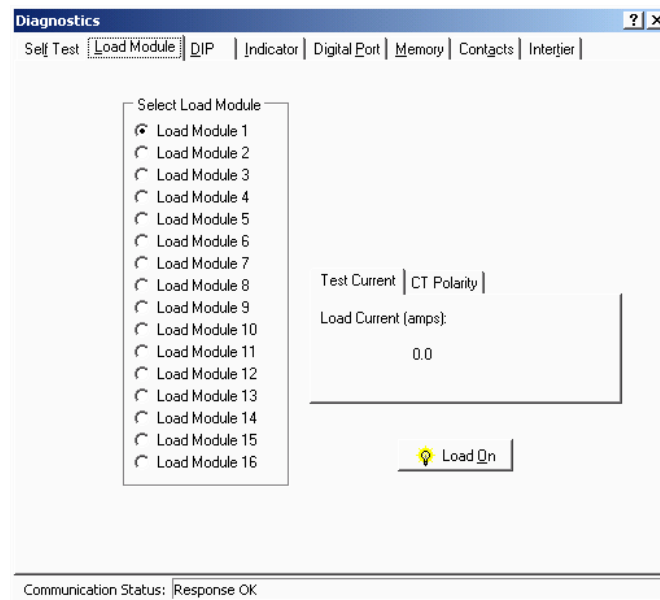

**Figure 134. Diagnostics - Load Module - Test Current (MPM)**

Under Select Load Module, select a load module, then click **Load On**. To stop the test, click **Load Off**.




## 28.4. DIP Switch (MPM)

String View > Diagnostics|DIP Switch

The DIP Switch diagnostic confirms each position of the DIP switch inside the MPM. Although not all switch positions are used, every position is checked. This diagnostic allows remote checking of switch settings. To open the diagnostic, select DIP Switch. The screen indicates each switch position as it is changed.

**CAUTION:** Exit this diagnostic with the switch in the same positions it was in when the diagnostic was entered.

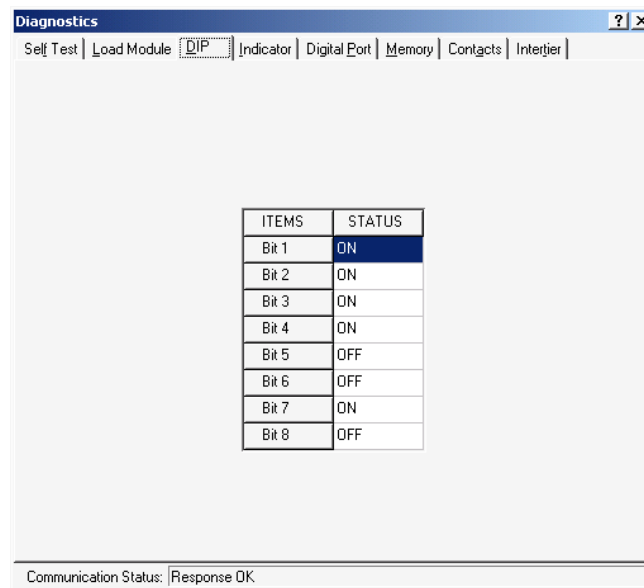

The screenshot shows a window titled "Diagnostics" with a menu bar containing "Self Test", "Load Module", "DIP", "Indicator", "Digital Port", "Memory", "Contacts", and "Inter-tier". The "DIP" menu item is selected. The main area displays a table with two columns: "ITEMS" and "STATUS". The table lists eight bits and their corresponding status: Bit 1 (ON), Bit 2 (ON), Bit 3 (ON), Bit 4 (ON), Bit 5 (OFF), Bit 6 (OFF), Bit 7 (ON), and Bit 8 (OFF). The "Bit 1" row is highlighted. At the bottom of the window, the "Communication Status" is shown as "Response OK".

| ITEMS | STATUS |
|-------|--------|
| Bit 1 | ON     |
| Bit 2 | ON     |
| Bit 3 | ON     |
| Bit 4 | ON     |
| Bit 5 | OFF    |
| Bit 6 | OFF    |
| Bit 7 | ON     |
| Bit 8 | OFF    |

Communication Status: Response OK

**Figure 135. Diagnostics - DIP Switch (MPM)**

### 28.5. Indicator (MPM)

String View > Diagnostics|Indicator

This diagnostic tests front panel LED operation. To open Indicator Diagnostics, select Indicator. To activate an LED, click an LED name then On.

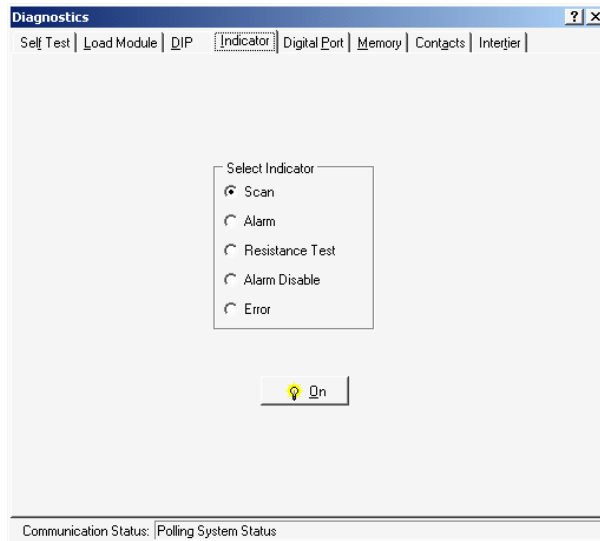


Figure 136. Diagnostics - Indicator (MPM)

### 28.6. Digital Port (MPM)

String View > Diagnostics|Digital Port

The Digital Port diagnostic checks the status of the digital inputs. If the system is connected to external contacts, this diagnostic can check each contact. To open Digital Port Diagnostics, select Digital Port. The screen displays the status of the inputs. An ON status means a contact is closed.


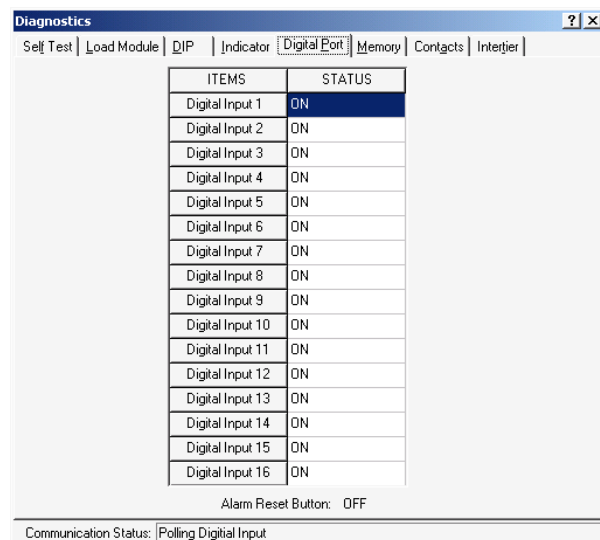


Figure 137. Diagnostics - Digital Port (MPM)

## 28.7. Memory (MPM)

String View > Diagnostics|Memory

To open Memory Diagnostics, select Memory.

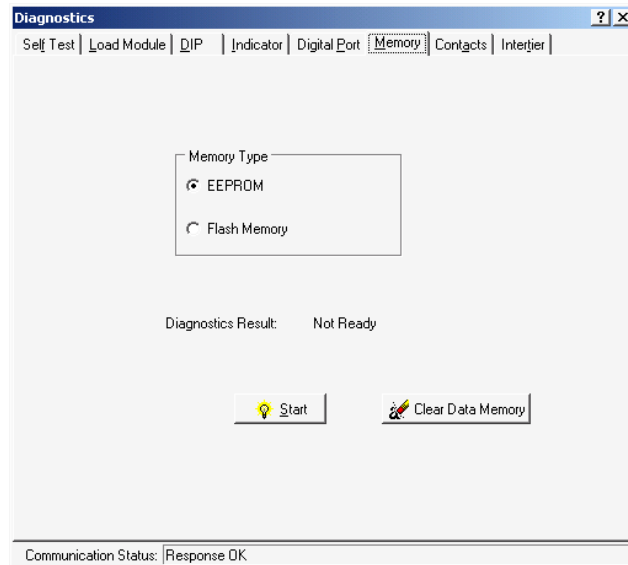

**Figure 138. Diagnostics - Memory (MPM)**

The Memory diagnostic checks nonvolatile monitor memory: E<sup>2</sup> (EEPROM) and Flash. E<sup>2</sup> memory stores calibration and setup information and data, such as Discharge, Alarm and Resistance test data. Flash memory stores MPM firmware uploads. Firmware can be upgraded on-site or remotely via modem.

To test memory, select **EEPROM** or **Flash Memory**, then click **Start**. During EEPROM testing, communication is briefly lost, then a status result indicates pass or fail. During Flash Memory testing, the integrity of the upgraded firmware file is checked; after clicking Start, select a file to compare to the contents in Flash memory. Flash testing takes several minutes.


To clear all measured data stored in E<sup>2</sup> memory, click **Clear Data Memory**.

## 28.8. Contacts (MPM)

String View > Diagnostics|Contacts

This diagnostic checks the external alarm contacts, charger contacts, and optional contacts for proper connection. To open Alarm Contacts Diagnostics, select Contacts. Under Select Contact, click Parameter Alarm, Charger Control or Contact 1, 2 or 3, then click On. You can confirm contact operation by verifying a device connected to the contacts turns on and off.

**CAUTION:** The charger contact turns the charger off until it is re-energized or until the diagnostic is exited.

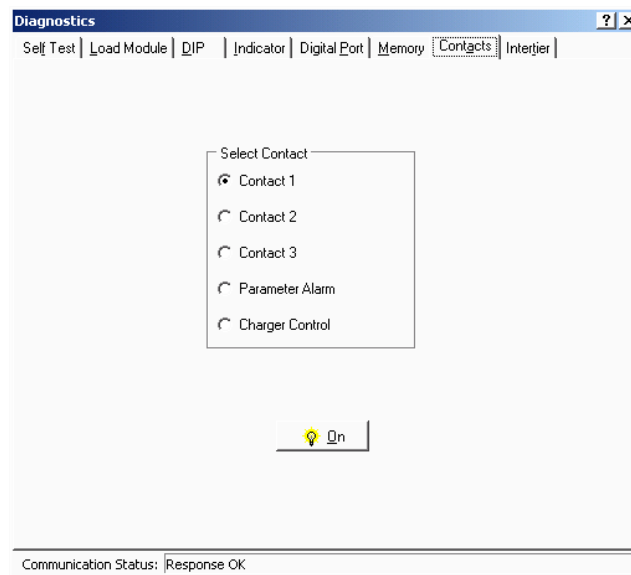

**Figure 139. Diagnostics - Alarm Contacts (MPM)**

## 28.9. Intertier (MPM)

String View > Diagnostics|Intertier

The Intertier diagnostic monitors the signal on each intertier input. Use this diagnostic for verifying the calibration of these input channels or troubleshooting. To open Intertier Diagnostics, select Intertier.

| Intertier #           | Intertier Voltage (mvolts) |
|-----------------------|----------------------------|
| Intertier 1 (Cell 12) | 0.000                      |
|                       |                            |
|                       |                            |
|                       |                            |
|                       |                            |
|                       |                            |
|                       |                            |
|                       |                            |
|                       |                            |
|                       |                            |
|                       |                            |
|                       |                            |

Communication Status: Response OK

**Figure 140. Diagnostics - Intertier (MPM)**

You may define up to eight intertiers for the MPM on the Battery Setup|Parameters dialog box, but Intertiers 2 through 4 are active only when expansion ports J3, J4, J6 and J7 are installed on the MPM.

**Intertier Voltage (mvolts)** - This column indicates the voltages being sent. This screen displays up to eight intertiers for the MPM and is used to confirm calibration accuracy. The cell number is the lower of the two cell numbers across which the intertier is connected (selected on MPM Setup|Battery|Parameters).

## 29. BDS Diagnostics

String View > Diagnostics|Item

The diagnostics are used for production testing, but may help troubleshoot a hardware failure in the field. Select Diagnostics from String View. The computer must be connected to a BDS and Communication Status at screen bottom must show Response OK.

### 29.1. Rebooting and Power Up Diagnostics (BDS)

String View > Setup|Reboot Firmware

To reboot the BDS from the Data Manager, select Reboot Firmware. This does a "warm reset" of the BDS. At power-up, the unit performs diagnostics for about two minutes. If a failure occurs, identify the failing parameters by using the *Self Test* diagnostic.

### 29.2. Self Test (BDS)

String View > Diagnostics|Self Test

Self Test reads BDS and DCM status registers and displays the parameter status on the Diagnostics dialog box. These parameters are tested only at BDS power-up. If an update is needed, cycle the power to the BDS or reboot by selecting Setup|Reboot Firmware. To open Self Test Diagnostics, select Diagnostics|Self Test.

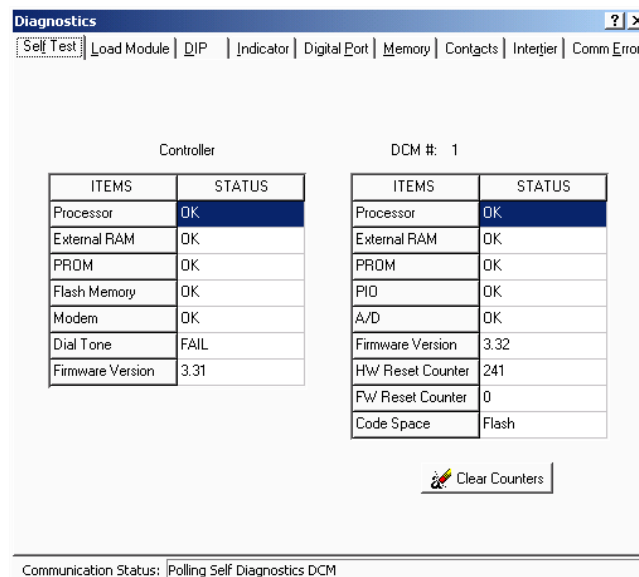


Figure 141. Diagnostics - Self Test (BDS)

Items in the Self Test Diagnostics box are described below alphabetically. If available, click the left or right arrows to view settings for other DCM units.

**A/D (DCM)** - Reads and confirms the A/D converter reference voltage is within specification.

**Code Space (DCM)** - Displays the memory type from which the firmware is running. Typically, this is the PROM, but the system can upload a new version to Flash memory.

**Dial Tone** (BDS Controller) - Confirms the telephone is connected. If connected via a multiplexer, this field indicates *Failed* as a normal condition.

**External RAM** (BDS Controller and DCM) - Writes and reads to each RAM location to verify accessibility.

**Firmware Version** (BDS Controller and DCM) - Displays the version of firmware running.

**Flash Memory** (BDS Controller) - Calculates and verifies the program checksum in Flash memory.

**FW Reset Counter** (DCM) - At boot up, the DCM runs diagnostics. If an error is found, the DCM reboots to retest. When this happens, this counter is incremented.

**HW Reset Counter** (DCM) - Indicates how many times power is cycled or the DCM performs a hardware self-reset.

**Modem** (BDS Controller) - Verifies the modem echoes commands.

**PIO** (DCM) - Checks the read/write functions of the parallel input/output device.

**Processor** (BDS Controller and DCM) - Checks processor internal registers and timers.

**PROM** (BDS Controller and DCM) - Calculates and verifies the program checksum in the PROM.

The **Clear Counters** button resets the HW (hardware) and FW (firmware) counters to zero.

### 29.3. Load Module (BDS)

String View > Diagnostics|Load Module


The Load Module diagnostic tests each load connection to the battery. This diagnostic tests the connections, load cable fuses, load relays and load module, and can confirm actual load current. Depending how the system is set up, only the load module for the selected DCM is enabled. Typically, all ten load steps are used and are distributed across multiple DCM units.

The Load Module also has a diagnostic that can confirm the direction of the current transducer.

To test each load connection, open Load Module Diagnostics, select Load Module, then click the Test Current tab on the dialog box. Select the DCM for the desired load module. You can turn on each load step and confirm the current for that step.

**IMPORTANT NOTE:** If the screen displays only Load Module buttons 1 to 5, this indicates the DIP switch in the DCM is set so the internal load bank is selected. This is an incorrect state on newer DCM units. On older multiboard DCM units, this condition is normal if the unit actually has an internal load bank. Confirm the setting before proceeding. View the Diagnostics DIP screen. If Bank 2, Bit 1 Status is ON, this is incorrect for newer hardware. The ON status is valid only for older hardware with internal load banks.

**WARNING:** When testing, do not leave the load module on for a long time. The load module can overheat and damage hardware if not allowed to cool between tests. The load module automatically turns off after about 10 seconds.

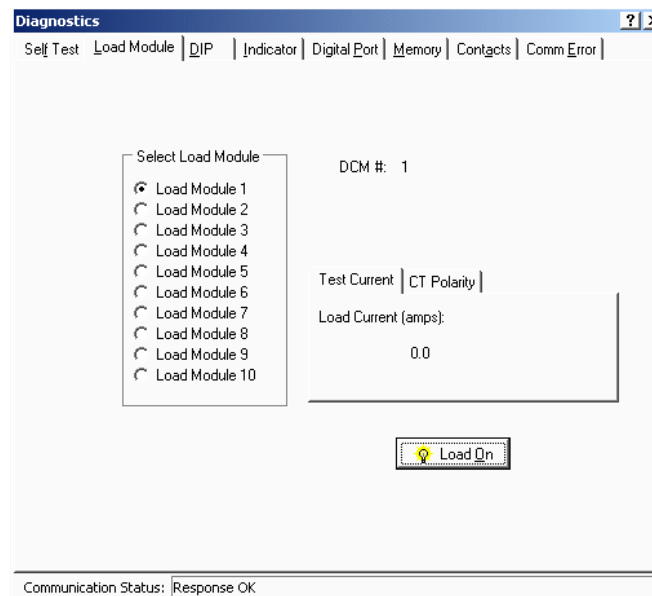


**Figure 142. Diagnostics - Load Module - Test Current (BDS)**

Under Select Load Module, select a load module, then click **Load On**. To stop the test, click **Load Off**. Click the arrows to select other DCM units.



To run the diagnostic that can confirm the direction of the current transducer (CT), click the CT Polarity tab on the dialog box. Select the DCM for the desired load module.

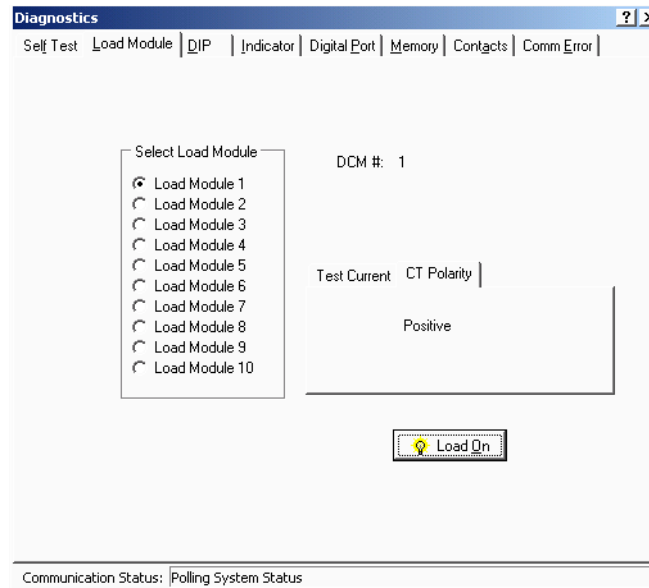

**Figure 143. Diagnostics - Load Module - CT Polarity (BDS)**


Under Select Load Module, select a load module, then click **Load On**. When the test finishes, the dialog box indicates Correct if the CT is oriented in the proper direction. If Incorrect is displayed, reverse the direction of the CT and perform the test again to confirm proper orientation.

**29.4. DIP Switch (BDS)**

String View > Diagnostics|DIP Switch

The DIP Switch diagnostic confirms each position of the DIP switches inside the BDS and DCM. This diagnostic allows remote checking of switch settings. To open the diagnostic, select DIP Switch. The diagnostic indicates each switch position. Click the left or right arrows to select other DCM units.

**Note** The DIP switches are factory set and are not usually changed by the user.

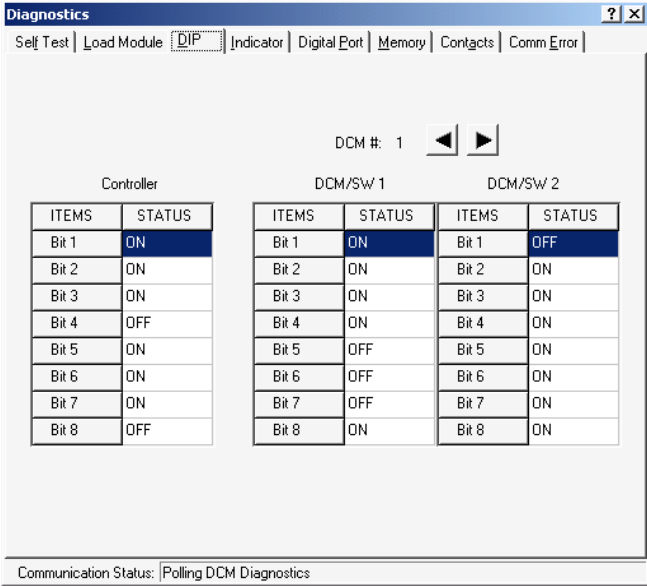

**Figure 144. Diagnostics - DIP Switch (BDS)**

### 29.5. Indicator (BDS)

String View > Diagnostics|Indicator

This diagnostic tests front panel LED operation. To open Indicator Diagnostics, select Indicator. To activate an LED, click an LED name then On.

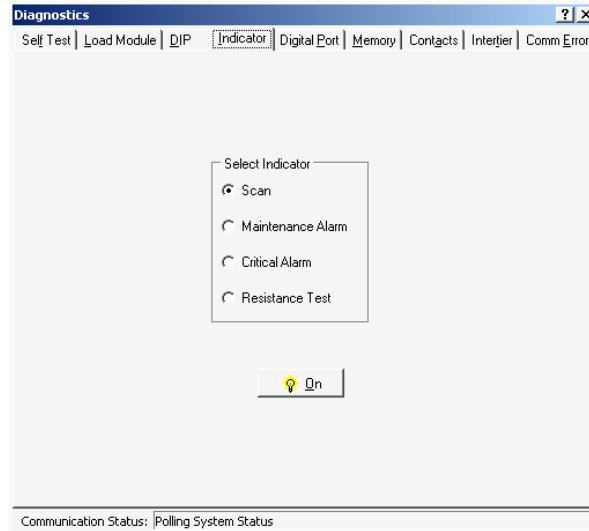


Figure 145. Diagnostics - Indicator (BDS)

### 29.6. Digital Port (BDS)

String View > Diagnostics|Digital Port

The Digital Port diagnostic checks the status of the digital inputs. If the system is connected to external contacts, this diagnostic can check each contact. To open Digital Port Diagnostics, select Digital Port. The screen displays the status of the inputs. An ON status means a contact is closed.


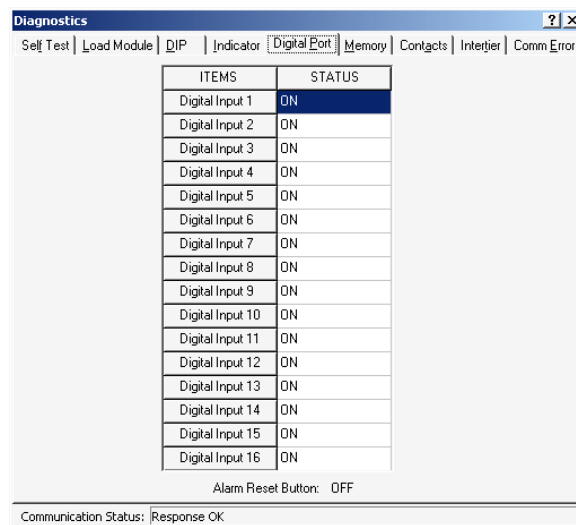


Figure 146. Diagnostics - Digital Port (BDS)

## 29.7. Memory (BDS)

String View > Diagnostics|Memory

To open Memory Diagnostics, select Memory.

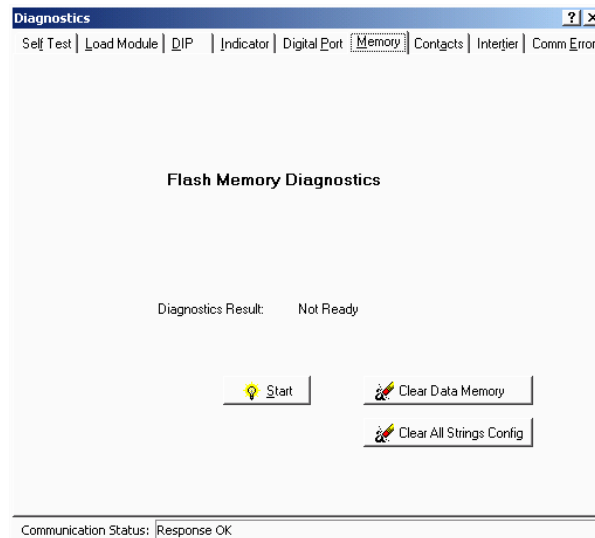

**Figure 147. Diagnostics - Memory (BDS)**


The Memory diagnostic checks Flash memory for the integrity of the upgraded firmware file. Flash memory stores BDS firmware uploads. Firmware can be upgraded on-site or remotely via modem. To run this test, click **Start** and select a file to compare to the contents in Flash memory. This test takes several minutes.

SRAM memory stores calibration and setup information and data, such as Discharge, Alarm and Resistance test data. To clear all measured data stored in nonvolatile SRAM memory, click **Clear Data Memory**. To clear configuration settings for all strings in the BDS Controller hardware, click **Clear All Strings Config**.

### 29.8. **Contacts (BDS)**

String View > Diagnostics|Contacts

This diagnostic checks the external critical and maintenance alarm contacts and the optional contacts for proper connection. To open Alarm Contacts Diagnostics, select Contacts. Under Select Contact, click a contact or alarm button, then click On. You can confirm contact operation by verifying a device connected to the contacts turns on and off.

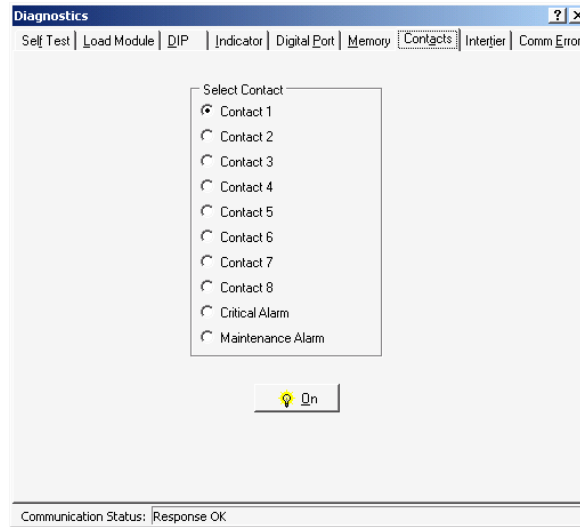


**Figure 148. Diagnostics - Alarm Contacts (BDS)**

### 29.9. **Intertier (BDS)**

String View > Diagnostics|Intertier

The Intertier diagnostic monitors the signal on each intertier input. Use this diagnostic for verifying the calibration of these input channels or troubleshooting. To open Intertier Diagnostics, select Intertier.

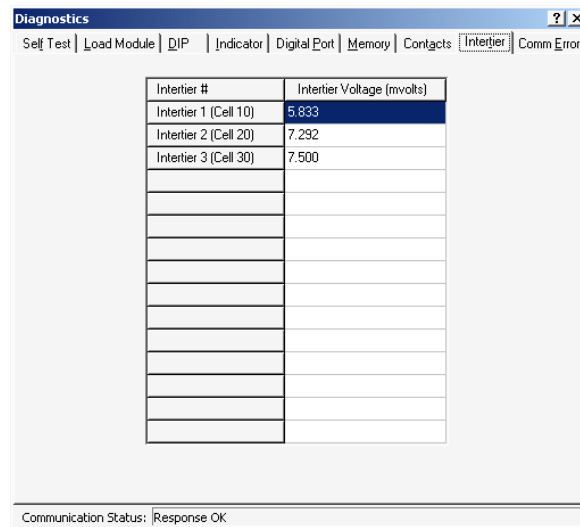


**Figure 149. Diagnostics - Intertier (BDS)**



### 29.11. Resistance Testing Multiple DCM Units

String View > Cell Resistance or Intercell Resistance *tab* > Diagnostics|R-Test in a DCM

A BDS resistance test checks all the DCM units connected to the BDS. To test a specific DCM, click the Cell Resistance or Intercell Resistance tab then select R-Test in a DCM. On the Select DCM box, click the button for the DCM you want to test. To capture new readings, click OK.

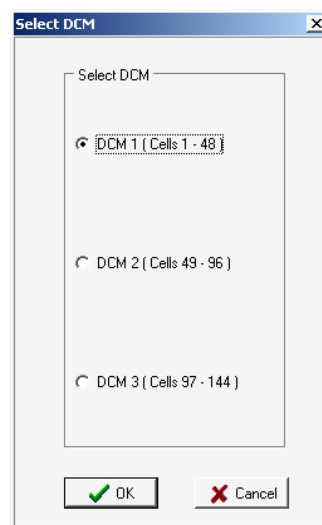

**Figure 151. Select DCM**

If you clicked OK from Cell Resistance, the screen heading changes to Resistance in DCM *n* (Cells *n - n*) (microhms) and the resistance test starts.

If you clicked OK from Intercell Resistance, the heading changes to Intercell in DCM *n* (Cells *n - n*) (microhms) and the resistance test starts.

After a few minutes, 'test in progress' disappears, and the Get button becomes active. Click **Get** to display the readings. The bottom of the screen displays a summary of the resistances and intertier values measured. To stop the test before completion, click **Stop**.

Diagnostics does not transfer resistance readings to the permanent database. Be certain to record the needed results before closing these screens.


## 30. Upgrades

String View > Setup|Upgrade Firmware or Upgrade DCM Firmware

E<sup>2</sup> (electrically erasable) memory on the MPM and SRAM memory on the BDS Controller store calibration, setup information, and actual test data. On both units, flash memory is for uploads of firmware, which can be upgraded on-site or remotely via modem. Refer to the MPM or BDS *Diagnostics-Memory* section for a complete description.

The latest upgrades and upgrade instructions are on the Web at [www.vertivco.com](http://www.vertivco.com).

**Note** On the BDS, the Setup|Upgrade Firmware item is enabled only when the BDS Controller is connected to String 1.

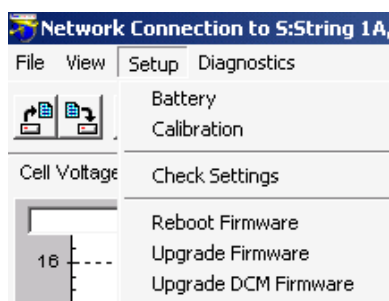

**Figure 152. Setup Menu Showing Upgrade Options (BDS)**



# 31. Commissioning Assistant

View|Reports|Commissioning Report


The Commissioning Assistant creates a report that is extremely helpful if technical support must be provided for your system. Similar to a setup wizard, the assistant helps you commission a string by instructing you to perform certain functions and record the results. You may also use the assistant to exchange equipment and recommission the string. Some assistant screens appear only if certain equipment or options are selected.

**Note** Each commissioning assistant screen has complete instructions at the top of the screen. The instructions in this chapter are only meant to supplement the instructions on the screens. Be certain to follow the instructions on each screen.

After completing the commissioning assistant, send the saved report with a file name **.CMS** extension as an email attachment. Emailing the report to [startup@vertivco.com](mailto:startup@vertivco.com) is mandatory, as the report is an integral part of the product warranty.

## 31.1. Starting the Assistant for a New String

Connecting to a string for the first time opens the commissioning assistant Welcome screen.

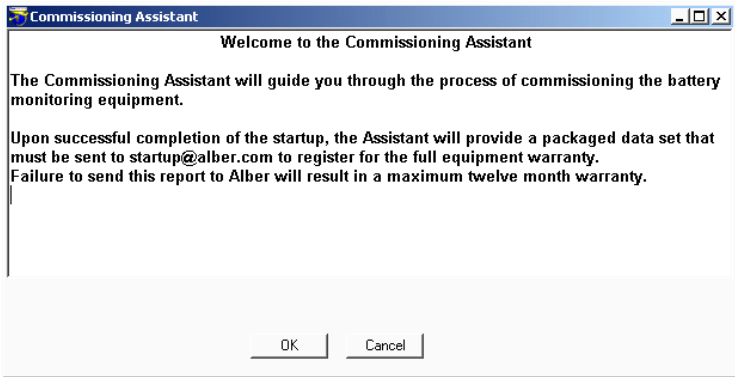

**Figure 153. Commissioning Assistant Welcome**

To commission the string, click OK on the Welcome screen to display the MPM or BDS Monitor Pre-Power Check List. If you click Cancel, the Welcome screen displays until you acknowledge the Pre-Power Check List or you click the Existing System Ignore button.

### 31.2. Monitor Pre-Power Check List

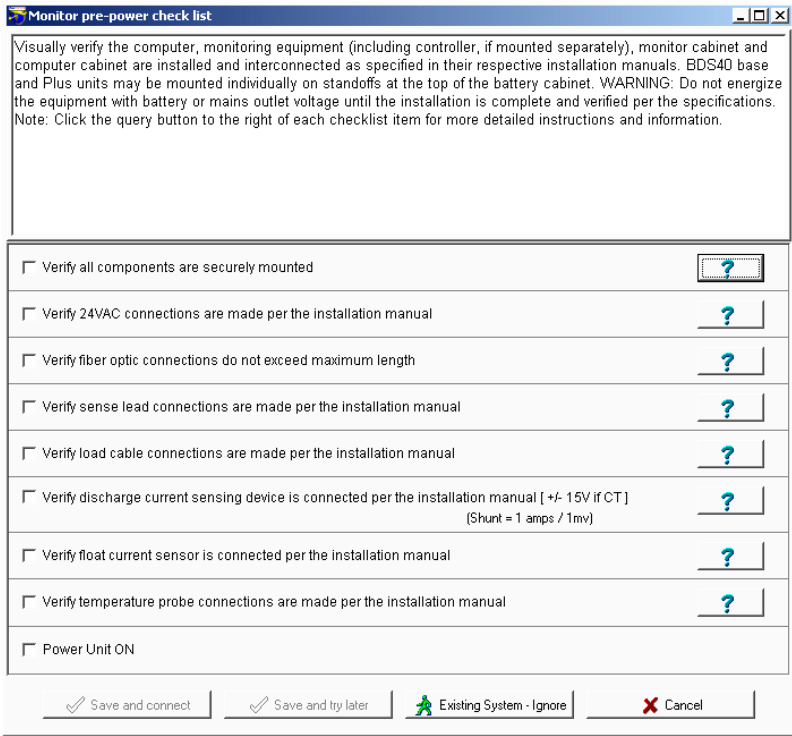


Figure 154. Monitor Pre-Power Screen (typical)

The text at the top of the Monitor Pre-Power Check List depends upon the Help (question mark) button clicked. The screen is similar for the MPM and BDS monitors. As you complete each item, check the box before the item. When all boxes are checked, connect to the string by clicking the Save and Connect button. To save a partially completed check list and connect later, click Save and Try Later.

If the string was previously commissioned, click Existing System - Ignore to connect to the string. The remaining commissioning assistant screens will not appear.

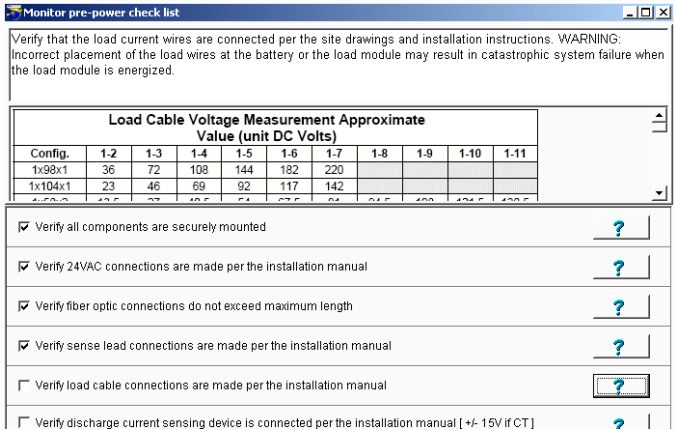



Figure 155. Monitor Pre-Power Load Cable Help Screen

To display a table that shows the voltages between the load cables for configurations, click the question mark on the "Verify load cable connections are made..." line.

### 31.3. Starting the Assistant for an Existing String

View|Reports|Commissioning Report

This section describes how to start the assistant for a string that is partially or fully commissioned or for which you want to exchange equipment. To open the assistant, first connect to the string. On the String View screen, select View|Reports|Commissioning Report to display one of the Open Commissioning Assistant screens. These screens appear for a commissioned string or a partially commissioned string if Continue Later was clicked during a commissioning session.

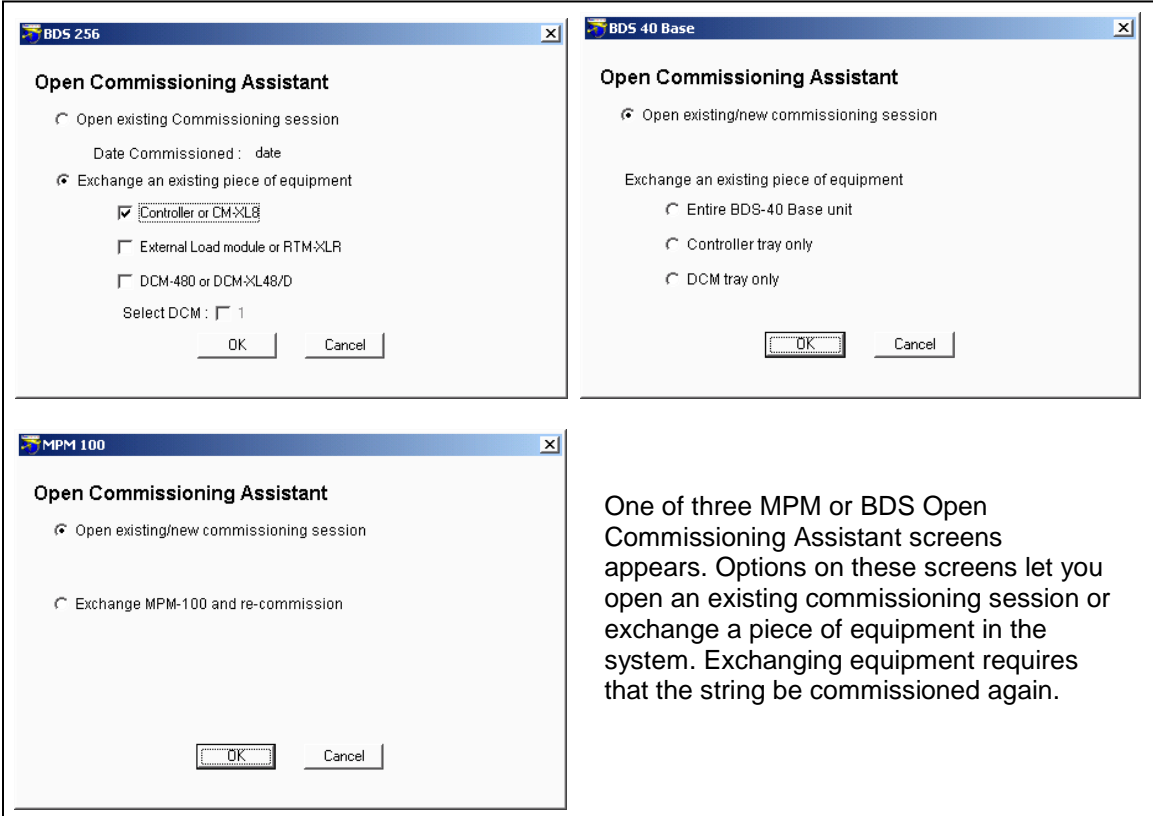

One of three MPM or BDS Open Commissioning Assistant screens appears. Options on these screens let you open an existing commissioning session or exchange a piece of equipment in the system. Exchanging equipment requires that the string be commissioned again.

Figure 156. Open Commissioning Assistant

To continue with a session, click the Open Existing/New Commissioning Session option button then click OK. If replacing hardware on a previously commissioned string, click the Exchange Equipment option button, then check a box for the equipment being exchanged. For units with multiple DCM's, select the appropriate DCM check box. After making selections, click OK.

### 31.4. Completing the Commissioning Assistant

After opening the commissioning assistant, complete the remaining screens as described in the following sections.

#### 31.4.1. Commissioning Agent Screen

The screenshot shows a software window titled "Commissioning". On the left is a vertical checklist with 15 items, each with a green checkmark: Commissioning Agent, Equipment Owner, Send Battery Setup, Check Settings, Serial Numbers, Check Cell Voltage, Check Overall Voltage, Base Data - Cell Voltage, Check Temperature, Check Discharge Current, Check Test Current, Base Data - Cell R, and Report. The main area contains instructions: "Enter the information for the commissioning agent. Fields with an asterisk \* are required." and "A copy of the commissioning report MUST BE sent to: alber.startup@alber.com". Below this is a "Commissioning Agent" form with fields for Technician Name\* (Anthony), Company Name\* (Alber), Ref/PO#/Ticket\* (12345), Site ID, Equipment Tag, Address\* (3103 North Andrews Ave Ext), Phone Number\* (954-000-0000), and Email Address\*. Buttons for "Continue Later", "Notes", "Load Agent", and "Save Agent" are present. At the bottom, status bars show "String Status: Discharge Occurred" and "Communication Status: Response OK".

Figure 157. Commissioning Agent (Comm Asst)

**Click the Commissioning Agent button.** Complete the following fields: Technician Name, Company Name, Reference/PO No./Ticket No., Site ID, Equipment Tag, Address, Phone Number, and Email Address. Note that fields for which information is mandatory are marked with an ( \* ) asterisk.

To save the technician name, company name, address, telephone number, and email address for future commissioning reports, click Save Agent. To place previously saved agent data into these fields, click Load Agent. You may save only one set of agent data.

To add a note to the report, click the Notes button, type the text into the Agent Notes dialog box, then close the box. The text will appear in the Agent Notes section in the report. The Notes button on the other screens accesses this same Agent Notes dialog box.

### 31.4.2. Equipment Owner Screen

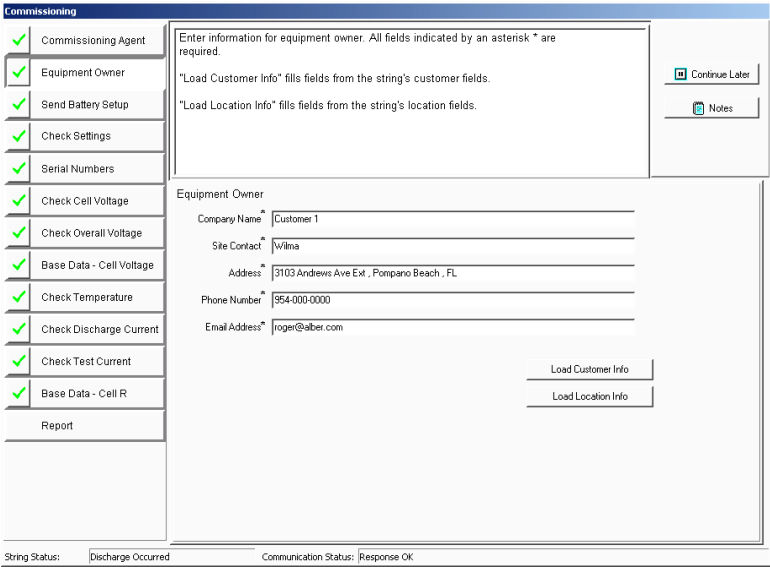


Figure 158. Equipment Owner (Comm Asst)

Click the **Equipment Owner** button. Complete the following fields: Company Name, Site Contact, Address, Phone Number, and Email Address. Note that fields for which information is mandatory are marked with an ( \* ) asterisk. Optionally, to load the data saved under Setup\System\Customer or under Setup\System\Location into the fields, click the Load Customer Info or Load Location Info buttons.

### 31.4.3. Post Power Check Screen


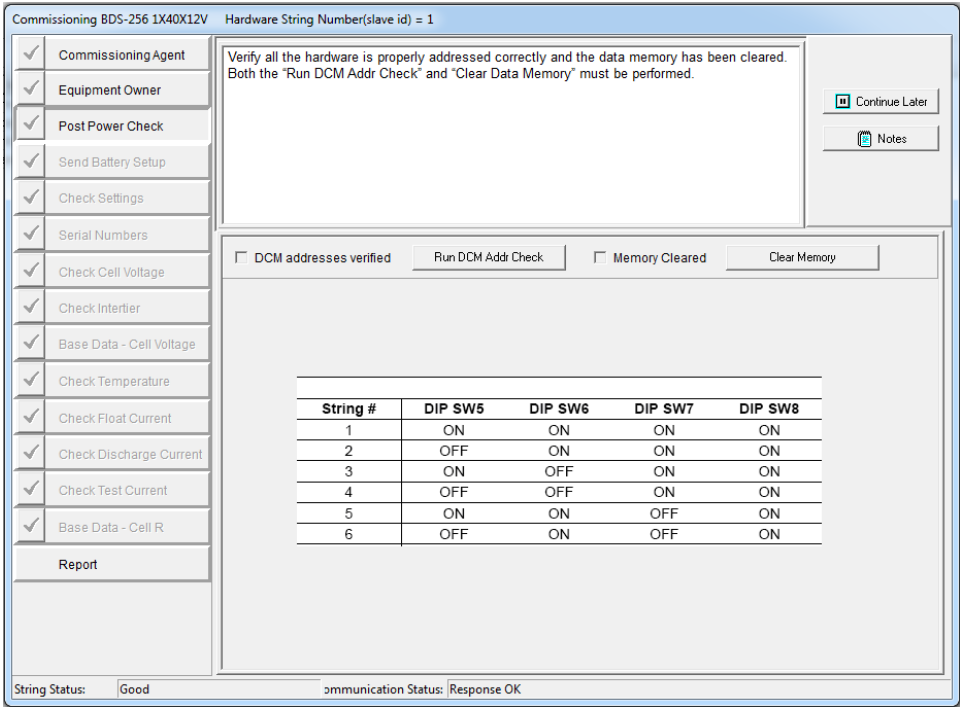


Figure 159. Post Power Check Screen (BDS only) (Comm Asst)

**Click the Post Power Check button.** Verify the DCM addresses by clicking “Run DCM Addr Check” button then, at the “Running DCM Address Check” message click **Yes** to check all DCM addresses. Also, clear the data memory by clicking the “Clear Memory” button then, at the "Clear Monitor Memory" message click **Yes** and the memory is cleared. After verification, the DCM Addresses Verified box is automatically checked.

**Note:** The MPM does not have dip switch settings.

**31.4.4. Send Battery Setup Screen**

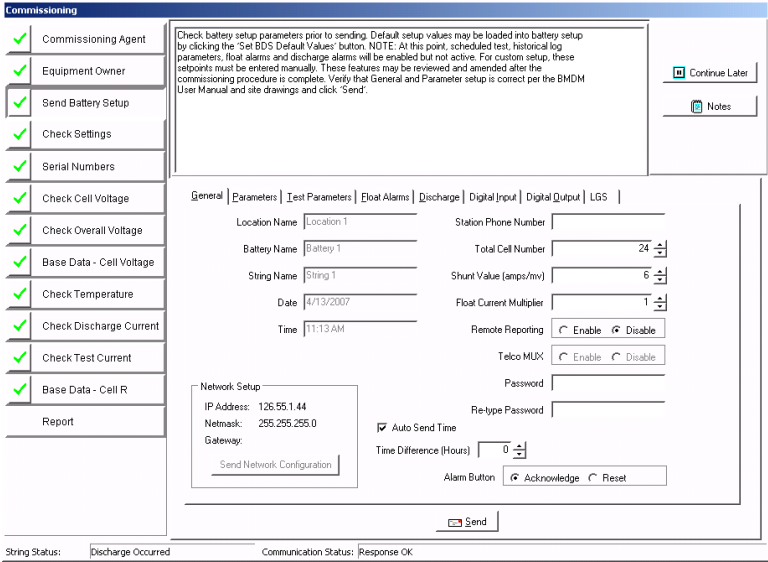

**Figure 160. Send Battery Setup (Comm Asst)**

**Click the Send Battery Setup button.** Verify the values displayed on the screen, make changes if necessary, then click Send to transfer the settings to the monitor. Note that event recording is ignored and the system doesn't alarm during commissioning. Alarms are disabled until the base resistance thresholds are sent. If using string current for discharge detection, the minimum value that can be entered is 5 percent of the shunt value.

31.4.5. Check Settings Screen

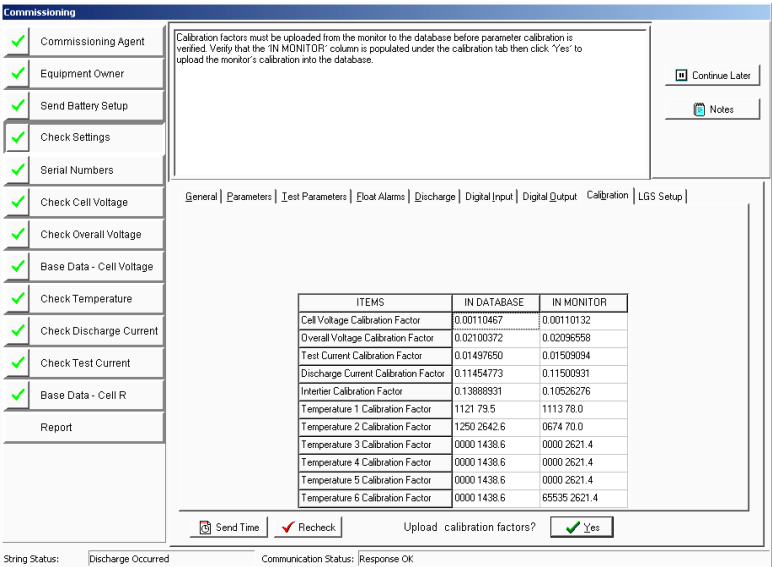


Figure 161. Check Settings (Comm Asst)

Click the Check Settings button. Confirm the values, then click Yes to upload the calibration constants from the monitor to the database. If you click Recheck, the screen refreshes. Note Only the calibration constants are uploaded.

31.4.6. Serial Numbers Screen

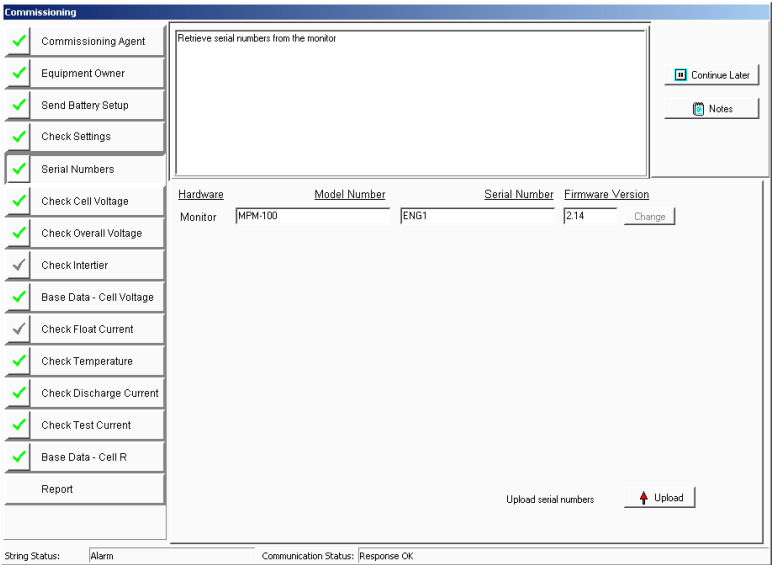


Figure 162. Serial Numbers (Comm Asst)

Click the Serial Numbers button. To upload the serial numbers and firmware revisions from the connected hardware, click the Upload button. If the data is incorrect, click in the field to type the correct data and click the Change button to send the data to the hardware. The RTM and ELM serial numbers must be typed in manually.

### 31.4.7. Check Cell Voltage Screen

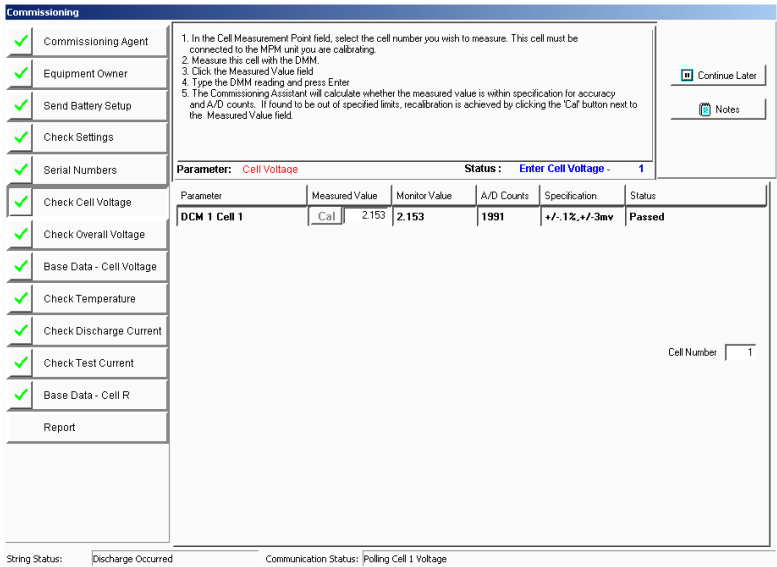


Figure 163. Check Cell Voltage (Comm Asst)

Click the **Check Cell Voltage** button. Measure the voltage across the cell indicated, type the value in the Measured Value field, then press <Enter>. If the measured value agrees with the calculated value in the monitor, the Status area indicates Passed. If it fails, calibrate the monitor to the measured value by clicking the Cal button. Note that, if there is a more convenient cell to measure, you may change the Cell Number to any cell within the DCM.

### 31.4.8. Check Overall Voltage Screen

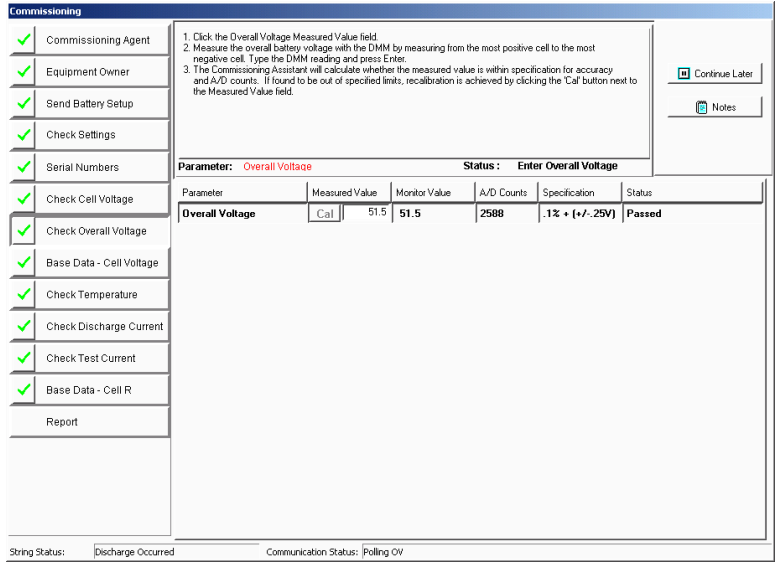


Figure 164. Check Overall Voltage (Comm Asst)

Click the **Check Overall Voltage** button. (Not used with BDS-40.) Measure the overall voltage, type the value in the Measured Value field, then press <Enter>. If the measured value agrees with the calculated value in the monitor, the Status area indicates Passed. If the measured value fails, calibrate the monitor to the measured value by clicking the Cal button.



### 31.4.9. Check Intertier Screen

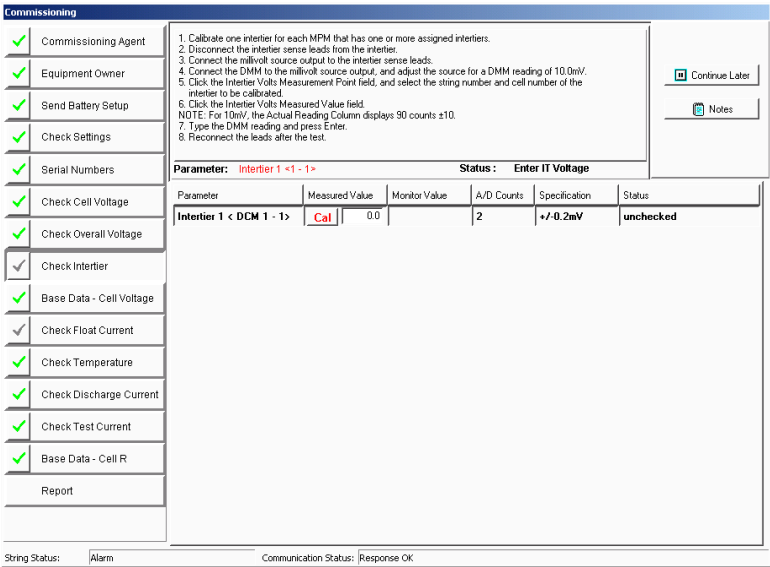


Figure 165. Check Intertier (Comm Asst)

Click the **Check Intertier** button. Measure the intertier voltage, type the value in the Measured Value field, then press <Enter>. If the measured value agrees with the calculated value in the monitor, the Status area indicates Passed. The list dynamically changes to show all intertiers and charger cables. You only have to verify one intertier per DCM. If the measured value fails, calibrate the monitor to the measured value by clicking the Cal button.

### 31.4.10. Base Data - Cell Voltage Screen

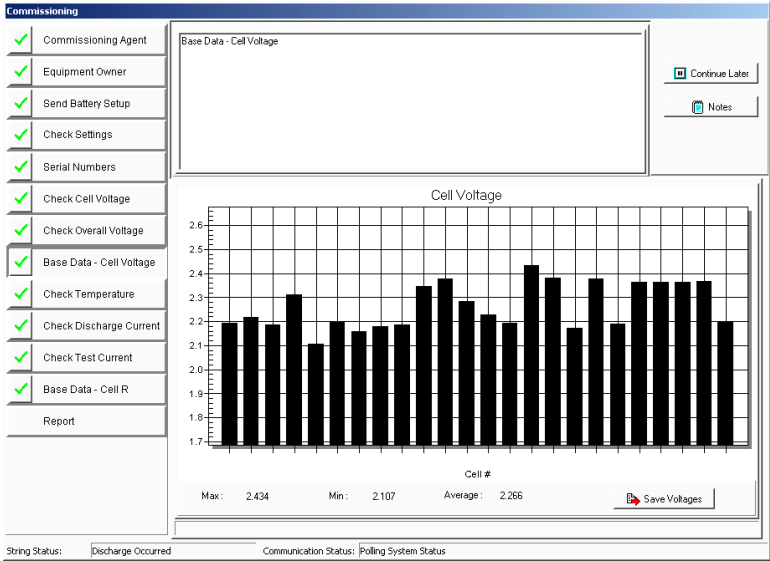


Figure 166. Base Data - Cell Voltage (Comm Asst)

Click the **Base Data - Cell Voltage** button. Data on this screen readily identifies wiring problems. To save the data, click the Save Voltages button. The voltage data is saved as the baseline float voltage readings, and the baseline voltages appear in the commissioning report.

### 31.4.11. Check Float Current Screen

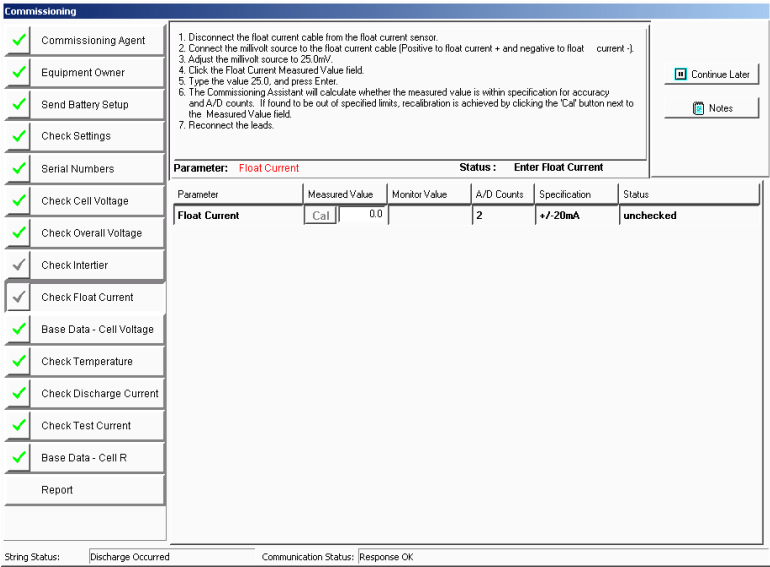


Figure 167. Check Float Current (Comm Asst)

Click the **Check Float Current** button. Type the float current value in the Measured Value field, then press <Enter>. If the measured value agrees with the calculated value in the monitor, the Status area indicates Passed. If the measured value fails, calibrate the monitor to the measured value by clicking the Cal button.

### 31.4.12. Check Temperature Screen

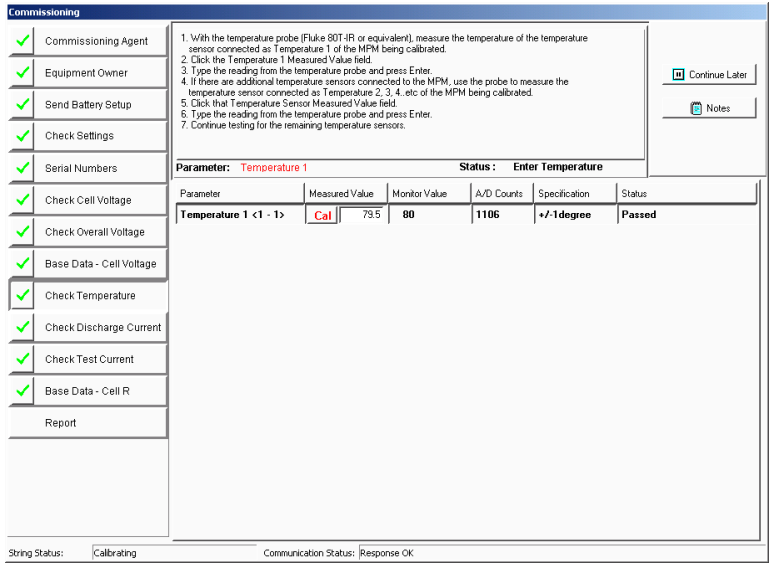


Figure 168. Check Temperature (Comm Asst)

Click the **Check Temperature** button. Type the ambient temperature value in the Measured Value field. If the measured value agrees with the calculated value in the monitor, the Status area indicates Passed. If the measured value fails, calibrate the monitor to the measured value by clicking the Cal button.

### 31.4.13. Check Discharge Current Screen

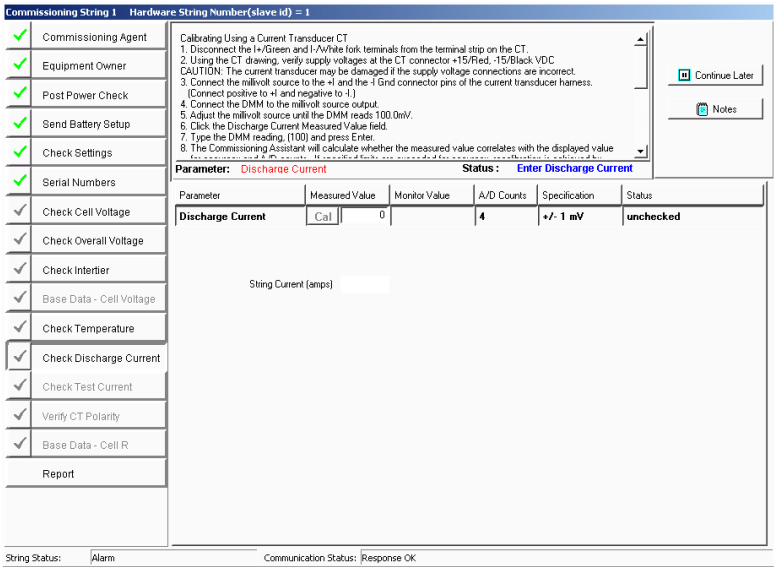


Figure 169. Check Discharge Current (Comm Asst)

Click the **Check Discharge Current** button. Verify the ±15VDC voltage supply is connected to the current transducer. Type the discharge current value in the Measured Value field. The String Current (amps) field displays the millivolt value times the shunt value as amps. If the measured value agrees with the calculated value in the monitor, the Status area indicates Passed. If the measured value fails, calibrate the monitor to the measured value by clicking the Cal button.

### 31.4.14. Check Test Current Screen

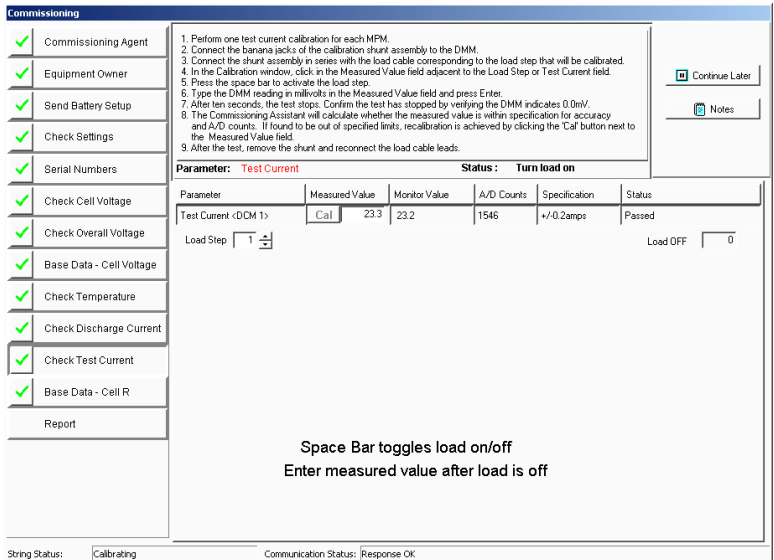


Figure 170. Check Test Current (Comm Asst)

Click the **Check Test Current** button. Before running this test, verify that all the voltages across the load wires are correct. Failure to do this may result in severe damage to the load module.

Select a load step from the Load Step spin box. Press the <Space Bar> to turn on the load, and measure the load current. Type the value in the Measured Value field, then press <Enter>. If the measured value agrees with the calculated value in the monitor, the Status area indicates Passed. If the measured value fails, calibrate the monitor to the measured value by clicking the Cal button.

### 31.4.15. Check Intercell Screen (BDS Only)

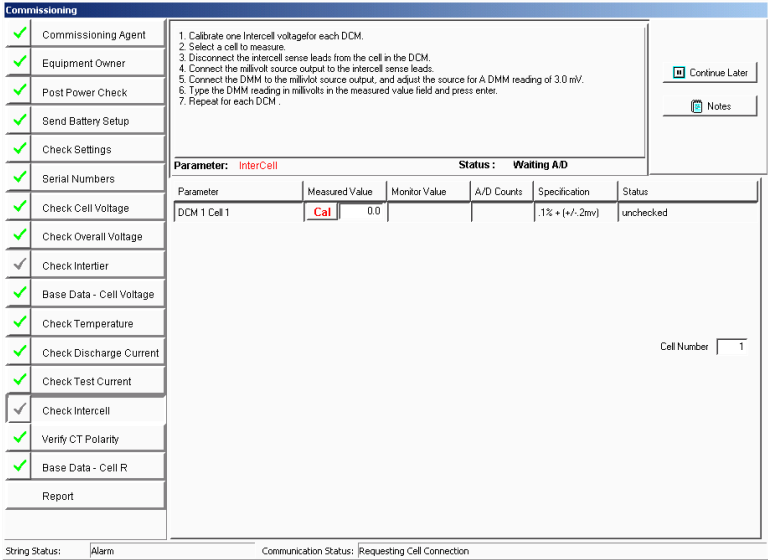


Figure 171. Check Intercell (Comm Asst)

Click the **Check Intercell** button. In the Cell Number box, type the cell number for the cell you wish to measure. This is only for dual reading systems, such as the BDS-256XL.

### 31.4.16. Base Data - Cell Resistance Screen

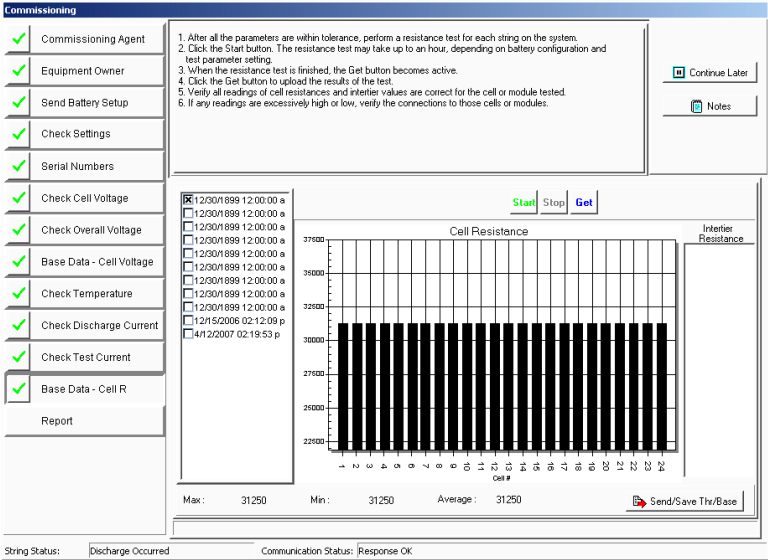


Figure 172. Base Data - Cell Resistance (Comm Asst)

Click the **Base Data Cell R** button. If necessary, click the Start button to perform a resistance test. Then, check a box in the left column to select a test that will be used to establish alarm levels and be stored as baseline data. Click the Send/Save/Thr/Base button. On the next screen, accept the defaults or make changes if required, then click OK.

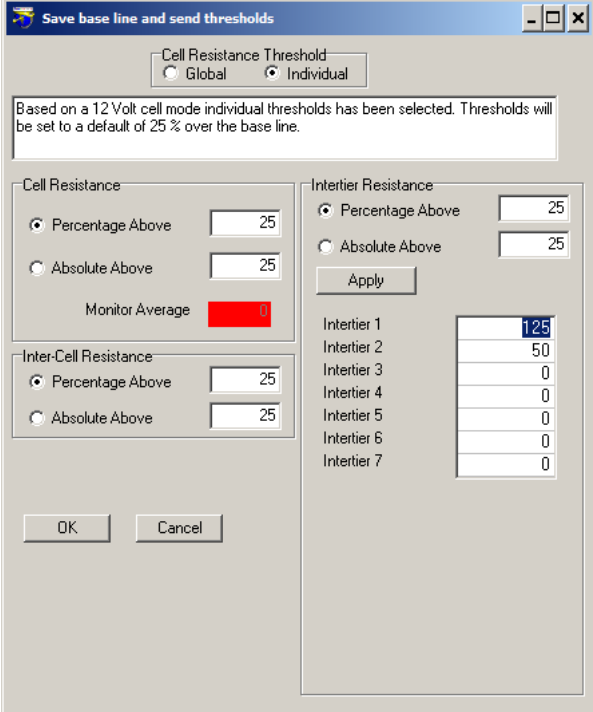


Figure 173. Save Base Line and Send Thresholds Data – Cell/Intertier/Inter-Cell Resistance (Comm Asst)

Based on a 12 volt cell mode, individual thresholds have been selected.  
**Note:** Thresholds will be set to a default of 25 percent over the base line.  
When making changes to the Intertiers, click **Apply** to save the updated values.

31.4.17. Report Screen


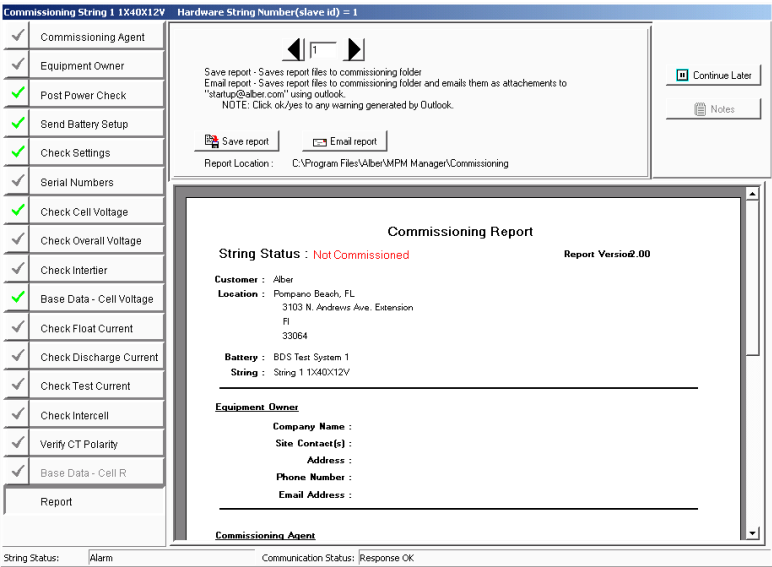


Figure 174. Report (Comm Asst)

**Click the Report button.** Text on the screen displays the path and folder where the report is saved. To view pages in the report, click the left or right arrows. To save the report as a CMS file in the Commissioning folder, click Save Report. To save and email the report to Vertiv, click the Email Report button. The CMS file is password protected and cannot be opened.

**31.4.18. Preventive Maintenance Report Form**

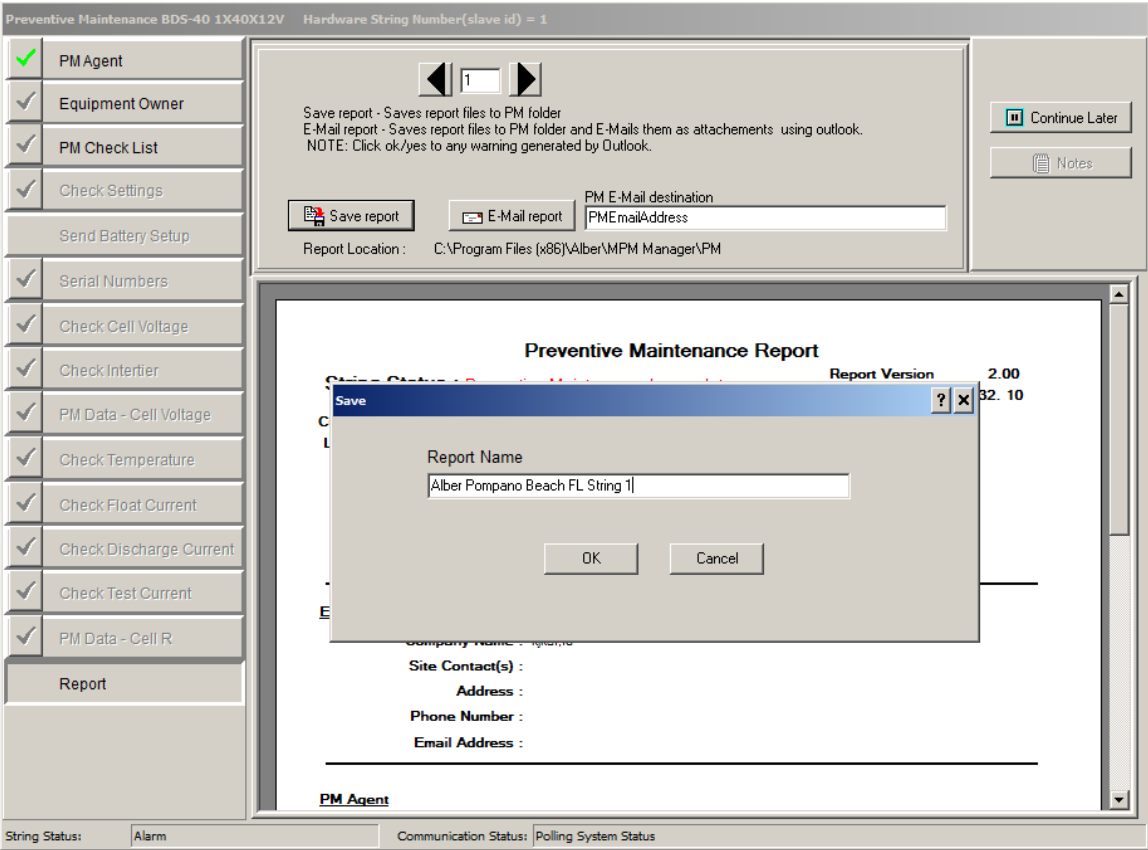

**Figure 175. Report (Preventive Maintenance) Form**

The Preventive Maintenance Report saves customer data by default in the following fields:

- Equipment Owner name
- Site ID
- Ref PO # Ticket
- Equipment Tag

The field names can be modified on the form. The modified field names from the form will show the new names in the report name.

Once the new field names are entered, click **Save Report**.

Click **OK** to save the new preventive maintenance report.

### **31.5. Emailing a Report**

The completed Commissioning Agent report must be sent to Vertiv as an email attachment for warranty and customer service purposes. To send the report, open your email editor and attach the report CMS file to the email. The CMS file resides in the Program Files\Alber\MPM Manager\Commissioning folder. In the subject line, type "BMDM commissioning report" or similar text. In the email, note your company name and contact information. Send the email with the CMS file to startup@vertivco.com.

### **31.6. Retrieving a Commissioning Report**

View|Reports|Commissioning Report

To view a report, connect to the string then click View|Reports|Commissioning Report on the Main Menu. Do not edit completed report screens unless the string is being commissioned again.

### **31.7. Printing a Commissioning Report**

The completed CMS report file cannot be printed. However, there are two printing options.

A PDF file stored in the same Commissioning folder as the CMS file can be printed as a one page document. This summary report is immediately accessible upon partial or full commissioning of a string. The file name starts with CAR and ends with PDF. The printed page can serve as confirmation that the string was commissioned.

After Vertiv receives a complete CMS commissioning file, Vertiv generates a PDF file of the report and emails it back to the originator. This PDF file, which may be printed, is a multipage document that details the commissioning of the system.



## 32. Error Codes

The following error messages may appear when running the BMDM program.

| CODE | MESSAGE   | SITUATION  |
|------|---|--|
| 1    | The database cannot be saved. Hard drive could be full.   | When copying a database to a working database                        |
| 2    | Empty database not found.   | When backing up a database   |
| 5    | Database Not Found. <Database File Name>  | When opening a database  |
| 6    | Data import error (DDetail Table). Please try again.  | When importing discharge data  |
| 7    | Data import error (DSummary Table). Please try again.   | When importing discharge data  |
| 100  | The name chosen has already been used. It must be unique.   | The user set up two locations using the same name or ID              |
| 101  | There are more than 1000 strings.   | In the local computer, there are more than 16 locations set up.      |
| 102  | Location name, battery name and string name do not match.<br>Actual location name is <LocationName>. Actual battery name is <BatteryName>.<br>Actual string name is <StringName>. | In direct connection, compare location ID in monitor and in database |
| 103  | SERVICE cannot be deleted.  | The user tries to delete Service location                            |
| 104  | Invalid name.   | Input invalid location name in location setup                        |
| 105  | String not found in <Database table name>.  | Search location  |
| 106  | String ID not found in <Database table name>.   | Search location  |
| 107  | The telephone number of string <StringName> is not set.   |  |
| 108  | The pager number of string <StringName> is not set.   |  |
| 109  | Number of strings or configuration is not set properly.   |  |
| 110  | You have to setup customer info before setup location info.   |  |
| 111  | You have to setup location info before setup battery info.  |  |
| 112  | You have to setup battery info before setup string info.  |  |
| 113  | Location name, battery name and string name do not exist. Location name is <LocationName>. Battery name is <BatteryName>. String name is <StringName>.                            |  |
| 114  | Invalid input.  |  |
| 115  | The number of data set is <SetNum>. More than one data set must exist before a trending analysis can be performed.  |  |
| 116  | Invalid IP address.   |  |
| 117  | Invalid netmask address.  |  |
| 118  | Invalid gateway address.  |  |
| 200  | No response on Polling/Answer Port Modem.   | When initializing modem  |
| 201  | No response on Answer Port Modem.   | When initializing modem  |
| 202  | The currently selected COM Port, COM <ComPortNum>, does not exist. Press OK and choose a different port.  | When initializing COM port   |

| CODE | MESSAGE  | SITUATION   |
|------|--|---|
| 203  | The currently selected COM Port, COM <ComPortNum>, is already in use by another program. Press OK and choose a different port. | When initializing COM port  |
| 204  | The currently selected Com Port, Com <ComPortNum>, is not available. Press OK and choose a different port.                     | When initializing COM port  |
| 205  | No response from Modem/Cable Multiplexer.  | When connecting modem/cable multiplexer   |
| 206  | Comm Error: No response for sending "Stop Scan" command 3 times.   |   |
| 207  | Comm Error: No response for sending "Start Scan" command 3 times.  |   |
| 208  | Comm Error: No response for sending "Load Off" command 3 times.  |   |
| 209  | Comm Error: No response for sending "Send DCM #" command 3 times.  |   |
| 300  | Upgrade failed: No response for sending code 3 times.  | When sending frames   |
| 301  | Upgrade failed: Not responding.  | Check firmware location (PROM or flush memory) in the beginning of firmware upgrade |
| 302  | Upgrade failed: Code confirm failed.   |   |
| 400  | Resistance test failed: 60 minute time-out.  | Manual R-test is not completed in 60 minutes  |
| 401  | Data format error. The data may be saved for a different MPM configuration.  | When reading resistance or historical data  |
| 402  | The raw count equals 0. Please check hardware.   | During calibration  |
| 403  | Data import error (Encode date/time). Please try again.  | When importing alarm data   |
| 404  | Wrong overall voltage data.  | Got invalid overall voltage in discharge data                                       |
| 405  | Subset <SubsetNum> does not have an initial value.   | When viewing discharge curves, found invalid subset                                 |
| 406  | Subset <SubsetNum> does not have a final value.  | When viewing discharge curves, found invalid subset                                 |
| 407  | Discharge data cannot be shown due to invalid Date/Time.   |   |
| 500  | Subset 3 is selected, but Subset 2 is not selected. If you want to show two curves, the second curve should be in Subset 2.    | Wrong selection in Curve Option of Discharge View screen                            |
| 501  | Two password entries are not identical. Please enter again.  |   |
| 502  | Password must have five characters.  |   |
| 1000 | The string name exists. It must be unique.   |   |
| 1001 | The battery name exists. It must be unique.  |   |
| 1002 | The location name exists. It must be unique.   |   |
| 1003 | The customer name exists. It must be unique.   |   |

# Index

- % above baseline field
  - on detail cell resistance s/u .....24-3
  - on trend cell resistance s/u.....24-6
- 24/7 on contact information ..... 16-13
- a/d counts column on calibration.....27-2
- a/d status
  - on self test diagnostics BDS .....29-1
  - on self test diagnostics MPM .....28-2
- absolute above button
  - on cell resistance alarm levels BDS. 20-11
  - on cell resistance alarm levels MPM...19-7
- absolute date and time button
  - on battery s/u test parameters BDS ....20-8
  - on battery s/u test parameters MPM...19-5
- Access**
  - A. database file path field ..... 6-3
  - creating a database ..... 4-4
  - database backup..... 9-3, 23-1
  - database importing** ..... 6-3
  - database on BMDM**..... 4-1
  - deleting a database ..... 4-4
- access telephone number field
  - on contact information..... 16-13
  - on system s/u reporting..... 16-10
- account field on email s/u .....15-1
- acknowledge
  - a. alarm button on current alarm ..... 23-15
  - a. alarm menu item .....23-4, 23-15
  - a. button
    - on battery s/u general BDS .....20-3
    - on battery s/u general MPM .....19-3
- active ck box on contact information.... 16-12
- ACV@30 column
  - on all discharges ..... 23-17
  - on discharge s/u..... 24-11
- address fields on workstation s/u ..... 6-6
- administrator password..... 4-5
- administrator rights ck box on edit user.... 7-2
- alarm
  - a. button
    - on indicator diagnostics MPM .....28-5
  - a. button area
    - on battery s/u general BDS .....20-3
    - on battery s/u general MPM .....19-3
  - a. date area
    - on historical alarm selection..... 23-14
  - a. detail column on historical events...23-6
  - a. disable button
    - on indicator diagnostics MPM .....28-5
  - a. event boxes .....23-4
  - a. reset button on MPM/BDS ..... 23-15
  - a. reset switch on BDS.....17-2
  - a. reset switch on MPM.....17-2
- a. setup screen** ..... **24-11**
- a. type area
  - on alarms s/u ..... 24-11
  - on historical alarm selection ..... 23-14
- acknowledge ..... 23-4, **23-15**
- data** ..... **23-13**
- deleting from database..... 23-14
- records.....11-1, 11-2
- setup** ..... **24-11**
- thresholds
  - on battery s/u float alarms BDS .... 20-11
  - on battery s/u float alarms MPM .....19-7
- alarm threshold count box
  - on preferences.....13-2
- AlberDemo sample database.....4-1
- AlberDemo.mdb file .....4-1
- all available button
  - on system s/u reporting..... 16-10
- all button on system s/u reporting..... 16-10
- all dates button
  - on historical alarm selection ..... 23-14
- all discharge.....23-15
- all discharge screen**..... **23-16**
- all types button
  - on historical alarm selection ..... 23-14
- alpha button
  - on contact information ..... 16-13
  - on system s/u reporting.....16-9
- alternate field title field on preferences...13-3
- always contact ck box
  - on contact information ..... 16-12
- amp hours
  - amp hours field
    - on battery s/u discharge BDS ..... 20-17
    - on battery s/u discharge MPM ..... 19-10
    - with Peukert's equation .....12-1
- amps per millivolt
  - on battery s/u general BDS .....20-2
  - on battery s/u general MPM .....19-3
- answer port area on comm s/u .....14-1
- apply button
  - on cell resistance alarm levels BDS. 20-11
  - on cell resistance alarm levels MPM...19-7
- archive reader.....25-2
- archive report.....25-2
- assigning a workstation.....6-5
- attaching an SQL database .....9-3
- authentication ck box
  - on email s/u.....15-1
- auto extract data ck box
  - on communication s/u .....14-2
- auto generating tech detail summary screen** .....**26-3**

|   |                |  |       |
|---|----------------|--|-------|
| auto include all data sets ck box         |                | <i>float alarms BDS</i> .....                  | 20-10 |
| on detail cell voltage s/u .....          | 24-2           | <i>float alarms MPM</i> .....                  | 19-6  |
| auto refresh status ck box on preferences |                | <b>float alarms screen BDS</b> .....           | 20-10 |
| .....                                     | 13-2           | <b>float alarms screen MPM</b> .....           | 19-6  |
| auto select cells ck box                  |                | <i>general BDS</i> .....                       | 20-2  |
| on trend cell voltage s/u .....           | 24-5           | <i>general MPM</i> .....                       | 19-2  |
| auto select ck box                        |                | <b>general screen BDS</b> .....                | 20-2  |
| on all discharges .....                   | 23-16          | <b>general screen MPM</b> .....                | 19-2  |
| on discharge s/u.....                     | 24-10          | <i>LGS BDS</i> .....                           | 20-20 |
| auto send time ck box                     |                | <i>LGS MPM</i> .....                           | 19-12 |
| on battery s/u general BDS .....          | 20-3           | <b>LGS screen BDS</b> .....                    | 20-20 |
| on battery s/u general MPM .....          | 19-3           | <b>LGS screen MPM</b> .....                    | 19-12 |
| autopolling.....                          | See polling    | <i>parameters BDS</i> .....                    | 20-4  |
| average button                            |                | <i>parameters MPM</i> .....                    | 19-4  |
| on battery s/u test parameters BDS ....   | 20-9           | <b>parameters screen BDS</b> .....             | 20-4  |
| on battery s/u test parameters MPM...     | 19-6           | <b>parameters screen MPM</b> .....             | 19-4  |
| average cell resistance field             |                | <i>test parameters BDS</i> .....               | 20-8  |
| on battery s/u test parameters BDS.....   | 20-9           | <i>test parameters MPM</i> .....               | 19-5  |
| backup                                    |                | <b>test parameters screen BDS</b> .....        | 20-8  |
| b.u. database button.....                 | 23-1           | <b>test parameters screen MPM</b> .....        | 19-5  |
| defined .....                             | 9-3            | thermal runaway BDS.....                       | 20-13 |
| of Access database .....                  | 9-3, 23-1      | <b>thermal runaway screen BDS</b> ....         | 20-13 |
| of SQL database .....                     | 6-1, 9-3, 23-1 | <i>setup for the BDS</i> .....                 | 20-1  |
| base data cell resistance in comm asst    | 31-13          | <i>setup for the MPM</i> .....                 | 19-1  |
| base data cell voltage in comm asst.....  | 31-9           | <i>status viewing</i> .....                    | 23-1  |
| baseline field                            |                | <b>battery monitor login user screen</b> ..... | 7-4   |
| on detail cell resistance s/u .....       | 24-3           | battery setup                                  |       |
| on trend cell resistance s/u.....         | 24-6           | password .....                                 | 4-5   |
| battery                                   |                | black bar graph.....                           | 23-7  |
| b button on preferences .....             | 13-2           | <b>BMDM</b>                                    |       |
| b setup ck box on edit user .....         | 7-2            | <i>installing the program</i> .....            | 4-1   |
| b. capacity field                         |                | <i>new system s/u</i> .....                    | 16-1  |
| on system s/u battery .....               | 16-5           | <b>BMDM opening screen</b> .....               | 4-1   |
| b. name column on string status.....      | 23-2           | <b>BMDM service manager screen</b> .....       | 6-7   |
| b. name field                             |                | calibration .....                              | 27-1  |
| on battery s/u general BDS .....          | 20-2           | <b>c. (BDS) check settings screen</b> .....    | 18-9  |
| on battery s/u general MPM .....          | 19-2           | <b>c. (BDS) screen</b> .....                   | 27-1  |
| on system s/u battery .....               | 16-5           | <b>c. (MPM) check settings screen</b> .....    | 18-9  |
| <i>b. status viewing</i> .....            | 23-1           | <b>c. (MPM) screen</b> .....                   | 27-1  |
| <i>b. system s/u</i> .....                | 16-4           | c. check settings.....                         | 18-9  |
| <b>b. system setup screen</b> .....       | 16-4           | c. ck box on edit user.....                    | 7-3   |
| changing name.....                        | 16-1           | c. factor column on calibration .....          | 27-2  |
| <i>locations connection</i> .....         | 22-1           | call all modem strings button.....             | 23-4  |
| <i>setup</i>                              |                | capture readings .....                         | 23-9  |
| <i>digital input BDS</i> .....            | 20-18          | cell   |       |
| <i>digital input MPM</i> .....            | 19-10          | c. detail area                                 |       |
| <b>digital input screen BDS</b> .....     | 20-18          | on all discharges .....                        | 23-17 |
| <b>digital input screen MPM</b> .....     | 19-10          | on discharge s/u.....                          | 24-11 |
| <i>digital output BDS</i> .....           | 20-19          | c. detail ck box                               |       |
| <i>digital output MPM</i> .....           | 19-11          | on all discharges .....                        | 23-17 |
| <b>digital output screen BDS</b> .....    | 20-19          | on discharge s/u.....                          | 24-11 |
| <b>digital output screen MPM</b> .....    | 19-11          | c. graph ck box                                |       |
| <i>discharge BDS</i> .....                | 20-15          | on all discharges .....                        | 23-17 |
| <i>discharge MPM</i> .....                | 19-8           | on discharge s/u.....                          | 24-11 |
| <b>discharge screen BDS</b> .....         | 20-15          | c. manufacturer field                          |       |
| <b>discharge screen MPM</b> .....         | 19-8           | on system s/u string.....                      | 16-7  |

|  |                   |  |                   |
|--|-------------------|--|-------------------|
| <i>c. memo</i> .....                                 | 23-22             | check application termination field .....    | 6-7               |
| <i>c. memo menu item</i> .....                       | 23-22             | check cell voltage in comm asst .....        | 31-8              |
| <b>c. memo screen</b> .....                          | <b>23-22</b>      | check DCM address button                     |                   |
| <i>c. memos ck box on discharge s/u</i> .....        | 24-10             | on comm error diagnostics BDS .....          | 29-9              |
| <i>c. model field on system s/u string</i> .....     | 16-7              | check discharge current in comm asst         | 31-11             |
| <i>c. resistance</i> .....                           | 23-8              | check float current in comm asst .....       | 31-10             |
| <b>c. resistance screen</b> .....                    | <b>23-8</b>       | check intertier in comm asst .....           | 31-9              |
| <i>c. resistance tab on string view</i> .....        | 23-8, <b>23-9</b> | check overall voltage in comm asst .....     | 31-8              |
| <i>c. voltage</i> .....                              | 23-7              | check settings                               |                   |
| <b>c. voltage box</b> .....                          | <b>23-11</b>      | <i>and synchronizing</i> .....               | 17-1              |
| <i>c. voltage box on string view</i> .....           | 23-11             | <i>c.s. in controller</i> .....              | 18-11             |
| <i>c. voltage button on curve option</i> .....       | 23-20             | <b>c.s. in controller screens</b> .....      | <b>18-11</b>      |
| <i>c. voltage field</i>                              |                   | <i>c.s. upload ck box on edit user</i> ..... | 7-3               |
| on battery s/u parameters BDS .....                  | 20-7              | calibration .....                            | 18-9              |
| <b>c. voltage screen</b> .....                       | <b>23-7</b>       | <b>calibration (BDS) screen</b> .....        | <b>18-9</b>       |
| cell # column  |                   | <b>calibration (MPM) screen</b> .....        | <b>18-9</b>       |
| on battery s/u parameters BDS .....                  | 20-7              | digital input .....                          | 18-7              |
| cell # field   |                   | <b>digital input (BDS) screen</b> .....      | <b>18-7</b>       |
| on battery s/u parameters MPM .....                  | 19-4              | <b>digital input (MPM) screen</b> .....      | <b>18-7</b>       |
| cell # label start from area                         |                   | digital output .....                         | 18-8              |
| on system s/u battery .....                          | 16-5              | digital output (BDS) screen .....            | 18-8              |
| phone for messages .....                             | 16-11             | discharge .....                              | 18-6              |
| trend analysis .....                                 | 23-12             | <b>discharge screen</b> .....                | <b>18-6</b>       |
| cell column  |                   | float alarms .....                           | 18-4              |
| on cell resistance alarm levels BDS .....            | 19-7, 20-11       | <b>float alarms (BDS) screen</b> .....       | <b>18-4, 18-5</b> |
| cell resistance alarm levels box                     |                   | <b>float alarms (MPM) screen</b> .....       | <b>18-4</b>       |
| BDS .....  | 20-11             | general .....                                | 18-1              |
| MPM .....  | 19-7              | <b>general screen</b> .....                  | <b>18-1</b>       |
| <b>cell resistance alarm levels screen</b>           |                   | <b>LGS screen</b> .....                      | <b>18-10</b>      |
| <b>BDS</b> .....                                     | <b>20-11</b>      | parameters .....                             | 18-2              |
| <b>MPM</b> .....                                     | <b>19-7</b>       | <b>parameters (BDS) screen</b> .....         | <b>18-2</b>       |
| cell resistance threshold area                       |                   | <b>parameters (MPM) screen</b> .....         | <b>18-2</b>       |
| on battery s/u float alarms BDS .....                | 20-10             | <i>screens</i> .....                         | 18-1              |
| on battery s/u float alarms MPM .....                | 19-6              | test parameters .....                        | 18-3              |
| cells  |                   | <b>test parameters screen</b> .....          | <b>18-3</b>       |
| <i>c. below threshold area on summary</i> .....      | 23-21             | check settings in comm asst .....            | 31-7              |
| <i>c. column on battery s/u parameters BDS</i> ..... | 20-4              | check temperature in comm asst .....         | 31-10             |
| central computer                                     |                   | check test current in comm asst .....        | 31-11, 31-13      |
| button on select computer type .....                 | 4-6               | clear button on system s/u customer .....    | 16-3              |
| <i>changing to</i> .....                             | 4-7               | clear button on workstation s/u .....        | 6-6               |
| <i>connection steps</i> .....                        | 10-2              | clear comm error counts button               |                   |
| <i>defined</i> .....                                 | 8-1               | on comm error diagnostics BDS .....          | 29-9              |
| defining .....                                       | 4-6               | clear counters button                        |                   |
| extracting data .....                                | 9-2               | on self test diagnostics BDS .....           | 29-2              |
| polling .....  | 9-2               | clear data memory button .....               | 29-7              |
| change button on login user .....                    | 7-4               | on memory diagnostics BDS .....              | 29-7              |
| change elapsed time slider .....                     | 23-18             | on memory diagnostics MPM .....              | 28-6              |
| change time slider .....                             | 23-19             | clear existing names .....                   | 17-2              |
| <b>changing computer type</b> .....                  | <b>4-7</b>        | close database button on login user .....    | 7-4               |
| <b>changing names or info</b> .....                  | <b>16-1</b>       | CMS file .....                               | 31-15, 31-16      |
| charger control button                               |                   | code space                                   |                   |
| on contacts diagnostics MPM .....                    | 28-7              | on self test diagnostics BDS .....           | 29-1              |
| charger ripple frequency                             |                   | column sorting .....                         | 23-3, 23-5        |
| on battery s/u general BDS .....                     | 20-2              | com port field on communication s/u .....    | 14-1              |
|  |                   | commissioning agent screen .....             | 31-4              |
|  |                   | commissioning assistant .....                | 31-1              |

|   |              |  |              |
|---|--------------|--|--------------|
| emailing a report .....                     | 31-16        | critical alarm ck box                    |              |
| open comm assistant screens .....           | 31-3         | on battery s/u discharge BDS .....       | 20-16        |
| pre-power check list.....                   | 31-2         | critical ck box                          |              |
| printing a report .....                     | 31-16        | on battery s/u digital input BDS.....    | 20-18        |
| save and connect button.....                | 31-2         | on battery s/u float alarms BDS .....    | 20-12        |
| welcome screen .....                        | 31-1         | cumulative time column                   |              |
| <b>communication</b>                        |              | on executive summary report.....         | 26-2         |
| <b>c. error diagnostics screen</b> .....    | <b>29-9</b>  | current 1 to 4 check boxes .....         | 23-17        |
| <b>c. setup screen</b> .....                | <b>14-1</b>  | current alarm.....                       | 23-13        |
| <i>error diagnostics</i> .....              | <i>29-9</i>  | <b>current alarm screen</b> .....        | <b>23-13</b> |
| <i>setup</i> .....                          | <i>14-1</i>  | current mode button                      |              |
| computer types.....                         | 4-6          | on battery s/u discharge BDS .....       | 20-16        |
| <i>central</i> .....                        | <i>8-1</i>   | on battery s/u discharge MPM .....       | 19-9         |
| <i>changing</i> .....                       | <i>4-7</i>   | current service status area on service   |              |
| <i>local</i> .....                          | <i>8-2</i>   | manager .....                            | 6-7          |
| <i>service</i> .....                        | <i>8-3</i>   | current workstation field .....          | 6-6          |
| config3.mpm file .....                      | 4-7          | <i>on system s/u workstation</i> .....   | <i>16-2</i>  |
| <i>configuration wizard</i> .....           | <i>5-5</i>   | curve n area .....                       | 23-20        |
| <i>configure station</i> .....              | <i>5-1</i>   | curve option .....                       | 23-19        |
| connection button                           |              | <b>curve option screen</b> .....         | <b>23-20</b> |
| for the BDS .....                           | 20-1         | customer                                 |              |
| for the MPM .....                           | 19-1         | <i>adding</i> .....                      | <i>16-1</i>  |
| modem to a location .....                   | 22-1         | c. button on preferences .....           | 13-2         |
| network to a location .....                 | 22-1         | c. contact area                          |              |
| RS-232 to a location.....                   | 22-1         | on system s/u customer .....             | 16-3         |
| connection name field on SQL.....           | 6-2          | c. contact ck box                        |              |
| contact                                     |              | on system s/u reporting.....             | 16-10        |
| c. ck box on system s/u reporting....       | 16-10        | c. field on system s/u location .....    | 16-4         |
| c. field on system s/u reporting .....      | 16-10        | c. name column on string status .....    | 23-2         |
| c. information .....                        | 16-12        | c. name field                            |              |
| <b>c. information screen</b> .....          | <b>16-12</b> | on system s/u customer .....             | 16-3         |
| contact list                                |              | <i>c. status viewing</i> .....           | <i>23-1</i>  |
| adding names .....                          | 16-14        | <i>c. system s/u</i> .....               | <i>16-2</i>  |
| c.l. ck box on system s/u reporting...      | 16-10        | <b>c. system setup screen</b> .....      | <b>16-2</b>  |
| c.l. field on system s/u contact list....   | 16-11        | data defined .....                       | 9-1          |
| c.l. field on system s/u reporting .....    | 16-10        | data extraction ck box on edit user..... | 7-3          |
| c.l. mode area on system s/u reporting 16-  | 10           | data extraction defined.....             | 9-1          |
| 10  |              | data point value .....                   | 23-12        |
| <i>c.l. system s/u</i> .....                | <i>16-11</i> | data set defined.....                    | 24-1         |
| <b>c.l. system setup screen</b> .....       | <b>16-11</b> | data sets area                           |              |
| contact n button                            |              | on detail cell voltage s/u.....          | 24-2         |
| on contacts diagnostics BDS .....           | 29-8         | on trend cell voltage s/u .....          | 24-6         |
| contacts area on system s/u contact list... | 16-12        | database                                 |              |
| <b>contacts diagnostics</b>                 |              | attaching an SQL .....                   | 9-3          |
| <i>for the BDS</i> .....                    | <i>29-8</i>  | automatic updating on install.....       | 4-6          |
| <b>for the BDS screen</b> .....             | <b>29-8</b>  | backup of Access file.....               | 9-3, 23-1    |
| <i>for the MPM</i> .....                    | <i>28-7</i>  | backup of SQL file.....                  | 9-3, 23-1    |
| <b>for the MPM screen</b> .....             | <b>28-7</b>  | <i>d range, selecting</i> .....          | <i>21-1</i>  |
| continuous polling .....                    | 9-2          | d. file, creating a new Access.....      | 4-4          |
| continuous polling interval field           |              | <i>d. file, creating a new SQL</i> ..... | <i>6-2</i>   |
| on communication s/u .....                  | 14-2         | deleting for Access .....                | 4-4          |
| control output contact.....                 | 19-11, 20-19 | <i>deleting for SQL</i> .....            | <i>6-4</i>   |
| critical alarm button                       |              | <i>opening a database</i> .....          | <i>23-1</i>  |
| on contacts diagnostics BDS .....           | 29-8         | <i>saving a database</i> .....           | <i>23-1</i>  |
| on indicator diagnostics BDS .....          | 29-6         | database backup for SQL.....             | 6-8          |
|   |              | database restore for SQL .....           | 6-9          |

|  |              |
|--|--------------|
| date and time fields                             |              |
| on battery s/u general BDS .....                 | 20-2         |
| on battery s/u general MPM .....                 | 19-2         |
| date format.....                                 | 16-5         |
| date, sending using check setting .....          | 18-1         |
| day interval button                              |              |
| on battery s/u test parameters BDS....           | 20-8         |
| on battery s/u test parameters MPM...            | 19-5         |
| day off ck box                                   |              |
| on contact information .....                     | 16-13        |
| DC (discharge current) on DCM                    |              |
| on battery s/u parameters BDS .....              | 20-7         |
| DCM # arrows                                     |              |
| on load module diagnostics BDS .....             | 29-3         |
| DCM addresses verified check box .....           | 31-6         |
| DCM communication error area                     |              |
| on comm error diagnostics BDS .....              | 29-9         |
| DCM n (Cells n - n) button.....                  | 29-10        |
| default button on security .....                 | 16-14        |
| <i>default database</i> .....                    | 4-4          |
| <i>default password</i> .....                    | 4-5          |
| default status view on preferences.....          | 13-2         |
| delay field                                      |              |
| on contact information .....                     | 16-13        |
| on system s/u reporting.....                     | 16-10        |
| <i>delete button</i>                             |              |
| <i>for SQL database</i> .....                    | 6-4          |
| on contact list s/u .....                        | 16-11, 16-12 |
| on system s/u .....                              | 16-1         |
| on workstation s/u .....                         | 6-6          |
| delete data sets ck box on edit user .....       | 7-3          |
| description field on SQL.....                    | 6-2          |
| <i>detail cell resistance s/u</i> .....          | 24-3         |
| <b>detail cell resistance setup screen</b> ..... | 24-3         |
| <i>detail cell voltage s/u</i> .....             | 24-1         |
| <b>detail cell voltage s/u screen</b> .....      | 24-1         |
| detail executive report enable ck box            |              |
| on preferences .....                             | 13-2         |
| <i>detail intercell resistance s/u</i> .....     | 24-4         |
| deviation storage thresholds area                |              |
| on battery s/u discharge MPM .....               | 19-9         |
| diagnostics                                      |              |
| <i>BDS diagnostics</i> .....                     | 29-1         |
| <i>communication error</i> .....                 | 29-9         |
| <b>communication error screen</b> .....          | 29-9         |
| <i>contacts BDS</i> .....                        | 29-8         |
| <b>contacts BDS screen</b> .....                 | 29-8         |
| <i>contacts MPM</i> .....                        | 28-7         |
| <b>contacts MPM screen</b> .....                 | 28-7         |
| d. ck box on edit user .....                     | 7-3          |
| <i>digital port BDS</i> .....                    | 29-6         |
| <b>digital port BDS screen</b> .....             | 29-6         |
| <i>digital port MPM</i> .....                    | 28-5         |
| <b>digital port MPM screen</b> .....             | 28-5         |
| <i>DIP switch BDS</i> .....                      | 29-5         |
| <b>DIP switch BDS screen</b> .....               | 29-5         |
| DIP switch MPM .....                             | 28-4         |
| <b>DIP switch MPM screen</b> .....               | 28-4         |
| <i>indicator MPM</i> .....                       | 28-5, 29-6   |
| <b>indicator MPM screen</b> .....                | 28-5, 29-6   |
| <i>intertier BDS</i> .....                       | 29-8         |
| <b>intertier BDS screen</b> .....                | 29-8         |
| <i>intertier MPM</i> .....                       | 28-8         |
| <b>intertier MPM screen</b> .....                | 28-8         |
| <i>load module BDS</i> .....                     | 29-3         |
| <b>load module BDS screen</b> .....              | 29-3, 29-4   |
| <i>load module MPM</i> .....                     | 28-3         |
| <b>load module MPM screen</b> .....              | 28-3         |
| <i>memory BDS</i> .....                          | 29-7         |
| <b>memory BDS screen</b> .....                   | 29-7         |
| <i>memory MPM</i> .....                          | 28-6         |
| <b>memory MPM screen</b> .....                   | 28-6         |
| <i>MPM diagnostics</i> .....                     | 28-1         |
| <i>power up BDS</i> .....                        | 29-1         |
| <i>power up MPM</i> .....                        | 28-1         |
| <i>R-test in a DCM</i> .....                     | 29-10        |
| <i>self test BDS</i> .....                       | 29-1         |
| <b>self test BDS screen</b> .....                | 29-1         |
| <i>self test MPM</i> .....                       | 28-2         |
| <b>self test MPM screen</b> .....                | 28-2         |
| dial prefix field on comm s/u.....               | 14-1         |
| dial tone status                                 |              |
| on self test diagnostics BDS.....                | 29-2         |
| on self test diagnostics MPM.....                | 28-2         |
| digital input                                    |              |
| <i>battery s/u BDS</i> .....                     | 20-18        |
| <i>battery s/u MPM</i> .....                     | 19-10        |
| <b>battery s/u screen BDS</b> .....              | 20-18        |
| <b>battery s/u screen MPM</b> .....              | 19-10        |
| check settings.....                              | 18-7         |
| <b>check settings screen BDS</b> .....           | 18-7         |
| <b>check settings screen MPM</b> .....           | 18-7         |
| digital output                                   |              |
| <i>battery s/u BDS</i> .....                     | 20-19        |
| <i>battery s/u MPM</i> .....                     | 19-11        |
| <b>battery s/u screen BDS</b> .....              | 20-19        |
| <b>battery s/u screen MPM</b> .....              | 19-11        |
| check settings.....                              | 18-8         |
| check settings screen BDS.....                   | 18-8         |
| <i>digital port</i>                              |              |
| <i>diagnostics BDS</i> .....                     | 29-6         |
| <b>diagnostics BDS screen</b> .....              | 29-6         |
| <i>diagnostics MPM</i> .....                     | 28-5         |
| <b>diagnostics MPM screen</b> .....              | 28-5         |
| DIP switch                                       |              |
| <i>diagnostics BDS</i> .....                     | 29-5         |
| <b>diagnostics BDS screen</b> .....              | 29-5         |
| diagnostics MPM.....                             | 28-4         |
| <b>diagnostics MPM screen</b> .....              | 28-4         |
| direct button on system s/u link .....           | 16-7         |
| direct connection area                           |              |
| on communication s/u .....                       | 14-1         |

|   |              |
|---|--------------|
| disable                                   |              |
| d. alarm reporting ck box on preferences  | 13-2         |
| d. alarm reporting note                   | 23-6         |
| d. auto polling/answering ck box          |              |
| on communication s/u                      | 14-2         |
| d. button                                 |              |
| on battery s/u discharge BDS              | 20-16        |
| on battery s/u discharge MPM              | 19-9         |
| d. email ck box on email s/u              | 15-1         |
| d. sound ck box on preferences            | 13-2         |
| discharge                                 |              |
| <i>battery s/u BDS</i>                    | 20-15        |
| <i>battery s/u MPM</i>                    | 19-8         |
| <b>battery s/u screen BDS</b>             | 20-15        |
| <b>battery s/u screen MPM</b>             | 19-8         |
| check settings                            | 18-6         |
| <b>check settings screen</b>              | 18-6         |
| d. current area                           |              |
| on battery s/u parameters MPM             | 19-4         |
| d. current button on curve option         | 23-20        |
| <i>d. curve</i>                           | 23-19        |
| d. curve button                           | 23-19        |
| <b>d. curve screen</b>                    | 23-19        |
| d. dates area                             |              |
| on all discharges                         | 23-17        |
| on discharge s/u                          | 24-11        |
| d. detection method area                  |              |
| on battery s/u discharge BDS              | 20-16        |
| on battery s/u discharge MPM              | 19-9         |
| d. duration field on string status        | 23-7         |
| <i>d. replay</i>                          | 23-18        |
| d. replay button                          | 23-18        |
| <b>d. replay screen</b>                   | 23-18        |
| d. selections area                        |              |
| on battery s/u discharge BDS              | 20-15        |
| on battery s/u discharge MPM              | 19-8         |
| d. setup area                             |              |
| on summary s/u                            | 24-13        |
| on tech detail summary report s/u         | 26-2         |
| d. time column                            |              |
| on summary s/u                            | 24-13        |
| on tech detail summary report s/u         | 26-2         |
| <i>data</i>                               | 23-15        |
| records                                   | 11-1, 11-2   |
| <i>report s/u</i>                         | 24-10        |
| <b>s/u screen</b>                         | 24-10        |
| display                                   |              |
| d. battery name ck box on preferences     | 13-1         |
| d. customer name ck box on preferences    | 13-1         |
| d. location name ck box on preferences    | 13-1         |
| d. string ID ck box on preferences        | 13-1         |
| duration column                           |              |
| on all discharges                         | 23-17        |
| on discharge s/u                          | 24-11        |
| duration field on summary                 | 23-21        |
| edit button on workstation s/u            | 6-6          |
| <b>edit user screen</b>                   | 7-2          |
| edit users button on security             | 7-1          |
| editing a workstation                     | 6-6          |
| ee memory MPM                             | 11-1, 28-6   |
| eeprom button                             |              |
| on memory diagnostics MPM                 | 28-6         |
| email address field                       |              |
| on contact information                    | 16-13        |
| email alarm event ck box                  |              |
| on contact information                    | 16-13        |
| on system s/u reporting                   | 16-10        |
| email report button                       | 31-15        |
| <i>email s/u</i>                          | 15-1         |
| <b>email setup screen</b>                 | 5-4, 15-1    |
| <i>empty database</i>                     | 4-4          |
| enable ck box                             |              |
| on battery s/u digital output BDS         | 20-19        |
| on battery s/u digital output MPM         | 19-11        |
| on battery s/u discharge BDS              | 20-15        |
| on battery s/u discharge MPM              | 19-8         |
| end field for database range              | 21-1         |
| ending date on summary                    | 23-21        |
| ending time on summary                    | 23-21        |
| entire db button                          | 21-1         |
| entire string ck box on cell memo         | 23-22        |
| equipment owner screen                    | 31-5         |
| error 102 message                         | 17-2         |
| error button                              |              |
| on indicator diagnostics MPM              | 28-5         |
| error codes                               | 32-1         |
| error counts column                       |              |
| on comm error diagnostics BDS             | 29-9         |
| <b>error LED on MPM</b>                   | 28-1         |
| ESMTP area on email s/u                   | 15-1         |
| <b>executive summary report, creating</b> | 26-1, 26-3   |
| existing system ignore button             | 31-2         |
| exit BMDM button on login user            | 7-4          |
| expansion ports on MPM                    | 28-8         |
| export history                            | 23-11        |
| export resistance                         | 23-11        |
| extended intertier avg test ck box        |              |
| on battery s/u test parameters BDS        | 20-9         |
| external contacts                         | 19-10, 20-18 |
| external RAM status                       |              |
| on self test diagnostics BDS              | 29-2         |
| on self test diagnostics MPM              | 28-2         |
| extract all data button                   | 23-4         |
| extract all menu item                     | 23-10        |
| extract data by set time                  |              |
| on communication s/u                      | 14-2         |
| extract data menu item                    | 23-4         |
| extract history menu item                 | 23-10        |



|   |                   |  |                    |
|---|-------------------|--|--------------------|
| extract time field on system s/u link ..... | 16-8              | on battery s/u general BDS .....           | 20-3               |
| extracting using a Central computer .....   | 9-2               | on battery s/u general MPM .....           | 19-3               |
| extraction defined .....                    | 9-1               | on system s/u link .....                   | 16-8               |
| F1 key for help.....                        | 4-8               | <i>general</i>                             |                    |
| <b>F3 key.....</b>                          | <b>23-1</b>       | <i>battery s/u BDS .....</i>               | <b>20-2</b>        |
| <b>facility monitor.....</b>                | <b>8-3</b>        | <i>battery s/u MPM .....</i>               | <b>19-2</b>        |
| fax alarm event ck box                      |                   | <b>battery s/u screen BDS.....</b>         | <b>20-2</b>        |
| on contact information.....                 | 16-13             | <b>battery s/u screen MPM.....</b>         | <b>19-2</b>        |
| on system s/u reporting.....                | 16-10             | general check settings .....               | 18-1               |
| fax number field                            |                   | <b>general check settings screen .....</b> | <b>18-1</b>        |
| on contact information.....                 | 16-13             | get button                                 |                    |
| fax report alarm event .....                | 23-4              | on load test .....                         | 23-17              |
| FC (float current) on DCM                   |                   | on string view.....                        | 23-9               |
| on battery s/u parameters BDS .....         | 20-7              | get current alarms button.....             | 23-13              |
| filename.mdf file .....                     | 4-4               | get current historical alarms button ..... | 23-13              |
| filename_log.ldf file .....                 | 4-4               | get string status menu item .....          | 23-4               |
| firmware upgrade.....                       | <b>30-1</b>       | global alarm disabling.....                | 13-2               |
| on the BDS.....                             | 29-7              | global button                              |                    |
| on the MPM .....                            | 28-6              | on battery s/u float alarms BDS .....      | 20-10              |
| firmware version                            |                   | on battery s/u float alarms MPM .....      | 19-6               |
| on self test diagnostics BDS .....          | 29-2              | graph scale control .....                  | 23-12              |
| on self test diagnostics MPM .....          | 28-2              | graph scaling area                         |                    |
| first available button                      |                   | on all discharges .....                    | 23-16              |
| on system s/u reporting.....                | 16-10             | on detail cell voltage s/u.....            | 24-2               |
| flash memory BDS.....                       | 11-2, 29-7        | on discharge s/u.....                      | 24-10              |
| flash memory button                         |                   | on trend cell voltage s/u .....            | 24-5               |
| on memory diagnostics MPM.....              | 28-6              | on trend overall voltage s/u .....         | 24-8               |
| flash memory MPM.....                       | 11-1, 28-6        | hang up button .....                       | 22-1               |
| flash memory status                         |                   | help screens .....                         | 4-8                |
| on self test diagnostics BDS .....          | 29-2              | hi threshold .....                         | See high threshold |
| float alarms                                |                   | hide alarm reporting window ck box         |                    |
| <i>battery s/u BDS .....</i>                | <b>20-10</b>      | on preferences.....                        | 13-2               |
| <i>battery s/u MPM .....</i>                | <b>19-6</b>       | hide no workstation ck box                 |                    |
| <b>battery s/u screen BDS .....</b>         | <b>20-10</b>      | on preferences.....                        | 13-2               |
| <b>battery s/u screen MPM.....</b>          | <b>19-6</b>       | high cell voltage warning field            |                    |
| check settings.....                         | 18-4              | on battery s/u float alarms BDS .....      | 20-11              |
| <b>check settings screen BDS .....</b>      | <b>18-4, 18-5</b> | on battery s/u float alarms MPM .....      | 19-7               |
| <b>check settings screen MPM .....</b>      | <b>18-4</b>       | high threshold field                       |                    |
| f.a. area on battery s/u float alarms BDS   |                   | on detail cell voltage s/u.....            | 24-1               |
| .....                                       | 20-10             | on detail intercell resistance s/u.....    | 24-4               |
| f.a. area on battery s/u float alarms MPM   |                   | on trend cell voltage s/u .....            | 24-5               |
| .....                                       | 19-6              | on trend overall voltage s/u .....         | 24-8               |
| float charging current probe (FCCP).....    | 19-4              | historical                                 |                    |
| float current area                          |                   | alarm list .....                           | 23-13              |
| on battery s/u parameters MPM .....         | 19-4              | events and remote reporting ...            | 19-8, 20-12        |
| float current multiplier field              |                   | <i>graphs on string view .....</i>         | <b>23-10</b>       |
| on battery s/u general BDS .....            | 20-3              | h. alarm.....                              | 23-14              |
| on battery s/u general MPM .....            | 19-3              | <b>h. alarm screen.....</b>                | <b>23-14</b>       |
| force all strings direct connection ck box  |                   | h. alarm selection .....                   | 23-14              |
| on communication s/u .....                  | 14-2              | <b>h. alarm selection screen.....</b>      | <b>23-14</b>       |
| from address field on email s/u.....        | 15-1              | <i>h. events.....</i>                      | <b>23-5</b>        |
| from domain field on email s/u.....         | 15-1              | h. events button.....                      | 23-5               |
| from name field on email s/u.....           | 15-1              | <b>h. events screen .....</b>              | <b>23-5</b>        |
| FW reset counter                            |                   | h. log area                                |                    |
| on self test diagnostics BDS .....          | 29-2              | on battery s/u test parameters BDS         | 20-8               |
| gateway field                               |                   |  |                    |

- on battery s/u test parameters MPM. 19-5
- number of records.....11-1, 11-2
- hits column on executive summary report 26-2
- HW reset counter
  - on self test diagnostics BDS .....29-2
- import button on SQL ..... 6-4
- inactive ck box on system s/u reporting 16-11
- include
  - i. cell memos ck box
    - on all discharges ..... 23-17
    - on trend cell voltage s/u .....24-5
  - i. ck box
    - on summary s/u..... 24-13
    - on tech detail summ report s/u 26-1, 26-2
  - i. corrective action notes ck box
    - on summary s/u..... 24-13
    - on tech detail summary report s/u ...26-2
  - i. customer info ck box
    - on summary s/u..... 24-12
    - on tech detail summary report s/u ...26-1
  - i. discharge report ck box
    - on summary s/u..... 24-13
    - on tech detail summary report s/u ...26-2
  - i. location info ck box
    - on summary s/u..... 24-12
    - on tech detail summary report s/u ...26-1
  - i. monitor status ck box
    - on summary s/u..... 24-12
    - on tech detail summary report s/u ...26-1
  - i. power ck box
    - on all discharges ..... 23-17
    - on discharge s/u..... 24-10
  - i. probable cause ck box
    - on summary s/u..... 24-13
  - i. probable cause notes ck box
    - on tech detail summary report s/u ...26-2
  - i. status parameters ck box
    - on summary s/u..... 24-12
    - on tech detail summary report s/u ...26-1
  - i. string memos ck box
    - on alarms s/u ..... 24-11
    - on all discharges ..... 23-17
    - on detail cell voltage s/u .....24-2
    - on trend cell voltage s/u .....24-5
    - on trend intertier s/u.....24-9
    - on trend overall voltage s/u .....24-8
- indicator diagnostics MPM ..... 28-5, 29-6**
- indicator diagnostics MPM screen .....29-6**
- individual button
  - on battery s/u float alarms BDS ..... 20-10
  - on battery s/u float alarms MPM ..... 19-6
- information for wizard screen ..... 5-5**
- input alarm level box ..... 20-12

- input level button
  - on battery s/u float alarms BDS ..... 20-12
- input name field
  - on battery s/u digital input BDS ..... 20-18
  - on battery s/u digital input MPM ..... 19-10
- installation date field
  - on system s/u battery .....16-5
- installation requirements ..... 10-1**
- intercell enabled ck box
  - on battery s/u parameters BDS .....20-7
- intercell resistance ..... 23-8**
- intercell resistance screen .....23-9**
- intercell trend analysis..... 23-12
- intertier
  - diagnostics BDS ..... 29-8**
  - diagnostics MPM ..... 28-8**
  - i. diagnostics screen BDS .....29-8**
  - i. diagnostics screen MPM .....28-8**
  - i. resistance alarm level fields
    - on input alarm level box ..... 20-12
  - i. resistance area.....19-4
  - i. resistance ck box
    - on battery s/u parameters MPM ..... 19-4
  - i. resistance input level button
    - on battery s/u float alarms BDS .... 20-12
  - i. voltage column
    - on i. diagnostics BDS .....29-9
    - on i. diagnostics MPM .....28-8
- intertier # column
  - on battery s/u parameters BDS .....20-7
  - on i. diagnostics BDS .....29-9
  - on i. diagnostics MPM .....28-8
- intertier column
  - on cell resistance alarm levels BDS...19-7, 20-11
- IP address
  - IP address field on system s/u link .....16-8
  - on battery s/u general BDS .....20-3
  - on battery s/u general MPM .....19-3
  - on preferences.....13-2
- J3-J7 expansion ports on MPM .....28-8
- last time period button .....21-1
- latch ck box
  - on battery s/u digital output BDS ..... 20-19
  - on battery s/u digital output MPM ..... 19-11
  - on battery s/u discharge BDS ..... 20-15
  - on battery s/u discharge MPM ..... 19-9
  - on battery s/u float alarms BDS ..... 20-12
  - on battery s/u float alarms MPM .....19-8
- LDF file .....4-8
- LED diagnostics**
  - for the BDS ..... 29-6**
  - for the MPM .....28-5**
  - for the MPM screen .....28-5**
- level field
  - on battery s/u discharge BDS ..... 20-16

|  |                   |
|--|-------------------|
| on battery s/u discharge MPM .....         | 19-9              |
| <b>LGS</b>                                 |                   |
| <i>battery s/u BDS</i> .....               | 20-20             |
| <i>battery s/u MPM</i> .....               | 19-12             |
| <b>LGS battery s/u screen BDS</b> .....    | 20-20             |
| <b>LGS battery s/u screen MPM</b> .....    | 19-12             |
| <b>LGS check settings screen</b> .....     | 18-10             |
| <i>link system s/u</i> .....               | 16-7              |
| <b>link system setup screen</b> .....      | 16-7              |
| lo threshold .....                         | See low threshold |
| load agent button .....                    | 31-4              |
| load customer info button .....            | 31-5              |
| load location info button .....            | 31-5              |
| <b>load module</b>                         |                   |
| <i>diagnostics BDS</i> .....               | 29-3              |
| <i>diagnostics MPM</i> .....               | 28-3              |
| <b>I.m. diagnostics BDS screen</b> ..      | 29-3, 29-4        |
| <b>I.m. diagnostics MPM screen</b> .....   | 28-3              |
| load module n button                       |                   |
| on load module diagnostics BDS ....        | 29-3              |
| on load module diagnostics MPM ...         | 28-3              |
| warning .....                              | 28-3, 29-3        |
| load off button                            |                   |
| on load module diagnostics BDS .....       | 29-3              |
| on load module diagnostics MPM .....       | 28-3              |
| load on button                             |                   |
| on load module diagnostics BDS .....       | 29-3              |
| on load module diagnostics MPM .....       | 28-3              |
| load test area                             |                   |
| on battery s/u test parameters MPM ...     | 19-6              |
| local computer                             |                   |
| button on select computer type .....       | 4-6               |
| <i>changing to</i> .....                   | 4-7               |
| <i>connection steps</i> .....              | 10-1              |
| <i>defined</i> .....                       | 8-2               |
| defining .....                             | 4-6               |
| local port                                 |                   |
| <i>connecting to a location</i> .....      | 22-1              |
| local port switch on MPM .....             | 8-2               |
| local switch on BDS .....                  | 8-2               |
| location                                   |                   |
| l. button on preferences .....             | 13-2              |
| l. contact area on system s/u location.    | 16-4              |
| l. contact ck box                          |                   |
| on system s/u reporting .....              | 16-10             |
| l. name column on string status .....      | 23-2              |
| l. name field                              |                   |
| on battery s/u general BDS .....           | 20-2              |
| on battery s/u general MPM .....           | 19-2              |
| on system s/u location .....               | 16-4              |
| <b>l. status viewing</b> .....             | 23-1              |
| <b>l. system setup screen</b> .....        | 16-3              |
| <i>system s/u</i> .....                    | 16-3              |
| lock check box .....                       | 23-12             |
| log threshold                              |                   |
| log threshold for cell voltage field ..... | 19-9              |
| log threshold for current field .....      | 19-9              |
| log threshold for overall voltage field .. | 19-9              |
| logging/R test time mode area              |                   |
| on battery s/u test parameters BDS ....    | 20-8              |
| on battery s/u test parameters MPM ...     | 19-5              |
| <b>login</b>                               |                   |
| and auto logout for user .....             | 7-1               |
| for user .....                             | 7-1               |
| login ID field on edit user .....          | 7-2               |
| <i>password</i> .....                      | 4-5               |
| login button                               |                   |
| on SQL server login .....                  | 6-1               |
| login user name .....                      | 4-5               |
| low cell threshold field                   |                   |
| on all discharges .....                    | 23-16             |
| on discharge s/u .....                     | 24-10             |
| low cell voltage field                     |                   |
| on battery s/u discharge BDS .....         | 20-16             |
| on battery s/u discharge MPM .....         | 19-9              |
| low OV threshold field                     |                   |
| on all discharges .....                    | 23-16             |
| on discharge s/u .....                     | 24-10             |
| low overall voltage field                  |                   |
| on battery s/u discharge BDS .....         | 20-16             |
| on battery s/u discharge MPM .....         | 19-9              |
| low threshold field                        |                   |
| on detail cell voltage s/u .....           | 24-1              |
| on trend overall voltage s/u .....         | 24-8              |
| low threshold values area on discharge s/u |                   |
| .....                                      | 24-10             |
| low thresholds area on all discharges ..   | 23-16             |
| low thresholds field                       |                   |
| on trend cell voltage s/u .....            | 24-5              |
| lowest OV column                           |                   |
| on all discharges .....                    | 23-17             |
| on discharge s/u .....                     | 24-11             |
| lowest OV field on summary .....           | 23-21             |
| LS/D column                                |                   |
| on battery s/u parameters BDS .....        | 20-4              |
| maintenance alarm button                   |                   |
| on contacts diagnostics BDS .....          | 29-8              |
| on indicator diagnostics BDS .....         | 29-6              |
| maintenance alarm ck box                   |                   |
| on battery s/u discharge BDS .....         | 20-16             |
| maintenance ck box                         |                   |
| on battery s/u digital input BDS .....     | 20-18             |
| on battery s/u float alarms BDS .....      | 20-12             |
| maintenance recommendation area            |                   |
| on summary s/u .....                       | 24-13             |
| on tech detail summary report s/u .....    | 26-2              |
| manage button on SQL .....                 | 6-2, 6-3          |
| manage button on workstation s/u .....     | 6-5               |
| maximum discharge time field               |                   |
| on battery s/u discharge BDS .....         | 20-16             |
| on battery s/u discharge MPM .....         | 19-9              |
| MDB file .....                             | 4-8, 9-3, 23-1    |

|   |       |   |       |
|---|-------|---|-------|
| MDF file .....                              | 4-8   | n. field on system s/u link.....            | 16-8  |
| measure points field                        |       | on battery s/u general BDS .....            | 20-3  |
| on battery s/u general MPM .....            | 19-2  | on battery s/u general MPM .....            | 19-3  |
| measure points number field                 |       | network                                     |       |
| on battery s/u general BDS .....            | 20-2  | <i>connecting to a location</i> .....       | 22-1  |
| measure points per string field on system   |       | n. button on system s/u link.....           | 16-8  |
| s/u battery .....                           | 16-5  | n. connection area on communication s/u     |       |
| measured value column                       |       | .....                                       | 14-1  |
| on calibration .....                        | 27-2  | n. port field on system s/u link.....       | 16-8  |
| measurement point column                    |       | network s/u area                            |       |
| on calibration .....                        | 27-2  | on battery s/u general BDS .....            | 20-3  |
| <i>memo</i> .....                           | 23-22 | on battery s/u general MPM .....            | 19-3  |
| memory                                      |       | new button                                  |       |
| <i>diagnostics BDS</i> .....                | 29-7  | on SQL manager.....                         | 6-2   |
| <i>diagnostics MPM</i> .....                | 28-6  | <u>on system setup</u> .....                | 16-1  |
| <b>m. diagnostics screen BDS</b> .....      | 29-7  | new password field                          |       |
| <b>m. diagnostics screen MPM</b> .....      | 28-6  | on system s/u password .....                | 16-14 |
| m. full ck box on system s/u reporting ..   | 16-11 | number of strings field                     |       |
| m. type area                                |       | on system s/u battery .....                 | 16-5  |
| on memory diagnostics MPM.....              | 28-6  | number of temperatures ck box               |       |
| MODBUS .....                                | 8-3   | on battery s/u parameters MPM .....         | 19-4  |
| modem                                       |       | numeric button                              |       |
| <i>connecting to a location</i> .....       | 22-1  | on contact information .....                | 16-13 |
| m. button on system s/u link.....           | 16-8  | on system s/u reporting.....                | 16-9  |
| m. connection area on comm s/u .....        | 14-1  | numerical pager code.....                   | 16-9  |
| m. hang up button.....                      | 22-1  | offline status viewing .....                | 23-1  |
| m. status                                   |       | on 24 hours ck box                          |       |
| on self test diagnostics BDS .....          | 29-2  | on contact information .....                | 16-13 |
| on self test diagnostics MPM .....          | 28-2  | open archive button on preview.....         | 25-2  |
| m. tel number button on preferences..       | 13-2  | open backup selection .....                 | 23-1  |
| monitor configuration field                 |       | open commissioning assistant screen ....    | 31-3  |
| on system s/u string.....                   | 16-6  | open history record button.....             | 23-10 |
| <b>monitor connection type screen</b> ..... | 5-1   | outgoing mail server field on email s/u ... | 15-1  |
| monitor status and priority levels.....     | 23-3  | output name field                           |       |
| monitor status column on string status ...  | 23-2  | on battery s/u digital output BDS .....     | 20-19 |
| most negative cell button                   |       | on battery s/u digital output MPM .....     | 19-11 |
| on system s/u battery .....                 | 16-5  | OV (overall volts) on DCM                   |       |
| most positive cell button                   |       | on battery s/u parameters BDS.....          | 20-7  |
| on system s/u battery .....                 | 16-5  | OV deviation button                         |       |
| MPM current to include in report area .     | 23-17 | on all discharges .....                     | 23-16 |
| MPM file .....                              | 4-8   | on discharge s/u.....                       | 24-10 |
| mpm-db3.mdb file .....                      | 4-4   | OV/I graph ck box                           |       |
| MSDE as a service .....                     | 6-7   | on all discharges .....                     | 23-17 |
| MUX ID field on system s/u link.....        | 16-8  | on discharge s/u.....                       | 24-11 |
| MUX ID on system s/u link .....             | 17-3  | OV@30 column                                |       |
| my outgoing server ck box on email s/u .    | 15-1  | on all discharges .....                     | 23-17 |
| n/c ck box                                  |       | on discharge s/u.....                       | 24-11 |
| on battery s/u digital input BDS .....      | 20-18 | overall voltage button on curve option .    | 23-20 |
| on battery s/u digital input MPM .....      | 19-11 | override preset thresholds button           |       |
| n/o ck box                                  |       | on all discharges .....                     | 23-16 |
| on battery s/u digital input BDS .....      | 20-18 | on detail cell resistance s/u .....         | 24-3  |
| on battery s/u digital input MPM .....      | 19-11 | on detail cell voltage s/u.....             | 24-1  |
| name field on contact information .....     | 16-12 | on detail intercell resistance s/u.....     | 24-4  |
| name field on workstation s/u .....         | 6-6   | on discharge s/u.....                       | 24-10 |
| netmask                                     |       | on trend cell resistance s/u.....           | 24-6  |
|   |       | on trend cell voltage s/u .....             | 24-5  |

|  |                  |
|--|------------------|
| on trend overall voltage s/u .....           | 24-8             |
| page on alarm ck box                         |                  |
| on contact information .....                 | 16-13            |
| on system s/u reporting .....                | 16-9             |
| page report alarm event .....                | 23-4             |
| pager  |                  |
| display code .....                           | 16-9, 16-13      |
| PIN number field                             |                  |
| on contact information .....                 | 16-13            |
| on system s/u reporting .....                | 16-10            |
| parameters                                   |                  |
| <i>battery s/u BDS</i> .....                 | 20-4             |
| <i>battery s/u MPM</i> .....                 | 19-4             |
| check settings .....                         | 18-2             |
| <b>p. battery s/u screen BDS</b> .....       | 20-4             |
| <b>p. battery s/u screen MPM</b> .....       | 19-4             |
| <b>p. check settings screen BDS</b> .....    | 18-2             |
| <b>p. check settings screen MPM</b> .....    | 18-2             |
| parameter alarm button                       |                  |
| on contacts diagnostics MPM .....            | 28-7             |
| <i>password</i>                              |                  |
| administrator .....                          | 4-5              |
| battery s/u .....                            | 4-5              |
| battery setup BDS .....                      | 20-1             |
| battery setup MPM .....                      | 19-1             |
| calibration .....                            | 4-5              |
| changing BDS battery s/u .....               | 20-3             |
| <i>changing for login user</i> .....         | 7-4              |
| changing MPM battery s/u .....               | 19-3             |
| changing system s/u .....                    | 16-14            |
| check settings upload .....                  | 4-5              |
| <i>default</i> .....                         | 4-5              |
| diagnostics .....                            | 4-5              |
| in firmware .....                            | 4-5              |
| p. field                                     |                  |
| on battery s/u general BDS .....             | 20-3             |
| on battery s/u general MPM .....             | 19-3             |
| on edit user .....                           | 7-2              |
| on email s/u .....                           | 15-1             |
| <i>on login user</i> .....                   | 7-4              |
| on wizard .....                              | 6-2              |
| <b>p. system setup screen</b> .....          | 16-14            |
| system s/u .....                             | 4-5, 16-1, 16-14 |
| user .....                                   | 4-5              |
| pause auto polling .....                     | 9-2              |
| PDF file .....                               | 4-8              |
| PDF file for CMS file .....                  | 31-16            |
| peak value column on current alarms ..       | 23-13            |
| percent of accumulative discharge times      |                  |
| on executive summary report .....            | 26-2             |
| percentage above button                      |                  |
| on cell resistance alarm levels BDS ..       | 20-11            |
| on cell resistance alarm levels MPM ..       | 19-7             |
| percentage for warning field                 |                  |
| on battery s/u float alarms BDS .....        | 20-12            |
| on battery s/u float alarms MPM .....        | 19-8             |
| period (days) field                          |                  |
| on battery s/u test parameters BDS ...       | 20-8, 20-9       |
| on battery s/u test parameters MPM ...       | 19-5             |
| period (time) field                          |                  |
| on battery s/u test parameters BDS ...       | 20-8, 20-9       |
| on battery s/u test parameters MPM ...       | 19-5             |
| permissions for users .....                  | 7-1              |
| <i>Peukert</i>                               |                  |
| Peukert number and discharge duration        |                  |
| .....  | 23-7             |
| Peukert number field                         |                  |
| on battery s/u discharge BDS .....           | 20-17            |
| on battery s/u discharge MPM .....           | 19-10            |
| <i>Peukert's equation</i> .....              | 12-1             |
| phone number field on system s/u link ...    | 16-8             |
| PIO status on self test diagnostics BDS ..   | 29-2             |
| polling .....                                | 19-8, 20-12      |
| automatic polling .....                      | 9-2, 14-2        |
| continuous polling .....                     | 9-2              |
| defined .....                                | 9-1              |
| p. area on system s/u link .....             | 16-8             |
| polling/answer port area                     |                  |
| on communication s/u .....                   | 14-1             |
| time done .....                              | 9-2              |
| using a Central computer .....               | 9-2              |
| post power check screen screen .....         | 31-6             |
| <i>preferences</i> .....                     | 13-1             |
| <b>preferences screen</b> .....              | 13-1             |
| preventive maintenance .....                 | 31-15            |
| <b>preview (typical) screen</b> .....        | 25-1             |
| preview button                               |                  |
| on all discharges .....                      | 23-17            |
| on executive summary report .....            | 26-2             |
| <b>preview discharge report screen</b> ..... | 25-1             |
| <i>preview screens</i> .....                 | 25-1             |
| print  |                  |
| p. alarm event ck box                        |                  |
| on system s/u reporting .....                | 16-10            |
| p. button on preview .....                   | 25-2             |
| p. current button on preview .....           | 25-2             |
| p. report alarm event .....                  | 23-4             |
| printer spool settings .....                 | 16-10            |
| priority levels .....                        | 23-2             |
| problem discharge thresholds area            |                  |
| on battery s/u discharge BDS .....           | 20-16            |
| on battery s/u discharge MPM .....           | 19-9             |
| processor status                             |                  |
| on self test diagnostics BDS .....           | 29-2             |
| on self test diagnostics MPM .....           | 28-2             |
| <i>program</i> .....                         | <i>See BMDM</i>  |
| PROM status                                  |                  |
| on self test diagnostics BDS .....           | 29-2             |
| on self test diagnostics MPM .....           | 28-2             |
| R/LS column                                  |                  |

- on battery s/u parameters BDS .....20-4
- range button.....21-1
- reboot firmware BDS**..... **29-1**
- reboot firmware MPM**..... **28-1, 28-2**
- recheck button on check settings ..... 17-1
- refresh rate box on preferences ..... 13-2
- register map .....8-3
- remote reporting ck box
  - on battery s/u float alarms BDS ..... 20-12
  - on battery s/u float alarms MPM ..... 19-8
- remote reporting enable/disable button
  - on battery s/u general BDS .....20-3
  - on battery s/u general MPM ..... 19-3
- remote reporting note .....23-6
- remote reporting screen** ..... **5-3**
- RemoteDemo sample database ..... 4-1
- remove contact button on contact list s/u. 16-12
- replay speed slider ..... 23-17, **23-18**
- report .....26-1
- r. alarm event.....23-4
- r. alarm event screen** ..... **23-4**
- r. all discharges button
  - on battery s/u discharge BDS ..... 20-16
  - on battery s/u discharge MPM ..... 19-9
- r. ck box
  - on battery s/u digital input BDS .... 20-18
  - on battery s/u digital input MPM ... 19-11
- r. generator** ..... **24-1**
- r. interval area
  - on all discharges ..... 23-16
  - on discharge s/u..... 24-10
- r. option note.....23-6
- r. options area
  - on all discharges ..... 23-16
  - on battery s/u discharge BDS ..... 20-16
  - on battery s/u discharge MPM ..... 19-9
  - on discharge s/u..... 24-10
- r. output area
  - on detail cell voltage s/u .....24-2
  - on trend cell voltage s/u .....24-5
  - on trend intertier s/u.....24-9
  - on trend overall voltage s/u .....24-8
- r. problem discharge only button
  - on battery s/u discharge BDS ..... 20-16
  - on battery s/u discharge MPM ..... 19-9
- report form..... 31-15
- report screen in comm asst..... 31-15
- reporting system s/u** ..... **16-9**
- reporting system setup screen** ..... **16-9**
- reports menu item .....24-1
- reset alarm button ..... 23-13
- reset button
  - on battery s/u general BDS .....20-3
  - on battery s/u general MPM ..... 19-3
- reset status on historical alarm list ..... 23-13

- resistance
  - records.....11-1, 11-2
  - resistance test button
    - on indicator diagnostics BDS .....29-6
    - on indicator diagnostics MPM .....28-5
  - resistance test LED.....23-9
  - resistance trend analysis ..... 23-12
  - test area
    - on battery s/u test parameters BDS 20-9
    - on battery s/u test parameters MPM. 19-5
- resistance adjustment ..... 20-9
- RLLS column
  - on battery s/u parameters BDS.....20-4
- RS-232, connecting to a location** ..... **22-1**
- R-test in a DCM diagnostics** ..... **29-10**
- run DCM addr check button ..... 31-6
- run resistance test ck box on edit user ....7-3
- running firmware status
  - on self test diagnostics MPM.....28-2
- sample database** ..... **4-1**
  - ck box on preferences .....13-1
- save
  - save archive button on preview .....25-2
  - save as selection.....23-1
  - save button on select database range21-1
  - save history record button ..... 23-10
- save agent button .....31-4
- save and connect button.....31-2
- save report button ..... 31-15
- scan button
  - on indicator diagnostics BDS .....29-6
  - on indicator diagnostics MPM .....28-5
- schedule area on contact information.. 16-13
- security privileges area on edit user..... 7-2
- security s/u..... 7-1
- security screen** ..... **7-1**
- select**
  - database range** ..... **21-1**
  - DCM** ..... **29-10**
  - s. computer type screen** ..... **4-2, 4-3, 4-6**
  - s. contact area
    - on contacts diagnostics BDS .....29-8
    - on contacts diagnostics MPM .....28-7
  - s. database range screen**.....**21-1**
  - s. DCM screen**..... **29-10**
  - s. historical alarms button ..... 23-14
  - s. indicator area
    - on indicator diagnostics BDS .....29-6
    - on indicator diagnostics MPM .....28-5
  - s. load module area
    - on load module diagnostics BDS.....29-3
    - on load module diagnostics MPM....28-3
  - s. number of modems screen** ..... **5-2**
  - s. printer screen** ..... **5-4**
  - s. serial port screen**..... **5-1**

|   |                 |
|---|-----------------|
| selected dates button                         |                 |
| on historical alarm selection .....           | 23-14           |
| selected types button                         |                 |
| on historical alarm selection .....           | 23-14           |
| <i>self test diagnostics BDS</i> .....        | <b>29-1</b>     |
| <b>self test diagnostics BDS screen</b> ..... | <b>29-1</b>     |
| <i>self test diagnostics MPM</i> .....        | <b>28-2</b>     |
| <b>self test diagnostics MPM screen</b> ..... | <b>28-2</b>     |
| send  |                 |
| s. battery s/u button BDS .....               | 20-1            |
| s. battery s/u button MPM .....               | 19-1            |
| s. email to area on system s/u reporting      |                 |
| .....   | 16-10           |
| s. fax to area on system s/u reporting...     | 16-10           |
| s. network config button                      |                 |
| on battery s/u general .....                  | 17-2            |
| on battery s/u general BDS .....              | 20-3            |
| on battery s/u general MPM .....              | 19-3            |
| s. time button on check settings .....        | 17-1            |
| send battery setup screen .....               | 31-6            |
| sequential/ack button                         |                 |
| on system s/u reporting .....                 | 16-11           |
| serial numbers in comm asst .....             | 31-7            |
| server login user name .....                  | 4-5             |
| <i>server with BMDM</i> .....                 | <b>4-1</b>      |
| service computer                              |                 |
| button on select computer type .....          | 4-6             |
| <i>changing to</i> .....                      | 4-7             |
| <i>connection</i> .....                       | 10-3, 17-3      |
| <i>defined</i> .....                          | 8-3             |
| defining .....                                | 4-6             |
| note .....                                    | 6-7             |
| <b>service manager screen</b> .....           | <b>6-7</b>      |
| service setting                               |                 |
| for BMDM .....                                | 6-7             |
| for MSDE .....                                | 6-7             |
| servicemanager.exe .....                      | 6-7             |
| <b>set</b>                                    |                 |
| set BDS default values button                 |                 |
| on battery s/u general BDS .....              | 20-3            |
| <b>set dial prefix screen</b> .....           | <b>5-2</b>      |
| <b>set modem port screen</b> .....            | <b>5-2</b>      |
| <b>set station phone number screen</b> .....  | <b>5-3</b>      |
| <b>set temperature format screen</b> .....    | <b>5-4</b>      |
| <b>set workstation screen</b> .....           | <b>6-6</b>      |
| <i>setting up a new system</i> .....          | <b>16-1</b>     |
| <i>setup check settings</i> .....             | <b>18-1</b>     |
| setup name on summary s/u .....               | 24-12           |
| show  |                 |
| s. all alarm events button .....              | 23-5            |
| s. average trend ck box                       |                 |
| on detail cell resistance s/u .....           | 24-3            |
| on detail cell voltage s/u .....              | 24-2            |
| on trend cell resistance s/u .....            | 24-6            |
| on trend cell voltage s/u .....               | 24-5            |
| s. percent ck box                             |                 |
| on summary s/u .....                          | 24-13           |
| on tech detail summary report s/u ...         | 26-1            |
| s. status screen ck box on preferences        | 13-2            |
| s. string status color ck box                 |                 |
| on preferences .....                          | 13-2            |
| s. value ck box                               |                 |
| on summary s/u .....                          | 24-13           |
| on tech detail summary report s/u ...         | 26-1            |
| shunt value field                             |                 |
| on battery s/u general BDS .....              | 20-2            |
| on battery s/u general MPM .....              | 19-3            |
| <i>software</i> .....                         | <i>See BMDM</i> |
| sound alarm ck box                            |                 |
| on system s/u reporting .....                 | 16-10           |
| spool data format .....                       | 16-10           |
| spool settings .....                          | 16-10           |
| <b>SQL</b>                                    |                 |
| connection wizard .....                       | 6-2             |
| <i>creating a database</i> .....              | 6-2             |
| database backup .....                         | 9-3, 23-1       |
| database manager .....                        | 6-3             |
| <i>deleting a database</i> .....              | 6-4             |
| <i>deleting a database connection</i> .....   | 6-4             |
| <i>importing an Access database</i> .....     | 6-3             |
| install note .....                            | 4-6             |
| <i>log in to a database</i> .....             | 6-1             |
| <i>overview</i> .....                         | 4-1             |
| <i>selecting a database</i> .....             | 6-1             |
| SQL connection field .....                    | 6-3             |
| <b>SQL connection wizard screen</b> ..        | 6-2, 6-3        |
| <b>SQL database manager screen</b> ..         | 6-2, 6-3        |
| <b>SQL server login screen</b> .....          | 6-1, 6-3        |
| SQL server to connect to field .....          | 6-2             |
| <i>workstation assigning</i> .....            | 6-5             |
| <b>SQL backup screen</b> .....                | <b>6-8</b>      |
| SQL database backup .....                     | 6-8             |
| SQL database restore .....                    | 6-9             |
| <b>SQL restore screen</b> .....               | <b>6-9</b>      |
| <b>SQL server login screen</b> .....          | <b>6-9</b>      |
| SRAM memory BDS .....                         | 11-2, 29-7      |
| SS# column                                    |                 |
| on battery s/u parameters BDS .....           | 20-4            |
| standard button                               |                 |
| on battery s/u test parameters BDS ...        | 20-9            |
| on battery s/u test parameters MPM ...        | 19-6            |
| standard ck box                               |                 |
| on all discharges .....                       | 23-17           |
| on discharge s/u .....                        | 24-10           |
| start   |                 |
| s. button on load test .....                  | 23-17           |
| s. button on string view .....                | 23-9            |
| s. cell # field on system s/u string .....    | 16-7            |
| s. date/time column                           |                 |
| on all discharges .....                       | 23-17           |

|  |              |  |                  |
|--|--------------|--|------------------|
| on discharge s/u.....                        | 24-11        | <i>s. view</i> .....                             | 23-6             |
| s. field for database range .....            | 21-1         | <i>s. view cell resistance</i> .....             | 23-8             |
| s. new page ck box                           |              | <b>s. view cell resistance screen</b> .....      | <b>23-8</b>      |
| on summary s/u.....                          | 24-13        | <i>s. view cell voltage</i> .....                | 23-7             |
| on tech detail summ report s/u 26-1, 26-2    |              | <b>s. view cell voltage screen</b> .....         | <b>23-7</b>      |
| s. time field                                |              | <i>s. view intercell resistance</i> .....        | 23-8             |
| on contact information.....                  | 16-13        | <b>s. view intercell resistance screen</b> ..... | <b>23-9</b>      |
| starting date on summary .....               | 23-21        | s. view network grouping area .....              | 13-2             |
| starting time on summary .....               | 23-21        | s. view screen defined.....                      | 3-1              |
| station phone number field                   |              | <i>status</i> .....                              | 23-2             |
| on battery s/u general BDS .....             | 20-2         | string # field                                   |                  |
| on battery s/u general MPM .....             | 19-2         | on battery s/u digital output BDS ..             | 20-19            |
| status (string) and priority levels.....     | 23-2         | on battery s/u parameters MPM .....              | 19-4             |
| status color alarm box                       |              | on system s/u string.....                        | 16-7             |
| on preferences .....                         | 13-2         | <i>system s/u</i> .....                          | <b>16-6</b>      |
| status color normal box                      |              | string current amps field.....                   | 31-11            |
| on preferences .....                         | 13-2         | strings in alarm menu item .....                 | 23-3             |
| status defined.....                          | 9-1          | strings in discharge menu item .....             | 23-3             |
| status flush buffer interval field           |              | strings in inactive menu item .....              | 23-3             |
| on preferences .....                         | 13-2         | <i>summary</i> .....                             | 23-5, 23-21      |
| status LED on DCM.....                       | 29-9         | <i>report s/u</i> .....                          | 24-12            |
| status parameters area                       |              | <b>s. battery sites screen</b> .....             | <b>23-5</b>      |
| on summary s/u.....                          | 24-13        | s. button  |                  |
| on tech detail summary report s/u .....      | 26-2         | on all discharges or load test .....             | 23-21            |
| <i>status, viewing on and off line</i> ..... | 23-1         | on string status .....                           | 23-5             |
| stop button                                  |              | <b>s. discharges screen</b> .....                | <b>23-21</b>     |
| on load test .....                           | 23-17        | <b>s. setup screen</b> .....                     | <b>24-12</b>     |
| on string view.....                          | 23-9         | synchronizing defined.....                       | 17-1             |
| string                                       |              | <i>synchronizing using check settings</i> .....  | 17-1             |
| <u>changing name</u> .....                   | 16-1         | system setup.....                                | 16-1             |
| s. access area on edit user .....            | 7-3          | <i>battery</i> .....                             | 16-4             |
| <b>s. access form screen</b> .....           | <b>7-3</b>   | <b>battery screen</b> .....                      | <b>16-4</b>      |
| s. capacity field on system s/u string ..    | 16-7         | <i>contact list</i> .....                        | 16-11            |
| s. ID column on string status.....           | 23-2         | <b>contact list screen</b> .....                 | <b>16-11</b>     |
| <b>s. in alarm screen</b> .....              | <b>23-3</b>  | <i>customer</i> .....                            | 16-2             |
| <i>s. memo</i> .....                         | 23-22        | <b>customer screen</b> .....                     | <b>16-2</b>      |
| s. memo menu item .....                      | 23-22        | <i>link</i> .....                                | 16-7             |
| <b>s. memo screen</b> .....                  | <b>23-22</b> | <b>link screen</b> .....                         | <b>16-7</b>      |
| s. memos ck box on discharge s/u ...         | 24-10        | <i>location</i> .....                            | 16-3             |
| s. name column on string status .....        | 23-2         | <b>location screen</b> .....                     | <b>16-3</b>      |
| s. name field                                |              | password.....                                    | 4-5, 16-14       |
| on battery s/u general BDS .....             | 20-2         | <b>password screen</b> .....                     | <b>16-14</b>     |
| on battery s/u general MPM .....             | 19-2         | <i>reporting</i> .....                           | 16-9             |
| on summary .....                             | 23-21        | <b>reporting screen</b> .....                    | <b>16-9</b>      |
| on system s/u string.....                    | 16-6         | <i>string</i> .....                              | 16-6             |
| s. name of MPM area                          |              | <b>string screen</b> .....                       | <b>16-6</b>      |
| on system s/u string.....                    | 16-7         | system setup ck box on edit user .....           | 7-2              |
| s. needs to be set up message .....          | 17-1         | <u>system setup password</u> .....               | 16-1             |
| s. status box on string view .....           | 23-8         | <i>workstation</i> .....                         | 16-1, 16-2       |
| s. status column on string status .....      | 23-2         | <b>workstation screen</b> .....                  | <b>6-5, 16-2</b> |
| s. status display area.....                  | 13-1         | T1 and T2 columns                                |                  |
| <b>s. status screen</b> .....                | <b>23-2</b>  | on battery s/u parameters BDS.....               | 20-4             |
| s. status screen defined .....               | 3-1          | tabular ck box                                   |                  |
| <i>s. status viewing</i> .....               | 23-1         | on all discharges .....                          | 23-17            |
| <b>s. system s/u screen</b> .....            | <b>16-6</b>  | on discharge s/u .....                           | 24-11            |
|  |              | TAP telephone number .....                       | 16-11            |



|   |                    |
|---|--------------------|
| technician detail summary report .....                                    | 26-3               |
| <i>technician detail summary rpt s/u</i> .....                            | 26-1               |
| <b>technician detail summary rpt s/u screen</b><br>.....                  | <b>26-1</b>        |
| <b>technician report discharges area screen</b><br>.....                  | <b>26-2</b>        |
| telco mux enable/disable button<br>on battery s/u general BDS .....       | 20-3               |
| telephone .....   | See phone          |
| temperature format area<br>on preferences .....                           | 13-1               |
| test button on email s/u .....  | 15-1               |
| <i>test email</i> .....   | 15-2               |
| <b>test email screen</b> .....  | <b>15-2</b>        |
| test parameters<br><i>battery s/u BDS</i> .....                           | 20-8               |
| <i>battery s/u MPM</i> .....  | 19-5               |
| check settings .....  | 18-3               |
| <b>t.p. battery s/u screen BDS</b> .....                                  | <b>20-8</b>        |
| <b>t.p. battery s/u screen MPM</b> .....                                  | <b>19-5</b>        |
| <b>t.p. check settings screen</b> .....                                   | <b>18-3</b>        |
| <i>text editor</i> .....  | 4-7                |
| thermal runaway<br>battery s/u BDS .....                                  | 20-13              |
| <b>thermal runaway</b><br><b>battery s/u screen BDS</b> .....             | <b>20-13</b>       |
| Thermal Runaway .....   | 20-13              |
| threshold column<br>on cell resistance alarm levels BDS... 19-7,<br>20-11 |                    |
| threshold deviation area<br>on summary s/u .....                          | 24-13              |
| on tech detail summary report s/u .....                                   | 26-1               |
| time<br>sending using check setting .....                                 | 18-1               |
| t. button on all discharges .....   | 23-16              |
| t. button on discharge s/u .....  | 24-10              |
| t. difference spin box<br>on battery s/u general BDS .....                | 20-3               |
| on battery s/u general MPM .....  | 19-3               |
| t. interval column<br>on executive summary report .....                   | 26-2               |
| t. on field on contact information .....                                  | 16-13              |
| t. out field on communication s/u .....                                   | 14-1               |
| t. to go (TTG) field .....  | 23-7               |
| t. to go area<br>on battery s/u discharge BDS .....                       | 20-17              |
| on battery s/u discharge MPM .....  | 19-10, 20-17       |
| timeout/bad data retry field<br>on communication s/u .....                | 14-2               |
| to email address field on test email .....                                | 15-2               |
| to name field on test email .....   | 15-2               |
| <b>trend</b><br><i>t. analysis</i> .....                                  | 23-12              |
| <i>t. cell resistance s/u</i> .....                                       | 24-6               |
| <b>t. cell resistance setup screen</b> .....                              | <b>24-6</b>        |
| <i>t. cell voltage s/u</i> .....  | 24-5               |
| <b>t. cell voltage screen</b> .....                                       | <b>23-12</b>       |
| <b>t. cell voltage setup screen</b> .....                                 | <b>24-5</b>        |
| <i>t. intercell resistance s/u</i> .....                                  | 24-7               |
| <i>t. intertier s/u</i> .....   | 24-9               |
| <b>t. intertier setup screen</b> .....                                    | <b>24-9</b>        |
| <i>t. overall voltage s/u</i> .....                                       | 24-8               |
| <i>t. temperature s/u</i> .....   | 24-9               |
| <b>t. temperature setup screen</b> .....                                  | <b>24-9</b>        |
| trigger name field<br>on battery s/u digital output BDS .....             | 20-19              |
| on battery s/u digital output MPM .....                                   | 19-11              |
| TTG field for discharge .....   | 19-10, 20-17, 23-7 |
| undo zoom .....   | 23-6               |
| update date/time column<br>on string status .....                         | 23-2, 23-3         |
| upgrade firmware menu item .....  | 30-1               |
| <i>upgrade MPM and BDS</i> .....  | 30-1               |
| upload<br>and network parameters .....                                    | 17-2               |
| u. button on ck. settings .....   | 17-1, 17-3         |
| with local or service computer .....                                      | 17-2               |
| use preset thresholds button<br>on all discharges .....                   | 23-16              |
| on detail cell voltage s/u .....  | 24-1               |
| on discharge s/u .....  | 24-10              |
| on trend cell voltage s/u .....   | 24-5               |
| on trend overall voltage s/u .....  | 24-8               |
| use Windows authentication check box .....                                | 4-5                |
| <b>user</b><br><i>access rights</i> .....                                 | 7-1                |
| login .....   | 7-1                |
| <i>password</i> .....   | 4-5                |
| <b>u. access rights screen</b> .....                                      | <b>7-2, 7-3</b>    |
| u. defined button on security .....                                       | 7-1                |
| u. name field on edit user .....  | 7-2                |
| u. name field on SQL .....  | 6-2                |
| user name at login .....  | 4-5                |
| user password .....   | 4-5                |
| view<br>v. alarm button .....   | 23-13              |
| v. discharge button .....   | 23-15              |
| v. historical alarm button .....  | 23-14              |
| v. intercell resistance button .....                                      | 23-6               |
| v. load test button .....   | 23-15              |
| v. resistance button .....  | 23-6               |
| v. voltage button .....   | 23-6               |
| viewing status offline and real time .....                                | 23-1               |
| voltage mode button<br>on battery s/u discharge BDS .....                 | 20-16              |
| on battery s/u discharge MPM .....  | 19-9               |
| voltage trend analysis .....  | 23-12              |
| wait time field<br>on system s/u reporting .....                          | 16-11              |
| warnings ck box   |                    |

|                                   |             |
|-----------------------------------|-------------|
| on system s/u reporting.....      | 16-11       |
| WAV file.....                     | 4-8         |
| <b>web report generator</b> ..... | <b>26-1</b> |
| <b>wizard</b>                     |             |
| <i>for Access database</i> .....  | 5-5         |
| for SQL connection.....           | 6-2         |
| password.....                     | 6-2         |
| <b>w. screen</b> .....            | <b>5-5</b>  |
| <b>workstation</b>                |             |
| assigning.....                    | 6-5         |
| <i>assigning for SQL</i> .....    | 6-5         |

|                                      |                   |
|--------------------------------------|-------------------|
| editing.....                         | 6-6               |
| <b>system s/u</b> .....              | <b>16-1, 16-2</b> |
| system s/u screen.....               | 16-2              |
| w. field on customer s/u.....        | 6-6               |
| w. field on system s/u customer..... | 16-3              |
| <b>w. setup screen</b> .....         | <b>6-6</b>        |
| <b>w. system s/u screen</b> .....    | <b>6-5</b>        |
| ZIP file.....                        | 4-8, 9-3, 23-1    |
| zoom on bar graph.....               | 23-6              |
| ZRF file.....                        | 4-8, 25-2         |